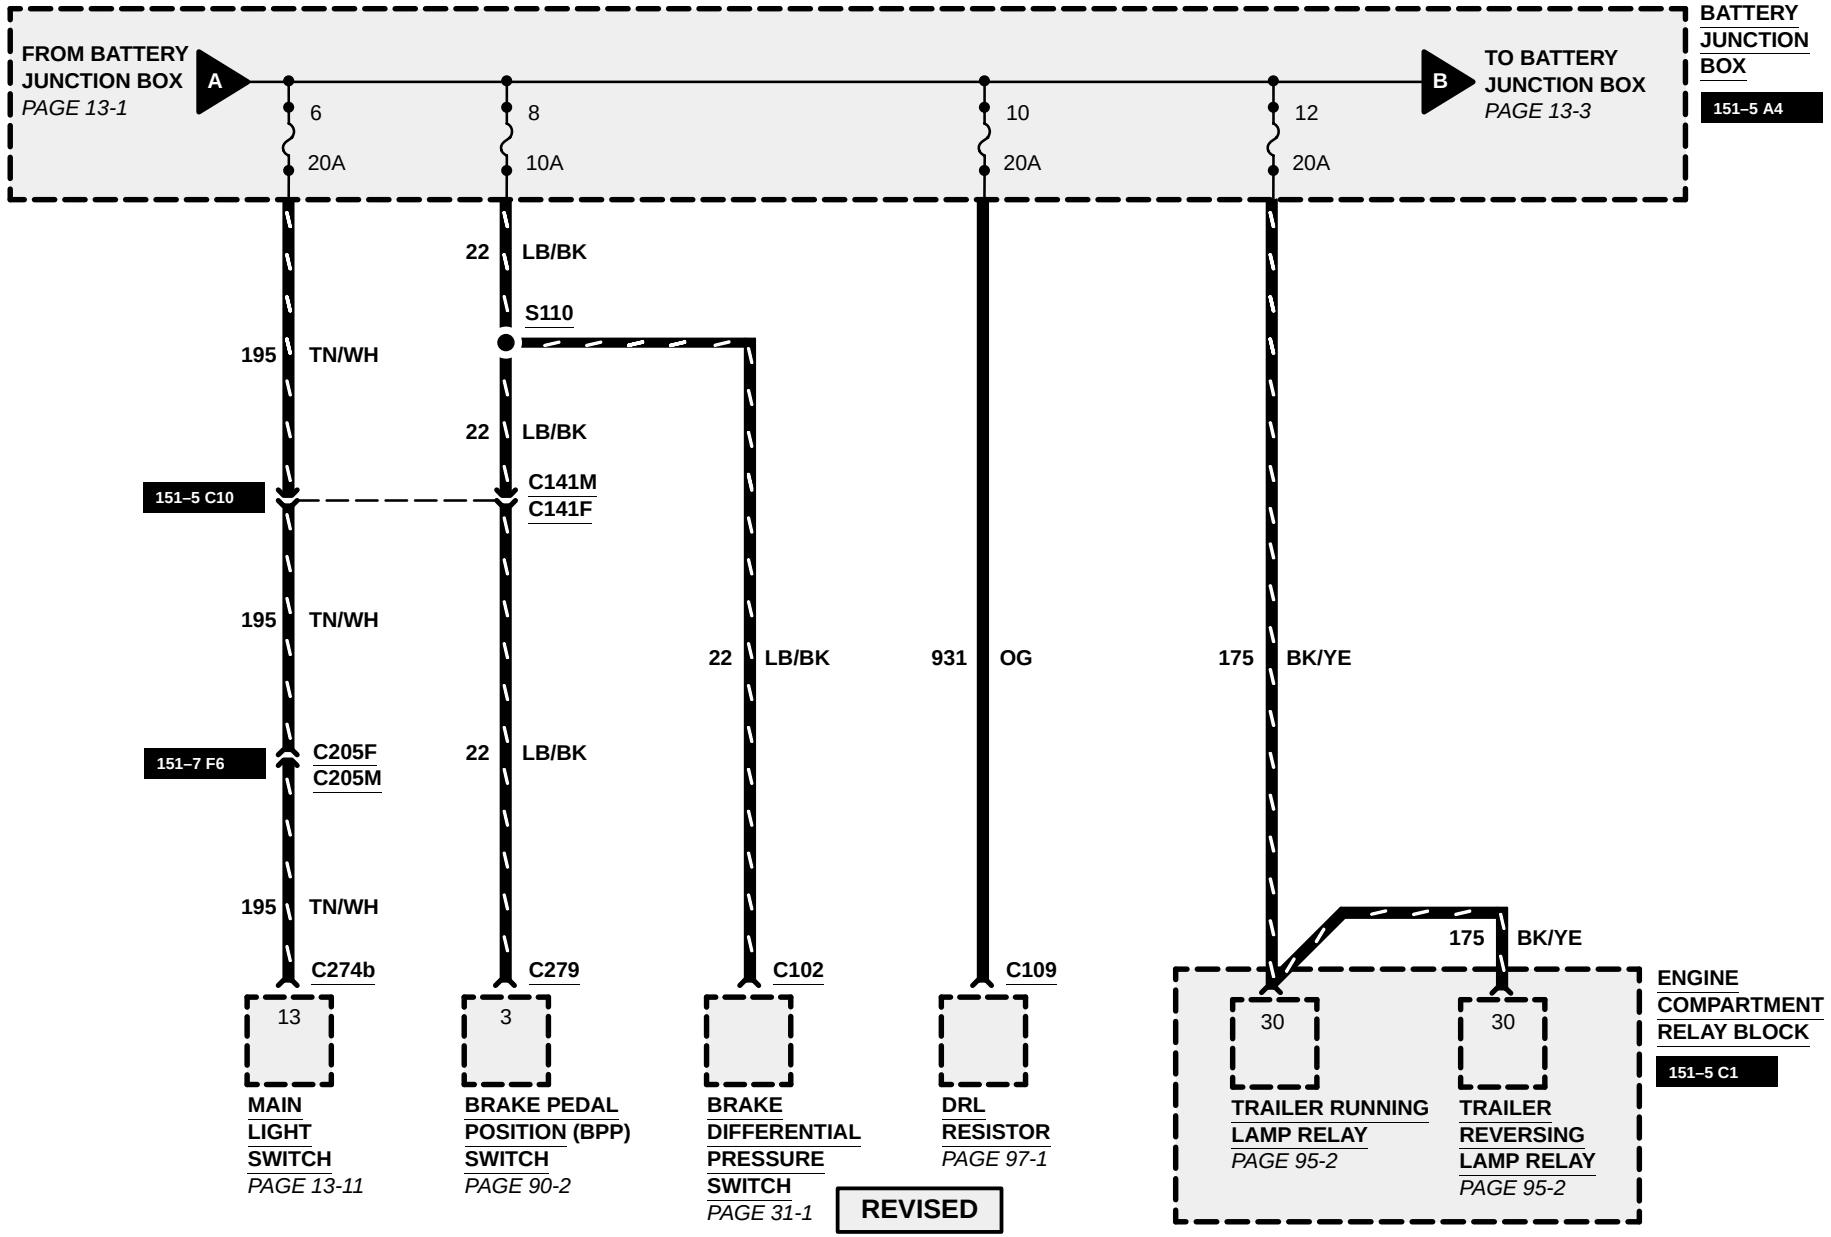
FROM BATTERY JUNCTION BOX
PAGE 13-1
A
B
TO BATTERY JUNCTION BOX
PAGE 13-3
BATTERY JUNCTION BOX
151–5 A4
6
20A
8
10A
10
20A
12
20A
22 LB/BK
S110
195 TN/WH
22 LB/BK
151–5 C10
C141M
C141F
195 TN/WH
22 LB/BK
931 OG
175 BK/YE
151–7 F6
C205F
C205M
22 LB/BK
195 TN/WH
175 BK/YE
C274b
C279
C102
C109
13
3
30
30
MAIN LIGHT SWITCH
PAGE 13-11
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-2
BRAKE DIFFERENTIAL PRESSURE SWITCH
PAGE 31-1
DRL RESISTOR
PAGE 97-1
TRAILER RUNNING LAMP RELAY
PAGE 95-2
TRAILER REVERSING LAMP RELAY
PAGE 95-2
ENGINE COMPARTMENT RELAY BLOCK
151–5 C1
REVISED