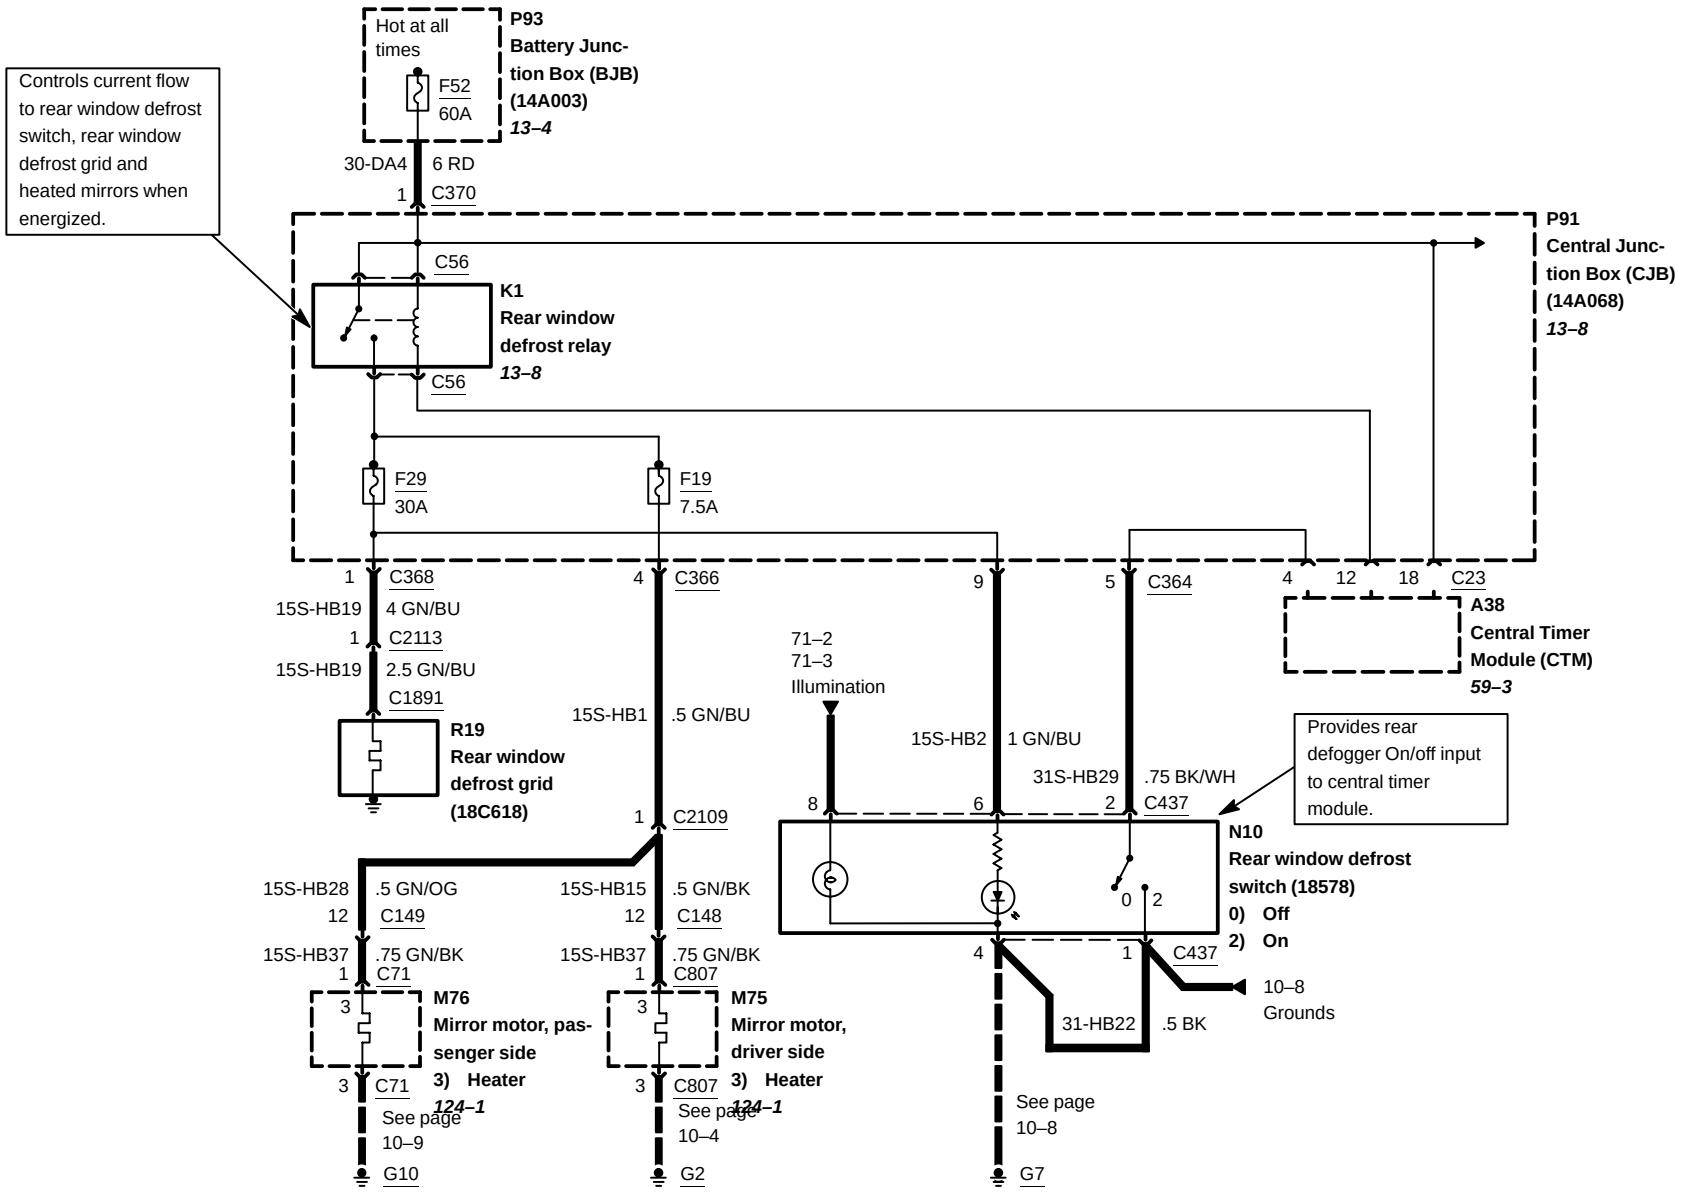
Controls current flow to rear window defrost switch, rear window defrost grid and heated mirrors when energized.
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–4
F52
60A
30-DA4
6 RD
1
C370
C56
K1
Rear window defrost relay
13–8
C56
P91
Central Junction Box (CJB)
(14A068)
13–8
F29
30A
F19
7.5A
1
C368
15S-HB19
4 GN/BU
1
C2113
15S-HB19
2.5 GN/BU
C1891
R19
Rear window defrost grid
(18C618)
4
C366
15S-HB1
.5 GN/BU
1
C2109
9
5
C364
4
12
18
C23
A38
Central Timer Module (CTM)
59–3
71–2
71–3
Illumination
15S-HB2
1 GN/BU
31S-HB29
.75 BK/WH
8
6
2
C437
Provides rear defogger On/off input to central timer module.
N10
Rear window defrost switch (18578)
0) Off
2) On
0
2
15S-HB28
.5 GN/OG
12
C149
15S-HB37
.75 GN/BK
1
C71
15S-HB15
.5 GN/BK
12
C148
15S-HB37
.75 GN/BK
1
C807
4
1
C437
10–8
Grounds
31-HB22
.5 BK
3
M76
Mirror motor, passenger side
3) Heater
124–1
3
C71
See page 10–9
G10
3
M75
Mirror motor, driver side
3) Heater
124–1
3
C807
See page 10–4
G2
See page 10–8
G7