53-1 HEATER

2002 ESCORT

For diagnostic information, refer to Section 412-02 of the Workshop Manual.

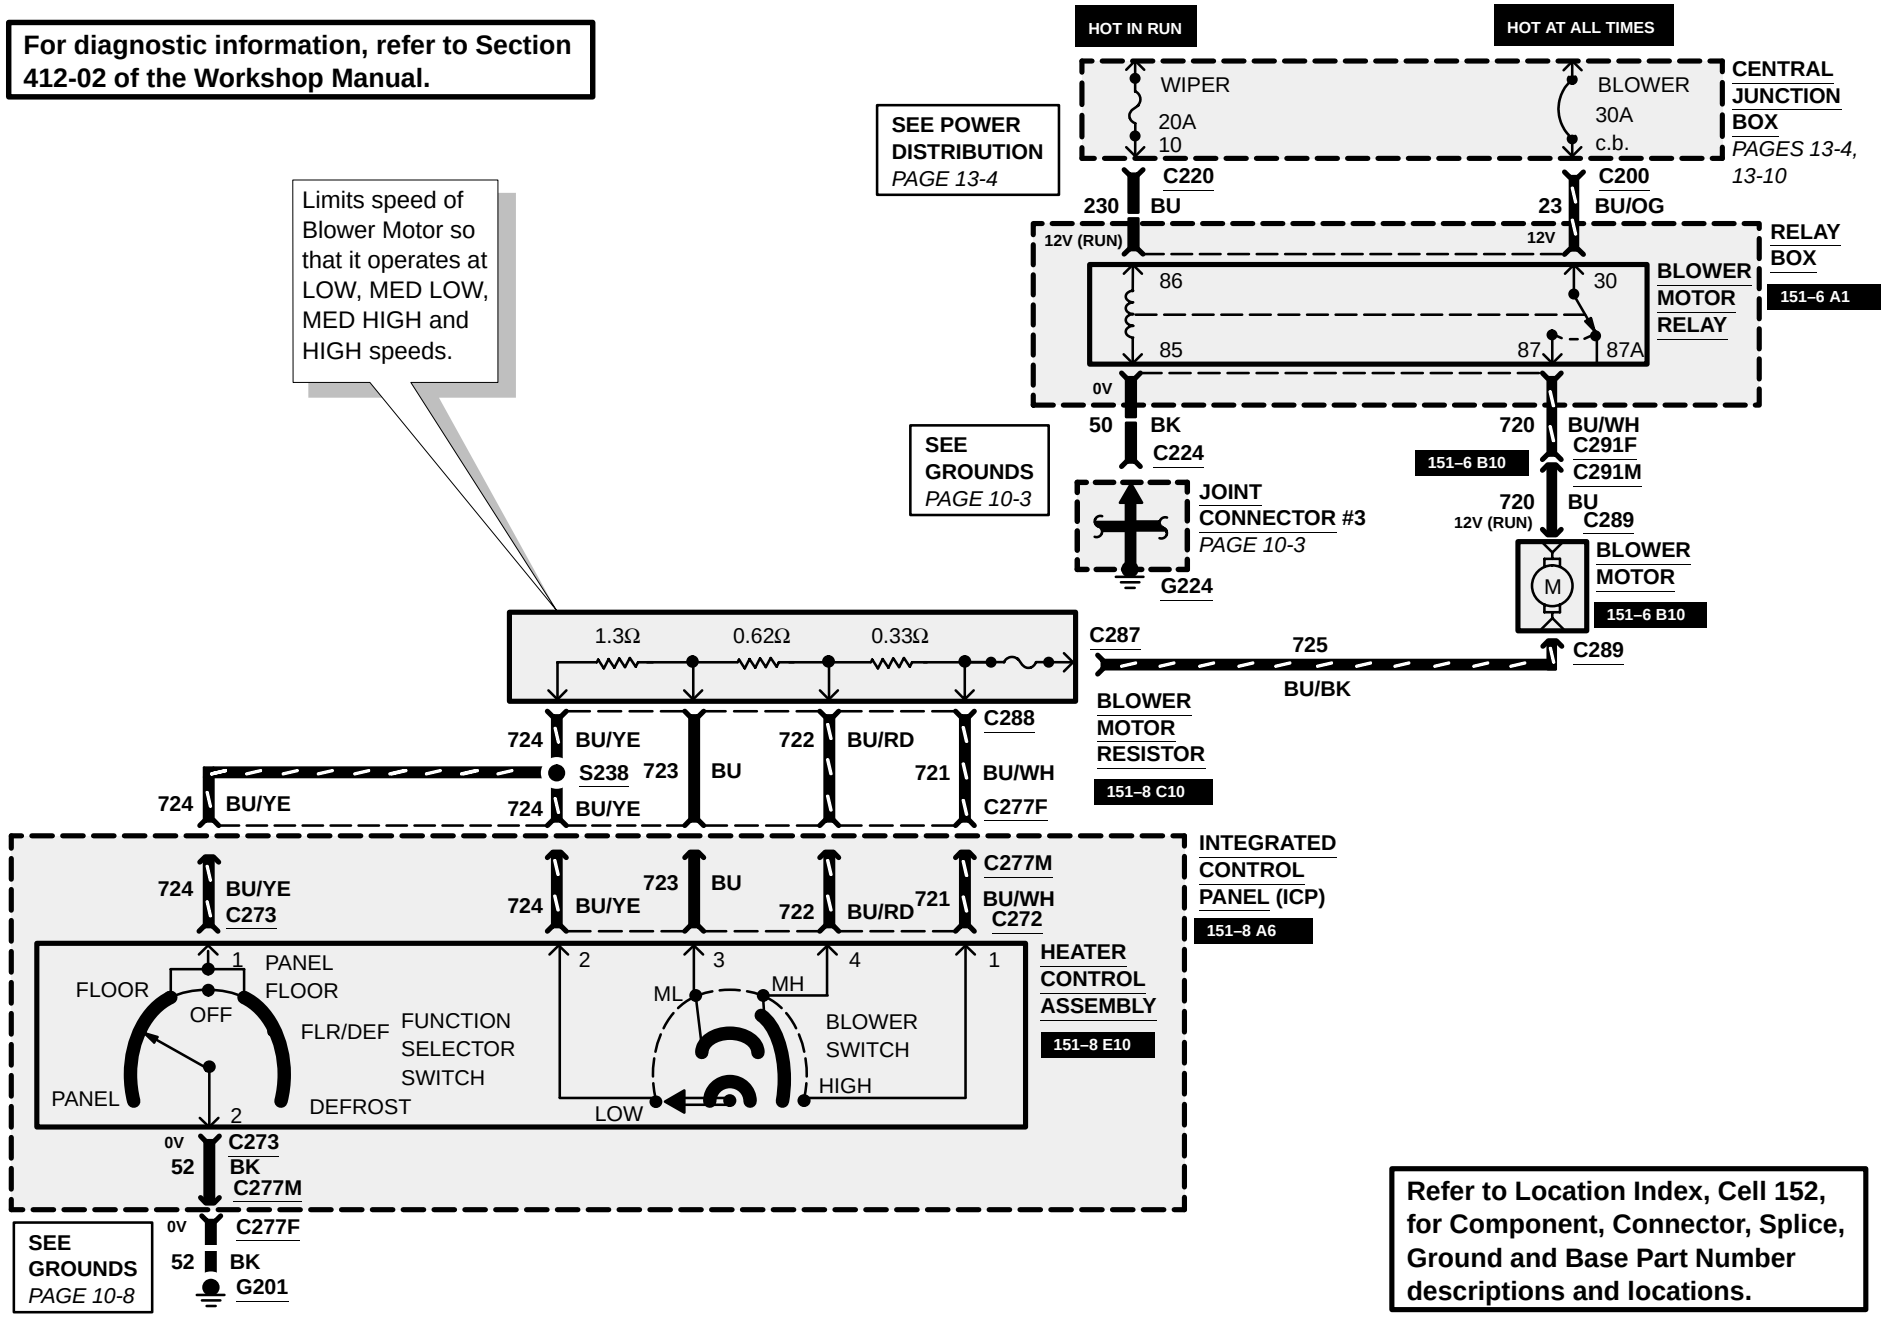

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.