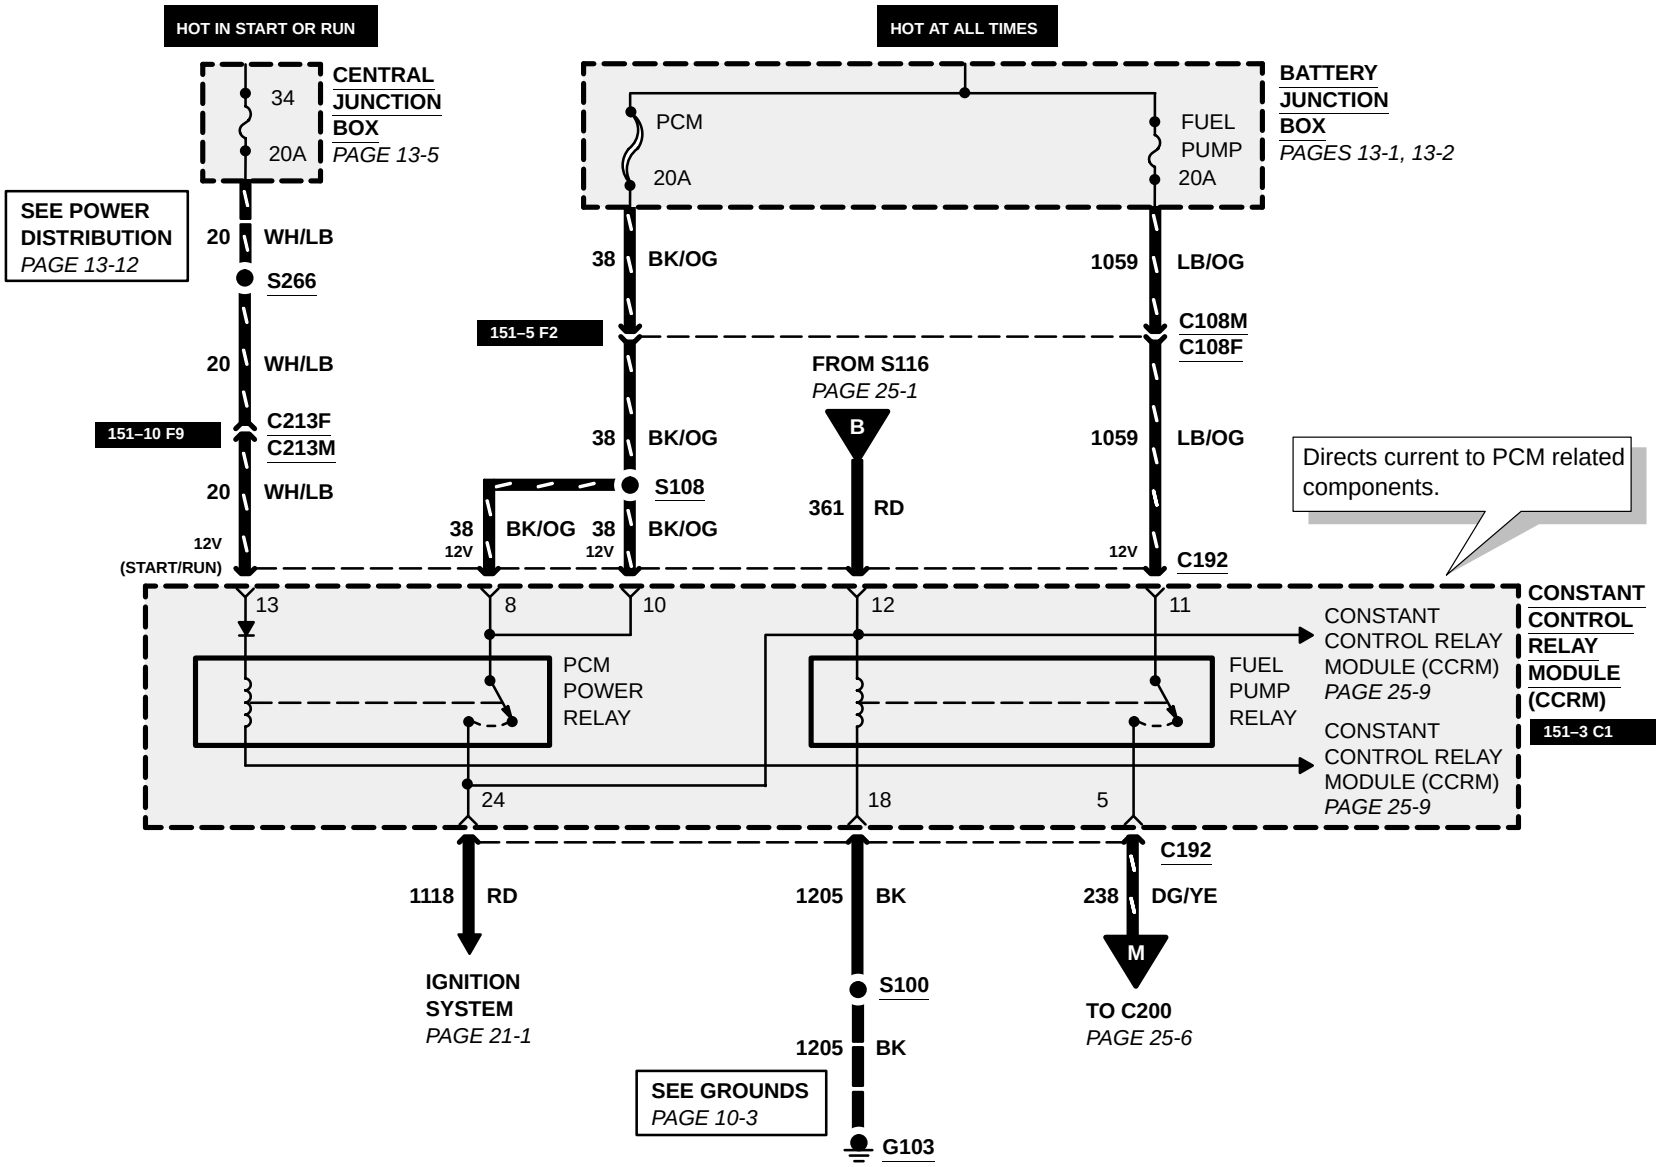
HOT IN START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-5
34
20A
PCM
20A
FUEL PUMP
20A
BATTERY JUNCTION BOX
PAGES 13-1, 13-2
SEE POWER DISTRIBUTION
PAGE 13-12
20 WH/LB
S266
38 BK/OG
1059 LB/OG
151–5 F2
C108M
C108F
20 WH/LB
FROM S116
PAGE 25-1
151–10 F9
C213F
C213M
38 BK/OG
B
1059 LB/OG
20 WH/LB
S108
361 RD
38 BK/OG 38 BK/OG
12V
12V
12V
12V
(START/RUN)
C192
Directs current to PCM related components.
13
8
10
12
11
CONSTANT CONTROL RELAY MODULE (CCRM)
PCM POWER RELAY
FUEL PUMP RELAY
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 25-9
151–3 C1
CONSTANT CONTROL RELAY MODULE (CCRM)
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 25-9
24
18
5
C192
1118 RD
1205 BK
238 DG/YE
M
IGNITION SYSTEM
PAGE 21-1
S100
TO C200
PAGE 25-6
1205 BK
SEE GROUNDS
PAGE 10-3
G103