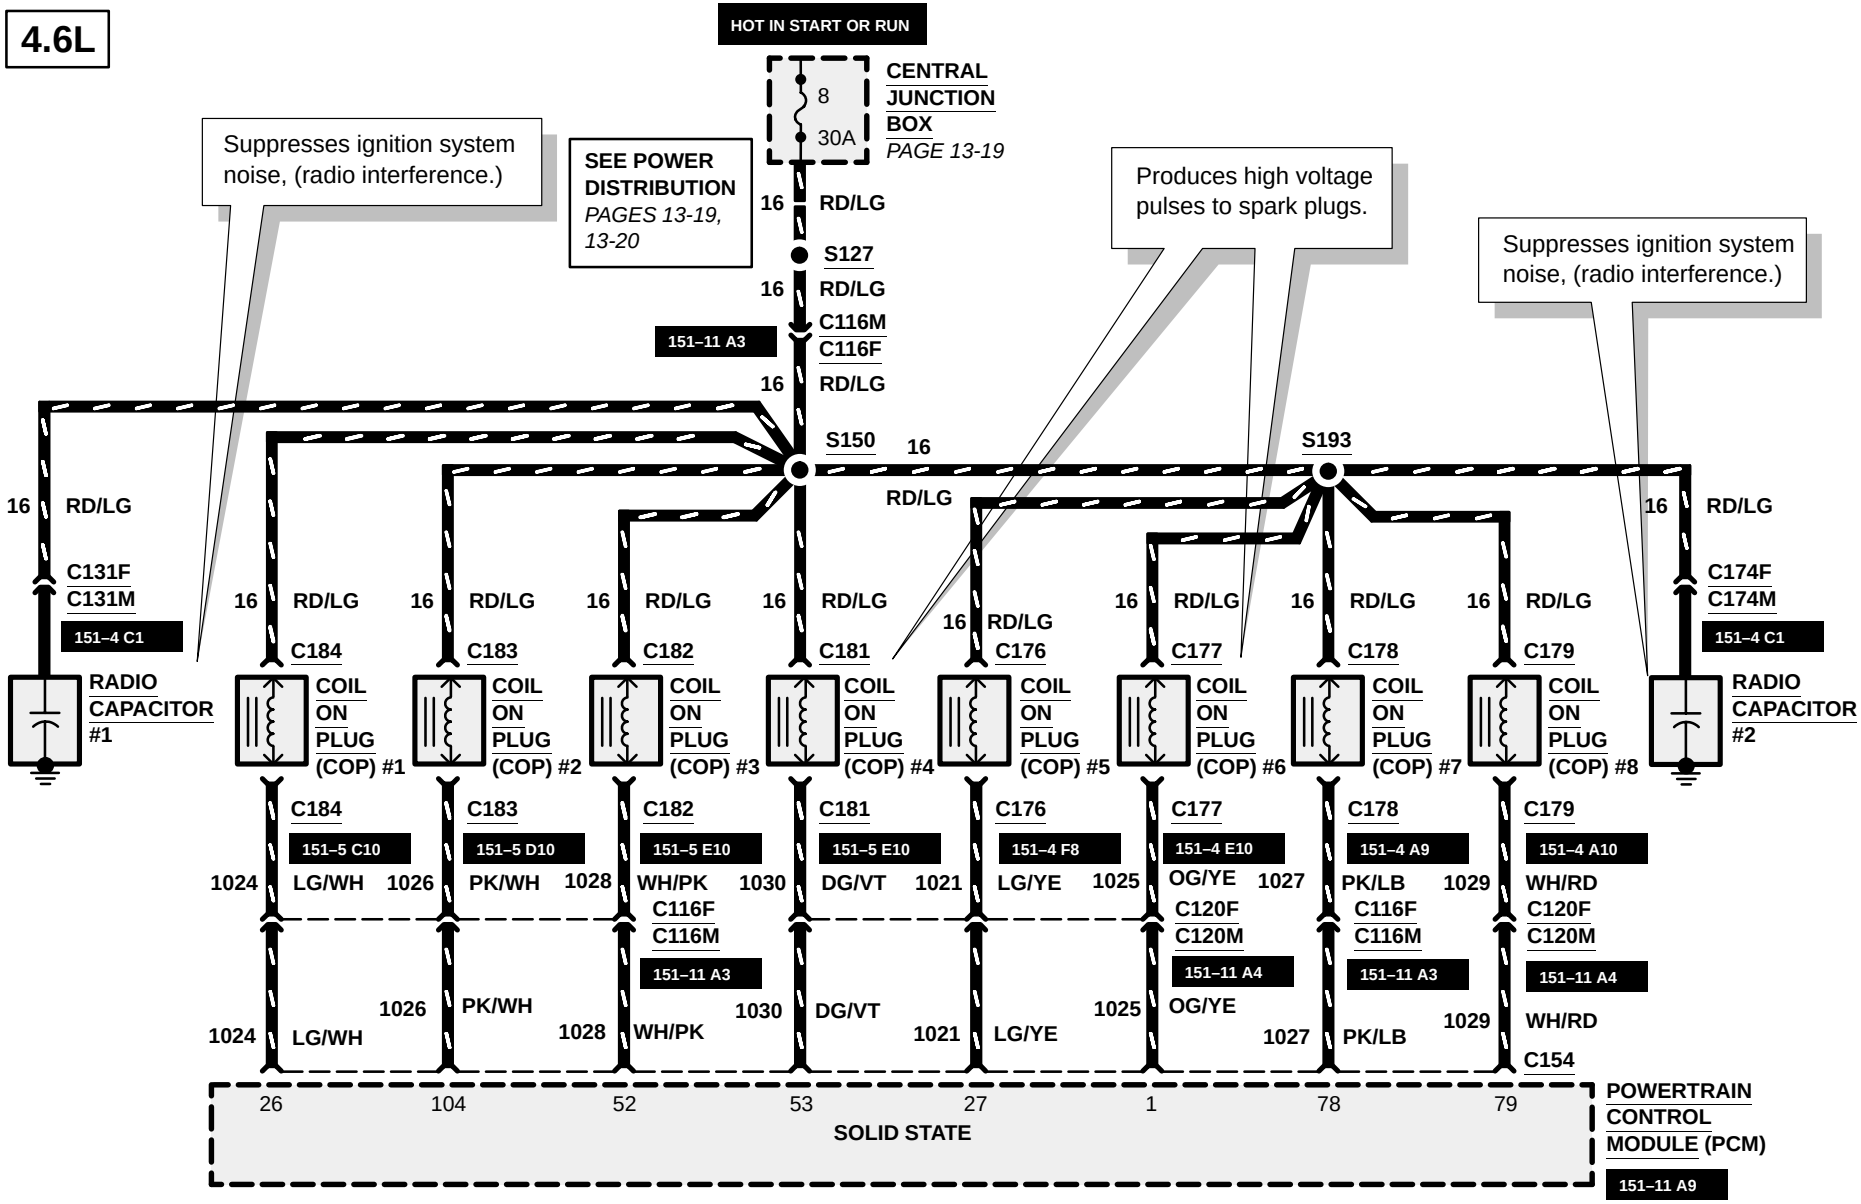
4.6L
HOT IN START OR RUN
8
30A
CENTRAL JUNCTION BOX
PAGE 13-19
SEE POWER DISTRIBUTION
PAGES 13-19, 13-20
Suppresses ignition system noise, (radio interference.)
Produces high voltage pulses to spark plugs.
Suppresses ignition system noise, (radio interference.)
16 RD/LG
S127
C116M
C116F
151–11 A3
S150
S193
C131F
C131M
151–4 C1
C174F
C174M
RADIO CAPACITOR #1
RADIO CAPACITOR #2
C184
C183
C182
C181
C176
C177
C178
C179
COIL ON PLUG (COP) #1
COIL ON PLUG (COP) #2
COIL ON PLUG (COP) #3
COIL ON PLUG (COP) #4
COIL ON PLUG (COP) #5
COIL ON PLUG (COP) #6
COIL ON PLUG (COP) #7
COIL ON PLUG (COP) #8
151–5 C10
151–5 D10
151–5 E10
151–5 E10
151–4 F8
151–4 E10
151–4 A9
151–4 A10
1024 LG/WH
1026 PK/WH
1028 WH/PK
1030 DG/VT
1021 LG/YE
1025 OG/YE
1027 PK/LB
1029 WH/RD
C116F
C116M
151–11 A3
C120F
C120M
151–11 A4
C154
26
104
52
53
27
1
78
79
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9