C308
CAB Harness

Speaker, right rear

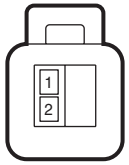

3536159C1

Pin	Circuit	Circuit Function
1	802 (OG/RD)	Amplifier/speaker switch feed to right rear speaker
2	803 (BN/PK)	Amplifier/speaker switch ground to right rear speaker

C309
CAB Harness

Left door seat belt conn, left
(less heated & power seats)

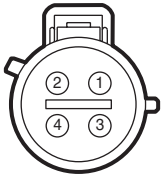

3578626C1

Pin	Circuit	Circuit Function
1	85 (BN/LB)	Driver buckle switch input
2	—	Not used
3	—	Not used
4	57 (BK)	Ground circuit

C314
IP Harness

Low air pressure

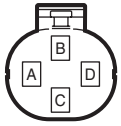

3577183C1

Pin	Circuit	Circuit Function
C	218 (WH/VT)	GEM to low air pressure switch
D	1203 (BK/LB)	Ground circuit

C315
IP Harness

Low air pressure

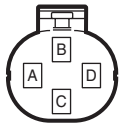

3577183C1

Pin	Circuit	Circuit Function
C	218 (WH/VT)	GEM to low air pressure switch
D	1203 (BK/LB)	Ground circuit

C319
Allison LCT
Trans Harness

Transmission bulkhead

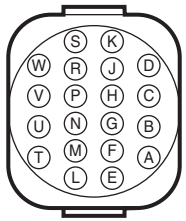

3522537C91

Pin	Circuit	Circuit Function
A	226 (WH/BK)	Transmission to ECU circuit
B	227 (YE)	Transmission to ECU circuit
C	231 (BK/YE)	Transmission to ECU circuit
D	201 (TN/RD)	Transmission to ECU circuit
E	203 (OG/LB)	Transmission to ECU circuit
F	202 (OG/LG)	Transmission to ECU circuit
G	210 (LB)	Transmission to ECU circuit
H	220 (VT/OG)	Transmission to ECU circuit
J	22 9 (RD/OG)	Transmission to ECU circuit
K	204 (OG/LG)	Transmission to ECU circuit
L	222 (BN/LG)	Transmission to ECU circuit
M	223 (TN/LG)	Transmission to ECU circuit
N	224 (TN/WH)	Transmission to ECU circuit
P	225 (BK/YE)	Transmission to ECU circuit
R	230 (BK/LG)	Transmission to ECU circuit
S	232 (LG/YE)	Transmission to ECU circuit
T	221 (OG/WH)	Transmission to ECU circuit
U	—	Not used
V	—	Not used
W	228 (DB)	Transmission to ECU circuit