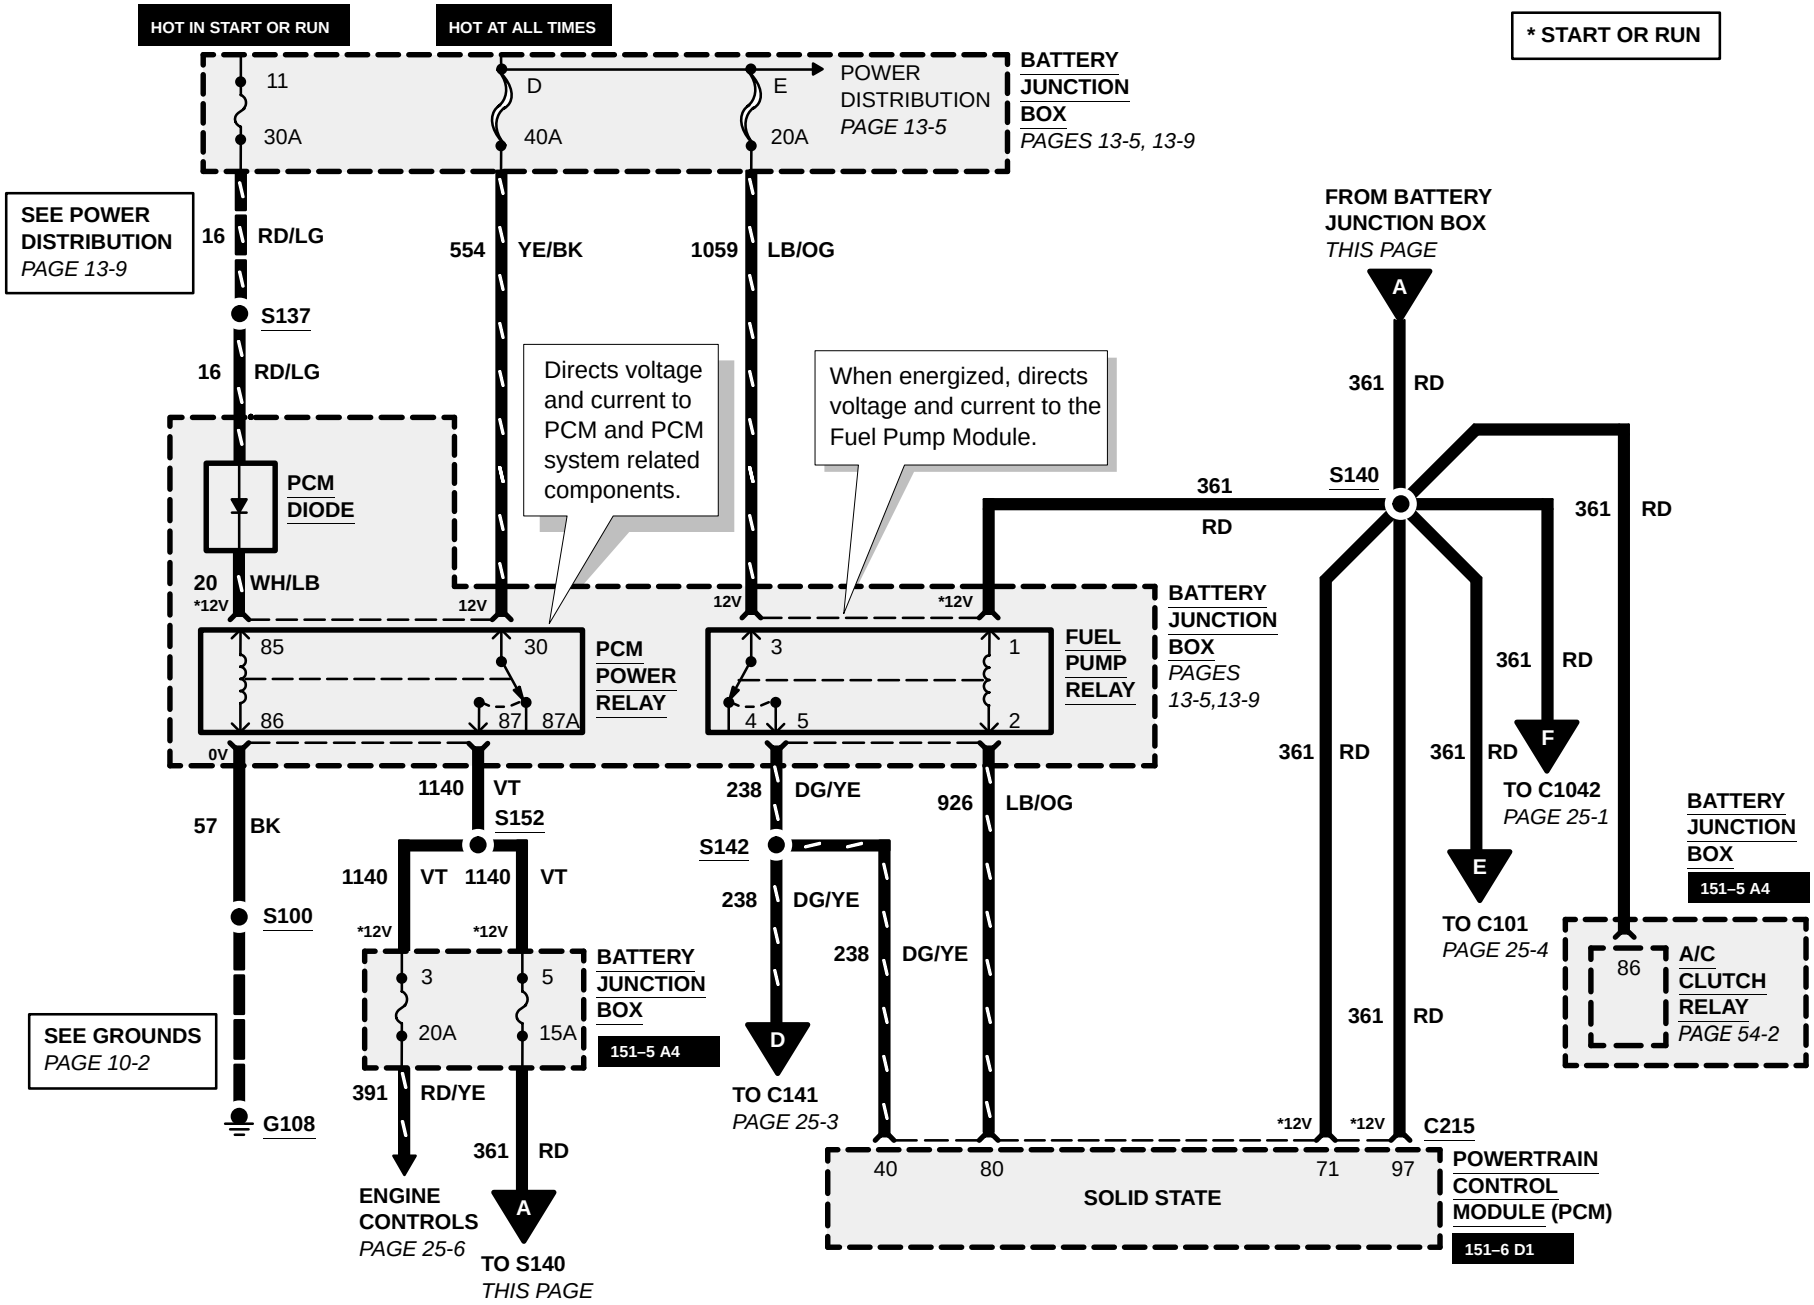
HOT IN START OR RUN
HOT AT ALL TIMES
* START OR RUN
11
30A
D
40A
E
20A
POWER DISTRIBUTION
PAGE 13-5
BATTERY JUNCTION BOX
PAGES 13-5, 13-9
SEE POWER DISTRIBUTION
PAGE 13-9
16 RD/LG
554 YE/BK
1059 LB/OG
S137
16 RD/LG
PCM DIODE
20 WH/LB
*12V
12V
12V
*12V
Directs voltage and current to PCM and PCM system related components.
When energized, directs voltage and current to the Fuel Pump Module.
85
30
86
87
87A
PCM POWER RELAY
3
1
4
5
2
FUEL PUMP RELAY
BATTERY JUNCTION BOX
PAGES 13-5,13-9
0V
1140 VT
S152
57 BK
S100
SEE GROUNDS
PAGE 10-2
G108
1140 VT
1140 VT
*12V
*12V
3
5
20A
15A
BATTERY JUNCTION BOX
151–5 A4
391 RD/YE
361 RD
ENGINE CONTROLS
PAGE 25-6
A
TO S140
THIS PAGE
238 DG/YE
926 LB/OG
S142
238 DG/YE
238 DG/YE
D
TO C141
PAGE 25-3
FROM BATTERY JUNCTION BOX
THIS PAGE
A
361 RD
S140
361 RD
361 RD
361 RD
361 RD
361 RD
361 RD
F
TO C1042
PAGE 25-1
E
TO C101
PAGE 25-4
BATTERY JUNCTION BOX
151–5 A4
86
A/C CLUTCH RELAY
PAGE 54-2
*12V
*12V
C215
40
80
71
97
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 D1