C523

14631

Y28
Speaker, left front
(18808)

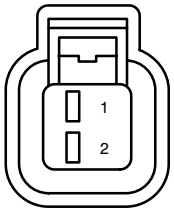

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C525

14406

M241
Door lock actuator,
left front

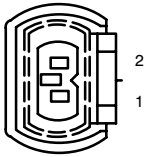

F02116

Pin	Circuit	Circuit function
1	1328 (RD/OG)	Door lock motor, driver side, Lock
2	1329 (YE)	Door lock motor, driver side, Unlock

C526

14631

N84
Door ajar switch, left
front

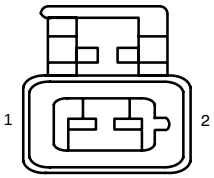

F02379

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	1312 (LG/BK)	Door ajar switch, driver side front (14018)

C527

14631

N409
Exterior rear view
mirror switch
(17B676)

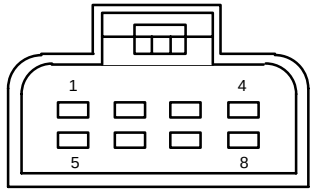

F08177

Pin	Circuit	Circuit function
1	956 (OG/LG)	Voltage supplied at all times (overload protected)
2	–	not used
3	543 (DG)	Voltage supplied at all times (overload protected)
4	540 (RD)	Right/Left mirror movement
5	1205 (BK)	Ground
6	1545 (OG)	Mirror motor, feed
7	541 (DB)	Up/Down mirror movement
8	544 (VT)	Up/Down mirror movement