## W/POWER SLIDING DOOR

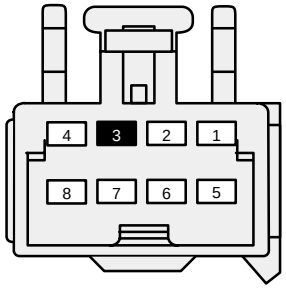


**C700**

**LEFT SLIDING DOOR CONTACT**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1385 (LG) | Left Power Sliding Door Lock |
| 2 | 825 (TN/LG) | Left Rear Speaker (+) |
| 3 | – | NOT USED |
| 4 | 1251 (YE/RD) | Return |
| 5 | 1386 (OG) | Left Power Sliding Door Unlock |
| 6 | 803 (BN/PK) | Left Rear Speaker (–) |
| 7 | 1227 (WH) | Left Detent Switch |
| 8 | 1252 (GY/RD) | Left Unlatch |

## W/POWER SLIDING DOOR

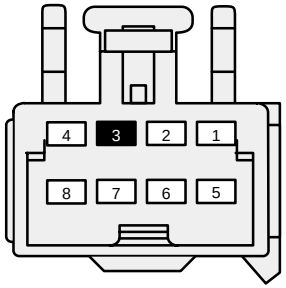


**C800**

**RIGHT SLIDING DOOR CONTACT**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1385 (LG) | Right Power Sliding Door Lock |
| 2 | 825 (TN/LG) | Right Rear Speaker (+) |
| 3 | – | NOT USED |
| 4 | 1251 (YE/RD) | Return |
| 5 | 1386 (OG) | Right Power Sliding Door Unlock |
| 6 | 803 (BN/PK) | Right Rear Speaker (–) |
| 7 | 1227 (WH) | Right Detent Switch |
| 8 | 1252 (GY/RD) | Right Unlatch |