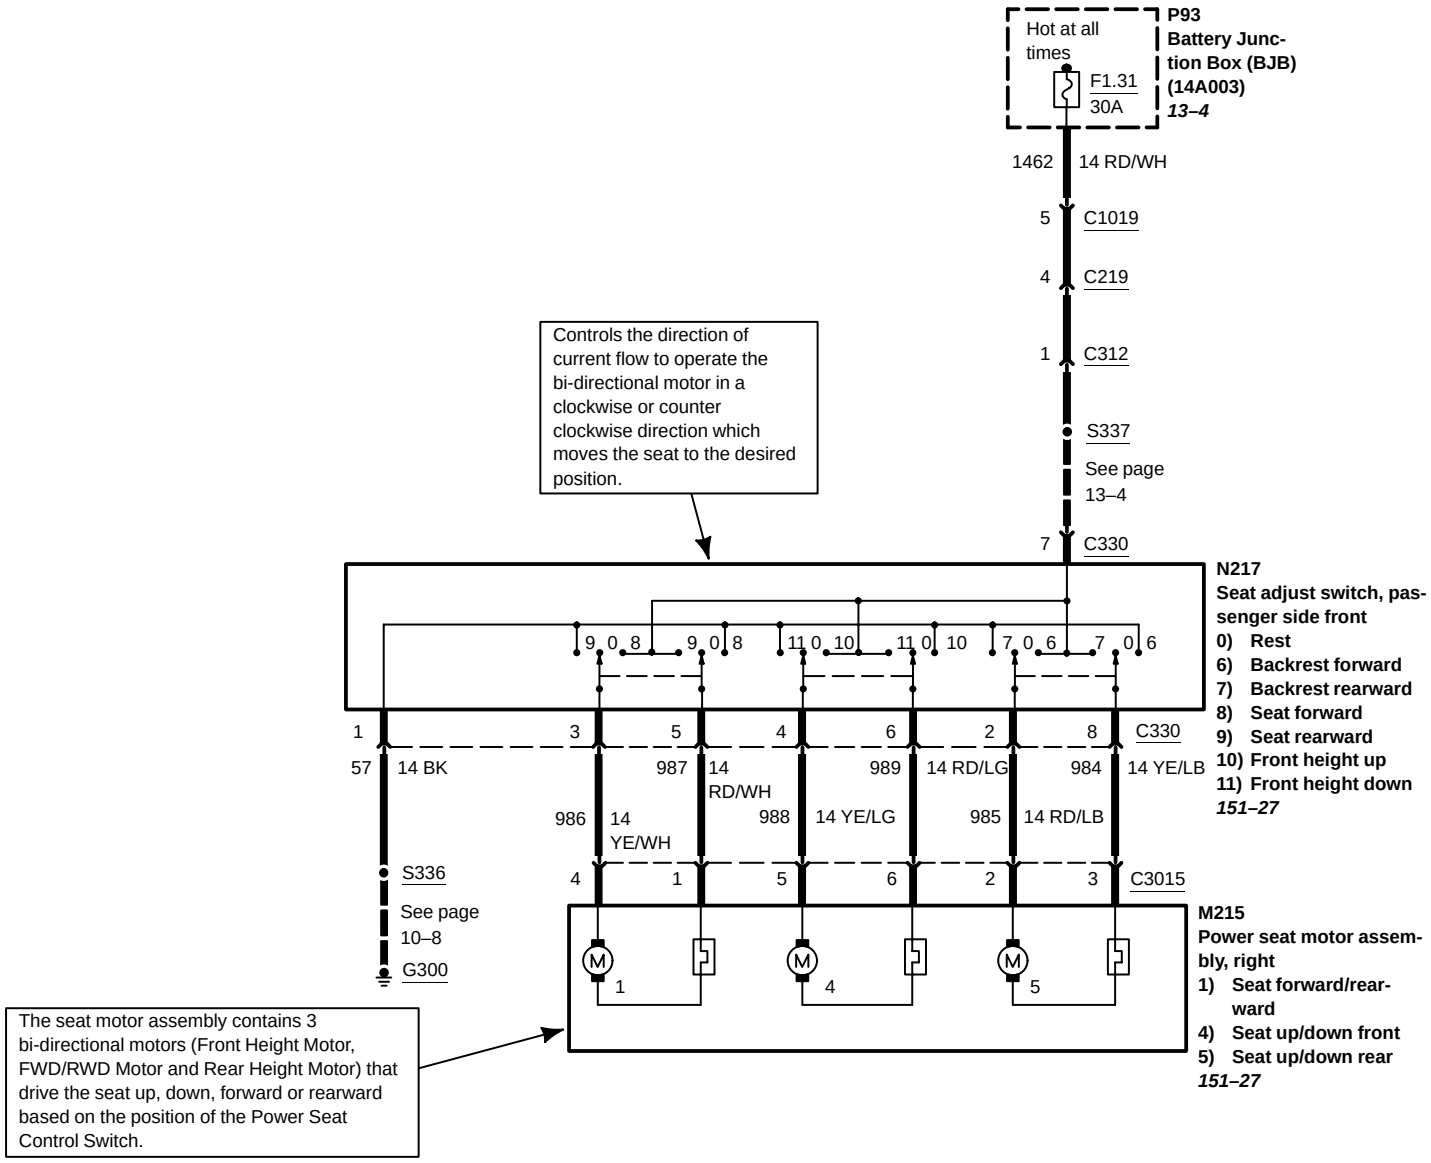
Hot at all times
F1.31
30A
P93
Battery Junction Box (BJB)
(14A003)
13–4
1462 14 RD/WH
5 C1019
4 C219
1 C312
S337
See page 13–4
7 C330
Controls the direction of current flow to operate the bi-directional motor in a clockwise or counter clockwise direction which moves the seat to the desired position.
N217
Seat adjust switch, passenger side front
0) Rest
6) Backrest forward
7) Backrest rearward
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
151–27
9 0 8 9 0 8 11 0 10 11 0 10 7 0 6 7 0 6
1 3 5 4 6 2 8 C330
57 14 BK
987 14 RD/WH
989 14 RD/LG
984 14 YE/LB
986 14 YE/WH
988 14 YE/LG
985 14 RD/LB
S336
See page 10–8
G300
4 1 5 6 2 3 C3015
M215
Power seat motor assembly, right
1) Seat forward/rearward
4) Seat up/down front
5) Seat up/down rear
151–27
M
1
4
5
The seat motor assembly contains 3 bi-directional motors (Front Height Motor, FWD/RWD Motor and Rear Height Motor) that drive the seat up, down, forward or rearward based on the position of the Power Seat Control Switch.