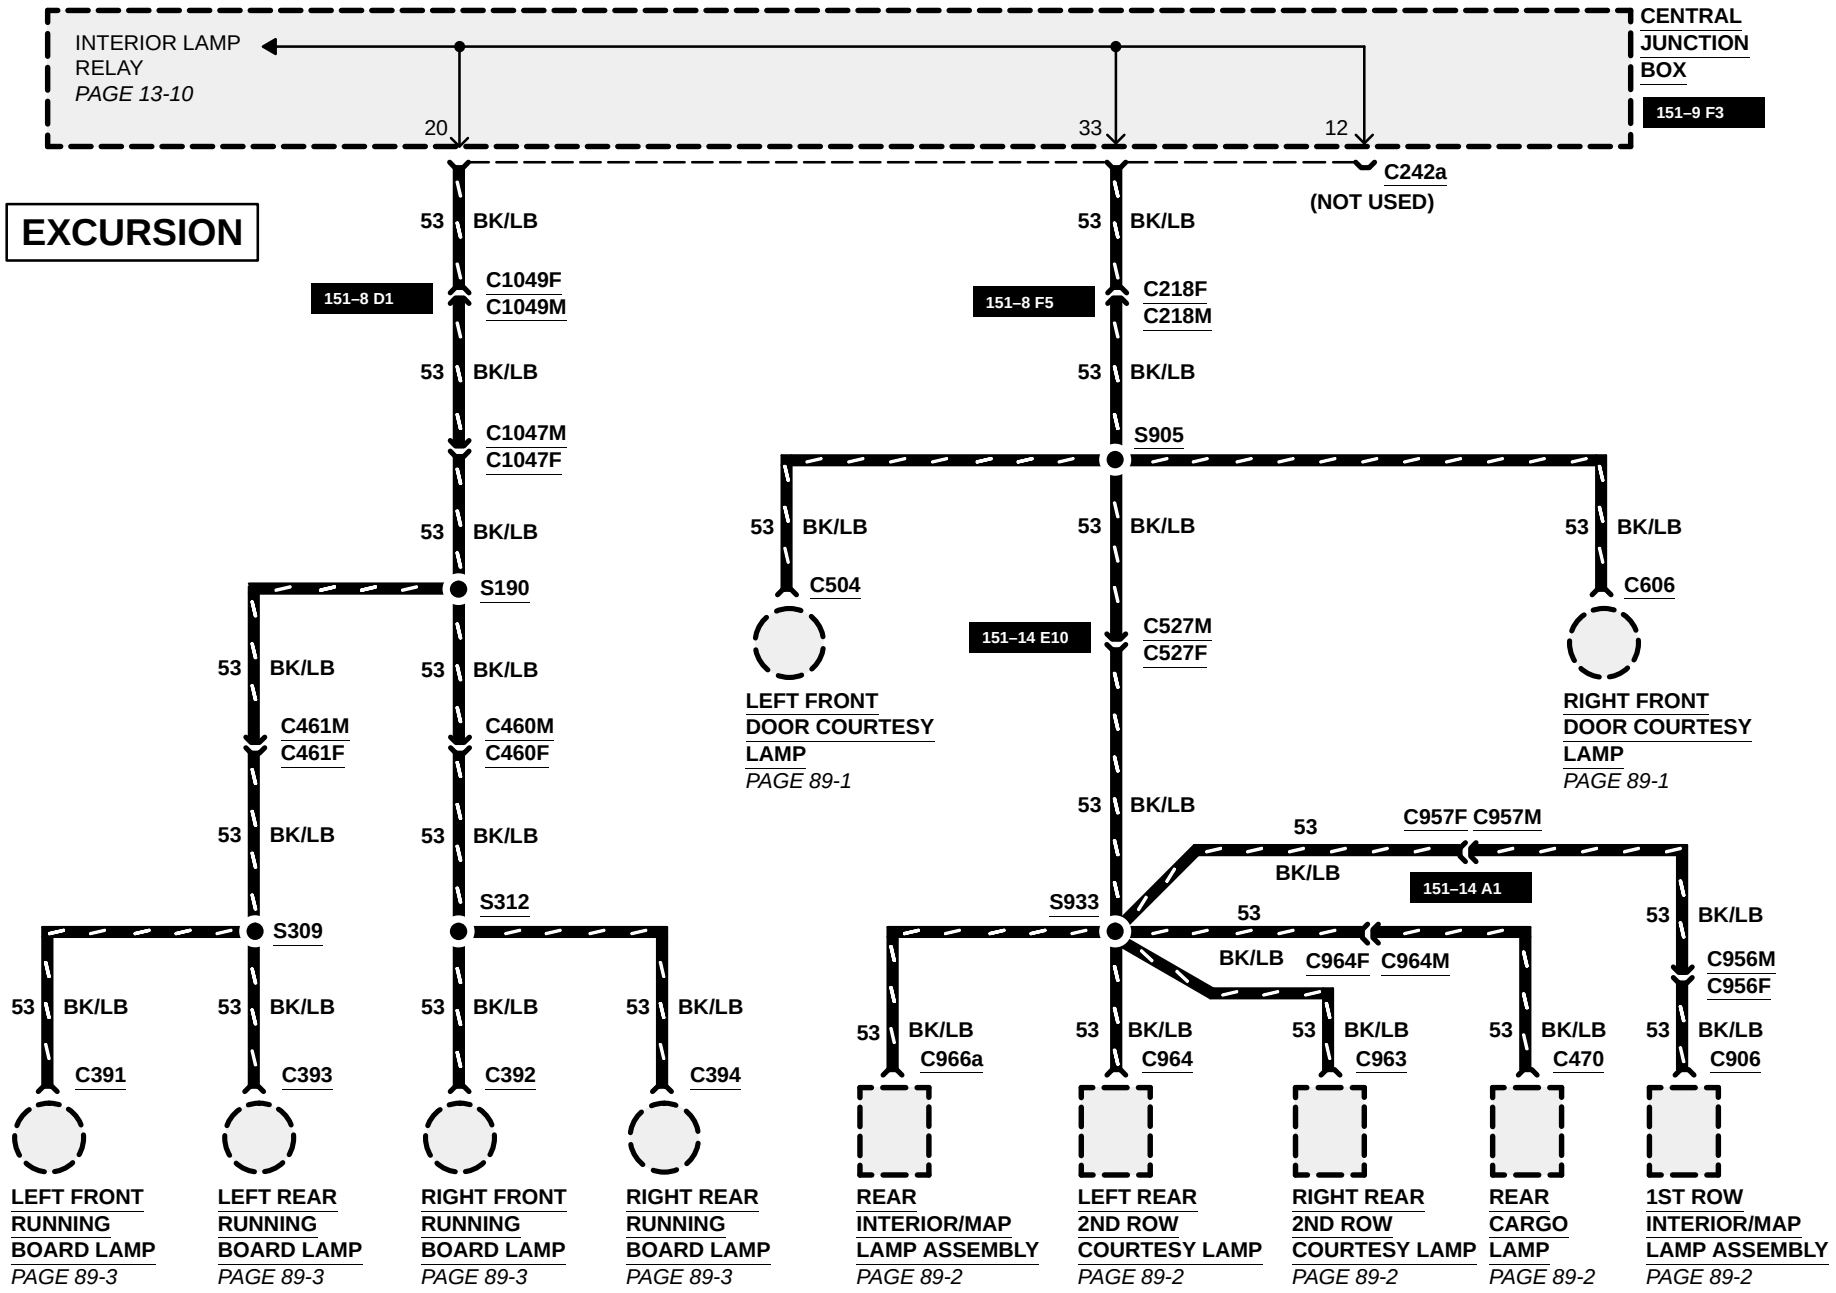
INTERIOR LAMP RELAY
PAGE 13-10
20
33
12
CENTRAL JUNCTION BOX
151–9 F3
C242a
(NOT USED)
EXCURSION
53 BK/LB
151–8 D1
C1049F
C1049M
C1047M
C1047F
S190
C461M
C461F
C460M
C460F
S309
S312
C391
C393
C392
C394
LEFT FRONT RUNNING BOARD LAMP
PAGE 89-3
LEFT REAR RUNNING BOARD LAMP
PAGE 89-3
RIGHT FRONT RUNNING BOARD LAMP
PAGE 89-3
RIGHT REAR RUNNING BOARD LAMP
PAGE 89-3
151–8 F5
C218F
C218M
S905
C504
C606
LEFT FRONT DOOR COURTESY LAMP
PAGE 89-1
RIGHT FRONT DOOR COURTESY LAMP
PAGE 89-1
151–14 E10
C527M
C527F
S933
C957F C957M
151–14 A1
C964F C964M
C956M
C956F
C966a
C964
C963
C470
C906
REAR INTERIOR/MAP LAMP ASSEMBLY
PAGE 89-2
LEFT REAR 2ND ROW COURTESY LAMP
PAGE 89-2
RIGHT REAR 2ND ROW COURTESY LAMP
PAGE 89-2
REAR CARGO LAMP
PAGE 89-2
1ST ROW INTERIOR/MAP LAMP ASSEMBLY
PAGE 89-2