C128 (BK)

12B637

Mass Air Flow (MAF) sensor (12B579)

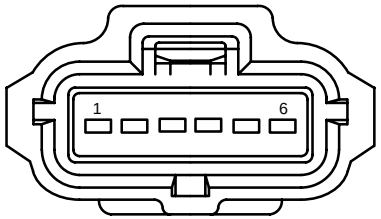

F06077

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	969 (BK)	Mass Air Flow (MAF) sensor (12B579), Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
6	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input

C131 (BK)

14290

Horn (13832)

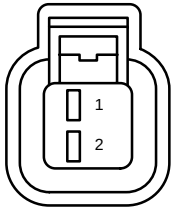

F02069

Pin	Circuit	Circuit function
1	1 (DB)	Horn (13832) feed
2	57 (BK)	Ground

C135 (BK)

14290

ABS control module (2C219)

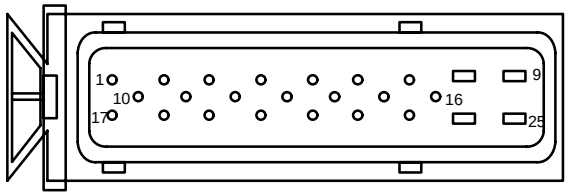

F25007

Pin	Circuit	Circuit function
1	–	not used
2	810 (RD/LG)	Brake pedal position switch (13480), input
3	514 (YE/RD)	Wheel speed sensor, right front (2C204) +
4	516 (YE/BK)	Wheel speed sensor, right front (2C204) –
5	–	not used
6	–	not used
7	–	not used
8	57 (BK)	Ground
9	534 (YE/LG)	Voltage supplied at all times (overload protected)
10	–	not used
11	–	not used
12	–	not used
13	307 (BK/YE)	Deactivator switch, input
14	–	not used
15	–	not used
16	603 (DG)	Anti–lock brake indicator, control
17	521 (TN/OG)	Wheel speed sensor, left front (2C205) +
18	522 (TN/BK)	Wheel speed sensor, left front (2C205) –
19	–	not used
20	601 (LB/PK)	Voltage in Run (overload protected)
21	523 (RD/PK)	Wheel speed sensor, right rear +
22	519 (LG/BK)	Wheel speed sensor, left rear –
23	70 (LB/WH)	ISO Bus
24	57 (BK)	Ground
25	483 (RD)	Voltage supplied at all times (overload protected)