## C186 (GY)

**12B637**

Fuel injector 6
(9F593)

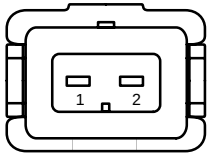


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 2 | 560 (LG/OG) | Fuel injector 6, control |

* 3.8L

## C189 (BK)

***9D930**
**12B637**

Throttle Position
Sensor (TPS)
(9B989)

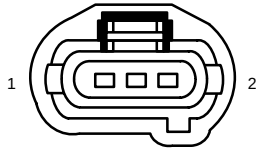


F03118

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 359 (GY/RD) | signal, return |
| 2 | 355 (GY/WH) | Throttle Position Sensor (TPS) (9B989), input |
| 3 | 351 (BN/WH) | Reference, voltage |

## C187 (GY)

**12B637**

Fuel injector 7
(9F593)

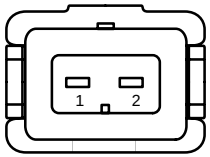


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 2 | 561 (TN/RD) | Fuel injector 7, control |

## C190 (BK)

**12B637**

Positive crankcase
ventilation heater

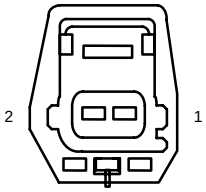


F02055

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1040 (RD/BK) | Voltage in Run (overload protected) |
| 2 | 1205 (BK) | Ground |

## C188 (GY)

**12B637**

Fuel injector 8
(9F593)

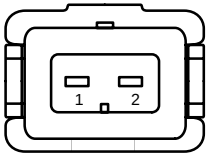


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 2 | 562 (LB) | Fuel injector 8, control |