## C2131a (BK)

**14A005**

Air suspension module (3C142)

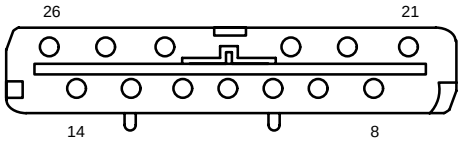


F13015

| Pin | Circuit | Circuit function |
|---|---|---|
| 8 | 432 (BK/PK) | Air suspension height sensor (3C131), rear, feed |
| 9 | 914 (TN/OG) | SCP Bus + |
| 10 | 915 (PK/LB) | SCP Bus – |
| 11 | 419 (DG/LG) | Air suspension module (3C142), to, Instrumentation and Warning System |
| 12 | 427 (PK/BK) | Air suspension height sensor (3C131), to, Air suspension module (3C142), signal |
| 13 | 1114 (BN/PK) | Air suspension module (3C142), to, Left, rear, Solenoid |
| 14 | 114 (LB/YE) | Power steering valve solenoid (3783) + |
| 21 | – | not used |
| 22 | 429 (VT/LG) | Air suspension height sensor (3C131), rear, Power, feed |
| 23 | 420 (DB/YE) | Air suspension compressor relay, control |
| 24 | 421 (PK) | Air suspension compressor assembly, Vent solenoid, to, Air suspension module (3C142) |
| 25 | 1115 (TN/WH) | Air suspension module (3C142), to, Right, rear, Solenoid |
| 26 | 115 (LG/BK) | Power steering valve solenoid (3783) – |

## C2131b (GY)

**14A005**

Air suspension module (3C142)

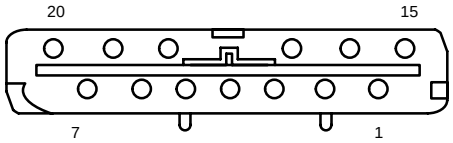


F13013

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1053 (LB/PK) | Voltage supplied at all times (overload protected) |
| 2 | 418 (DG/YE) | Air suspension module (3C142), feed, feed |
| 3 | – | not used |
| 4 | – | not used |
| 5 | 1312 (LG/BK) | Lighting control module, Door ajar indicator, signal |
| 6 | 676 (PK/OG) | Ground |
| 7 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 15 | 1053 (LB/PK) | Voltage supplied at all times (overload protected) |
| 16 | 298 (VT/OG) | Voltage in Run (overload protected) |
| 17 | – | not used |
| 18 | – | not used |
| 19 | – | not used |
| 20 | – | not used |

## C2135 (BK)

**14401**

Overdrive cancel switch (7G550)

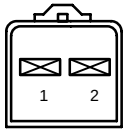


F02045

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 224 (TN/WH) | PCM, to transmission overdrive cancel switch |
| 2 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |