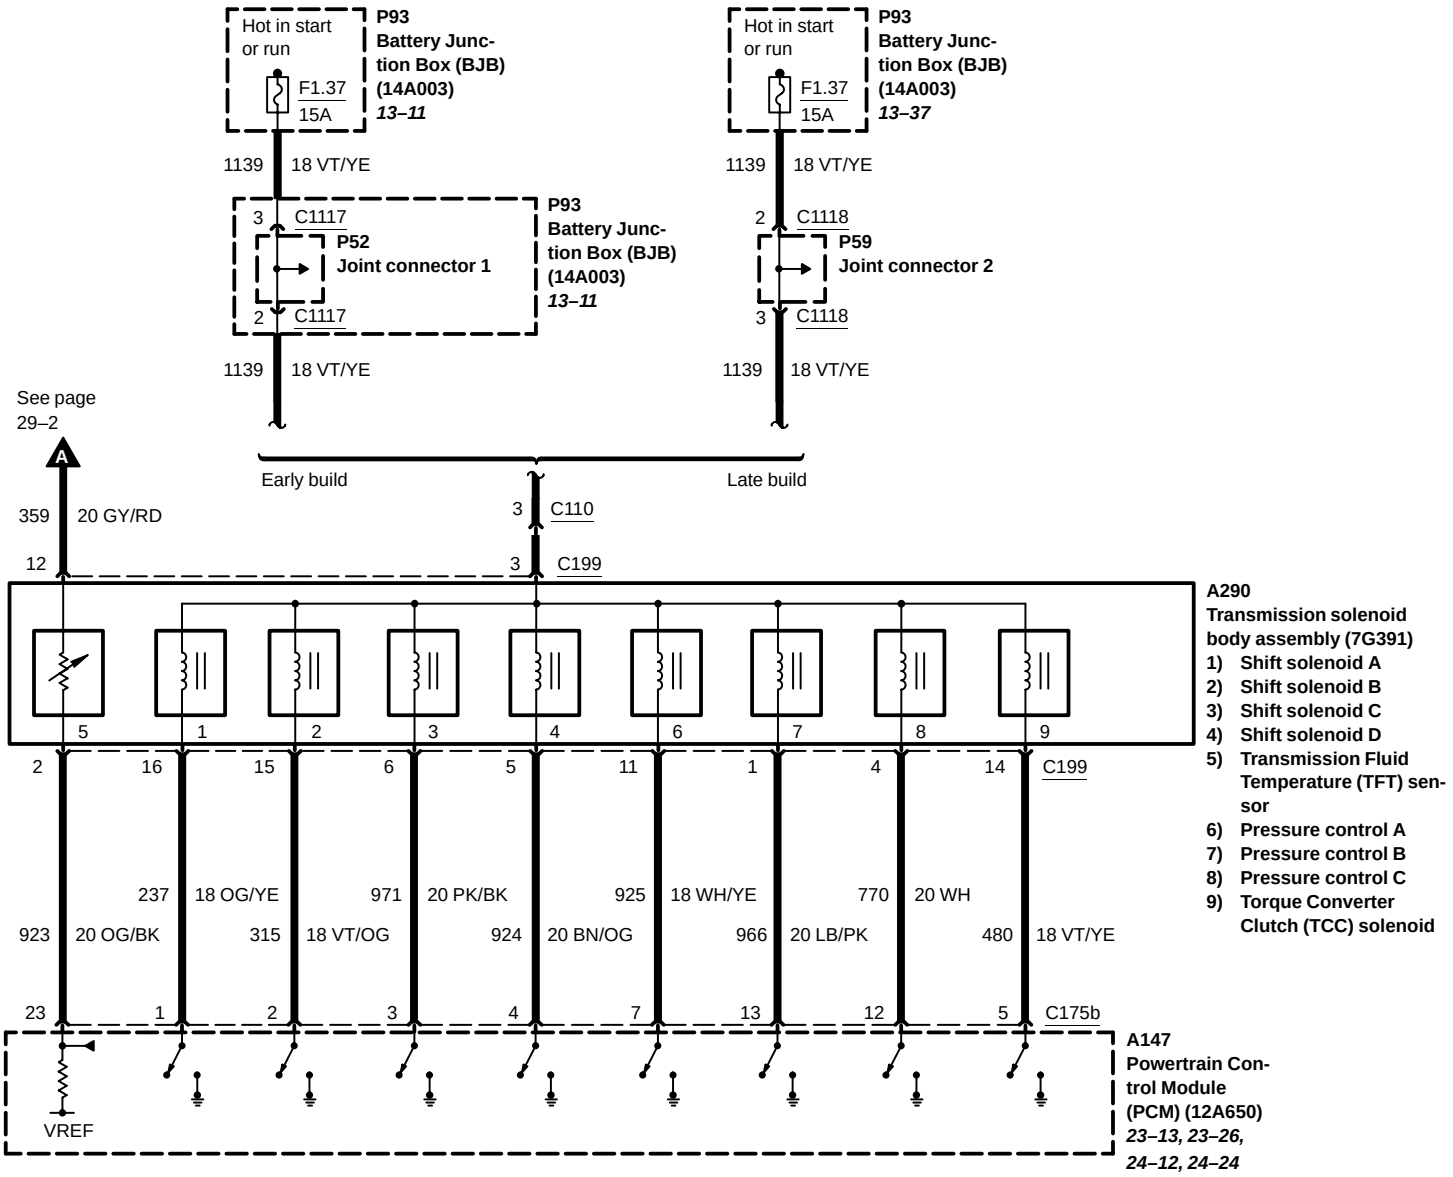
Hot in start or run
F1.37
15A
P93 Battery Junction Box (BJB) (14A003) 13–11
1139 18 VT/YE
3 C1117
P52 Joint connector 1
2 C1117
P93 Battery Junction Box (BJB) (14A003) 13–11
1139 18 VT/YE
Hot in start or run
F1.37
15A
P93 Battery Junction Box (BJB) (14A003) 13–37
1139 18 VT/YE
2 C1118
P59 Joint connector 2
3 C1118
1139 18 VT/YE
See page 29–2
A
Early build
Late build
359 20 GY/RD
3 C110
12
3 C199
A290 Transmission solenoid body assembly (7G391)
1) Shift solenoid A
2) Shift solenoid B
3) Shift solenoid C
4) Shift solenoid D
5) Transmission Fluid Temperature (TFT) sensor
6) Pressure control A
7) Pressure control B
8) Pressure control C
9) Torque Converter Clutch (TCC) solenoid
5 1 2 3 4 6 7 8 9
2 16 15 6 5 11 1 4 14 C199
237 18 OG/YE
971 20 PK/BK
925 18 WH/YE
770 20 WH
923 20 OG/BK
315 18 VT/OG
924 20 BN/OG
966 20 LB/PK
480 18 VT/YE
23 1 2 3 4 7 13 12 5 C175b
VREF
A147 Powertrain Control Module (PCM) (12A650) 23–13, 23–26, 24–12, 24–24