C466

14A005

A14a
Subwoofer amplifier
(18B849)



F10009

Pin	Circuit	Circuit Function
1	7-MD19 (YE/RD)	Amplifier enable
2	31-MD19 (BK/BU)	Ground
3	–	not used
4	–	not used
5	30-MD19 (RD/BU)	Battery
6	–	not used
7	1-MD19 (WH/RD)	Audio signal positive
8	2-MD19 (GY/RD)	Audio signal negative
9	48-MD15	Drain wire
10	–	not used

C475

14A005

E174
High mounted sto-plamp (13A613)

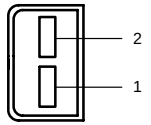

F02259

Pin	Circuit	Circuit Function
1	29S-LG6 (OG/YE)	Voltage supplied at all times (overload protected), switch
2	31S-LG6 (BK/YE)	Ground, switch

C481

13412

E210
Side lamp, left rear
(13411)

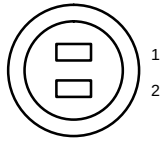

F02086

Pin	Circuit	Circuit Function
1	29S-LF10 (OG/GN)	Voltage supplied at all times (overload protected), switch
2	31S-LF10 (BK/RD)	Ground, switch

C482

13412

E211
Side lamp, right rear
(13411)

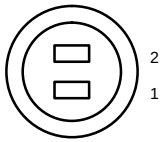

F02086

Pin	Circuit	Circuit Function
1	29S-LF19 (OG/BU)	Voltage supplied at all times (overload protected), switch
2	31S-LF19 (BK/BU)	Ground, switch