46-1 AIR BAG RESTRAINT SYSTEM

2001 MUSTANG

For diagnostic information, refer to Section 501-20B of the Workshop Manual.

Microcomputer that monitors air bag electrical system components and connections. Performs self test and displays faults by coded lamp display. Disarms system if certain faults occur and signals the GEM to provide a tone if indicator lamp malfunctions. Contains safing sensor, an electrical switch that reacts to impacts according to direction and force. Activation of the safing sensor and either primary crash sensor will cause air bag deployment.

*** SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED**

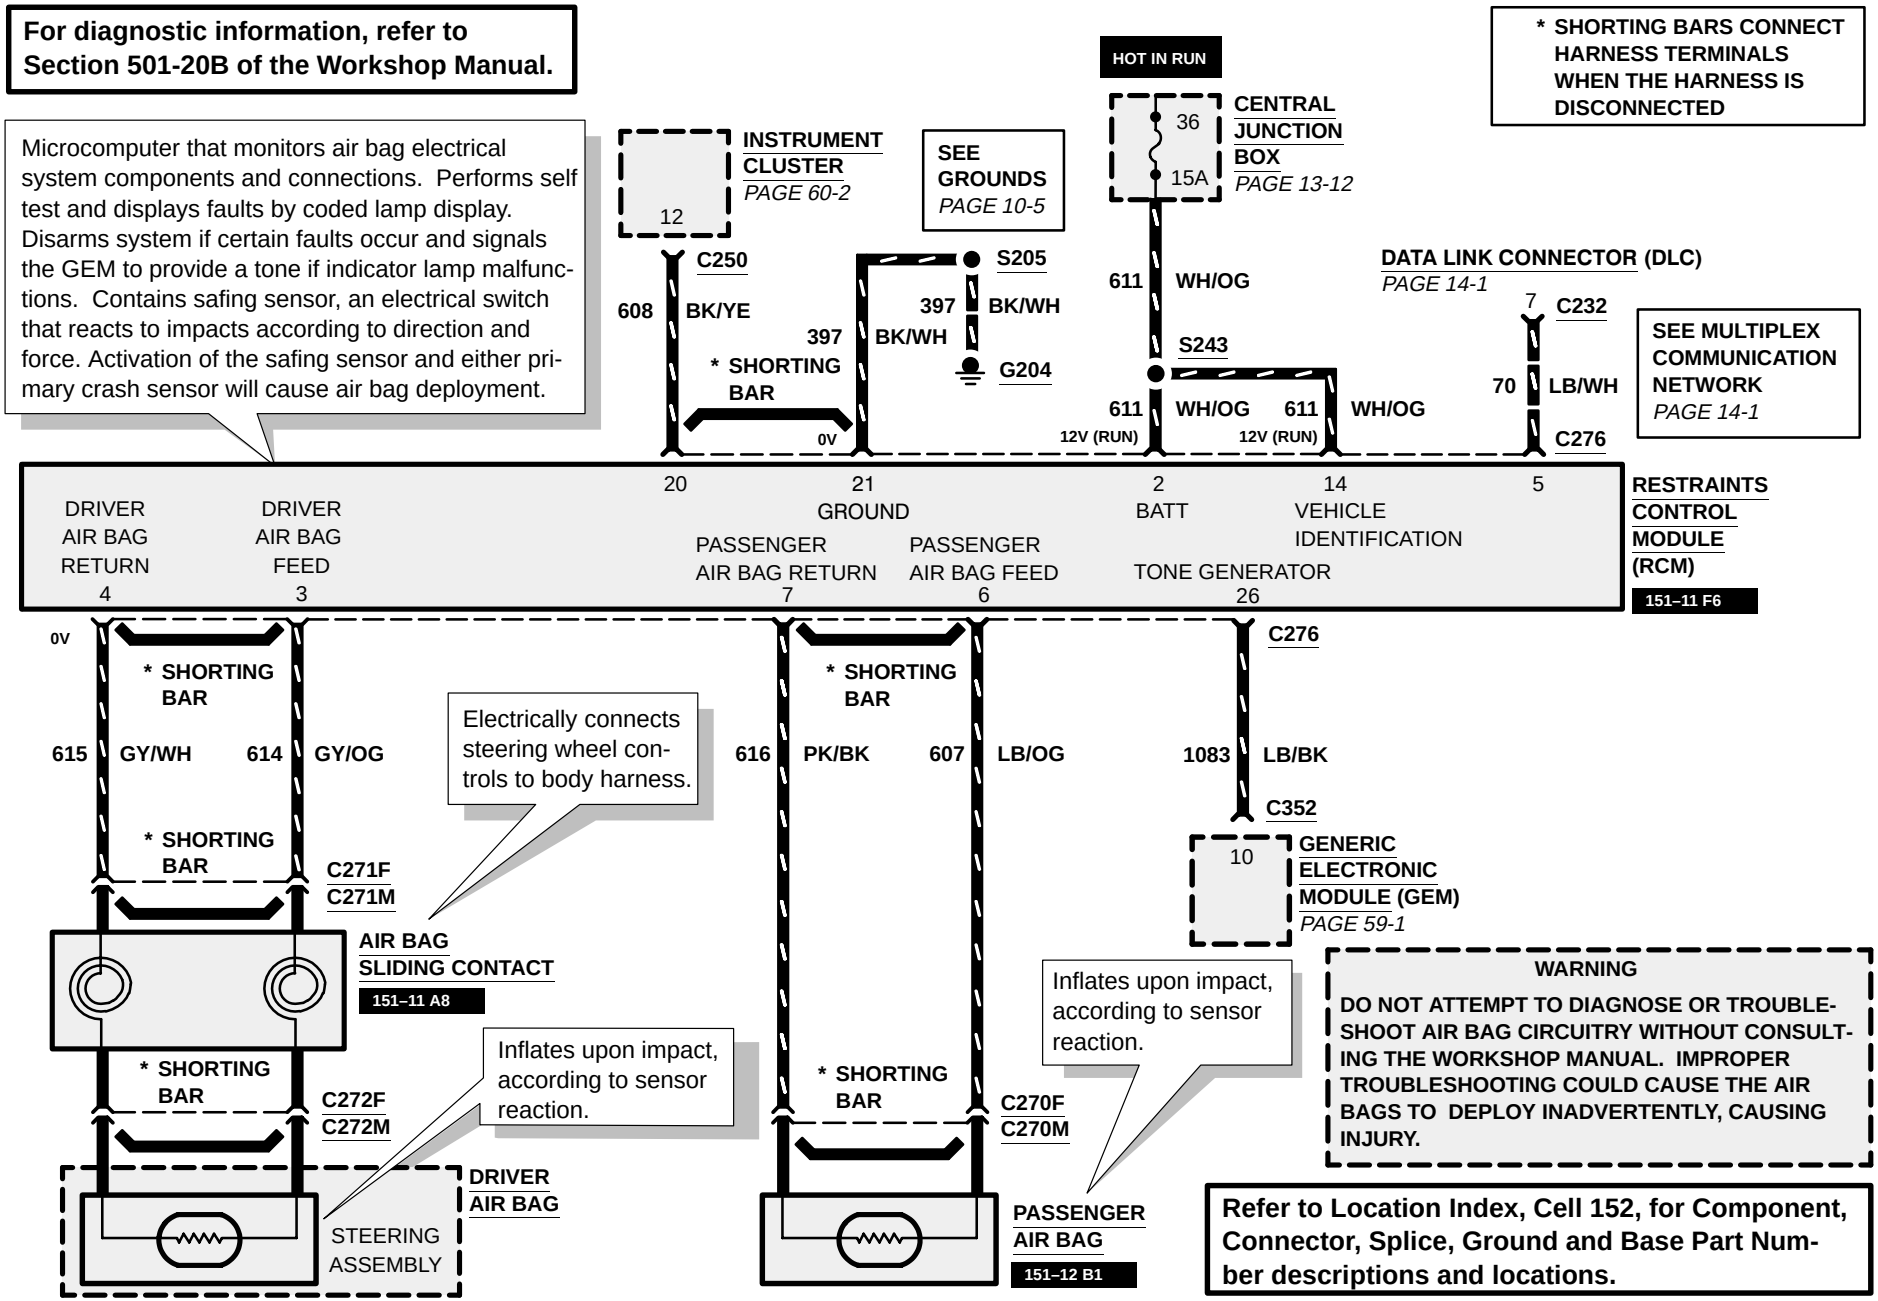

WARNING

DO NOT ATTEMPT TO DIAGNOSE OR TROUBLESHOOT AIR BAG CIRCUITRY WITHOUT CONSULTING THE WORKSHOP MANUAL. IMPROPER TROUBLESHOOTING COULD CAUSE THE AIR BAGS TO DEPLOY INADVERTENTLY, CAUSING INJURY.

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.