-1

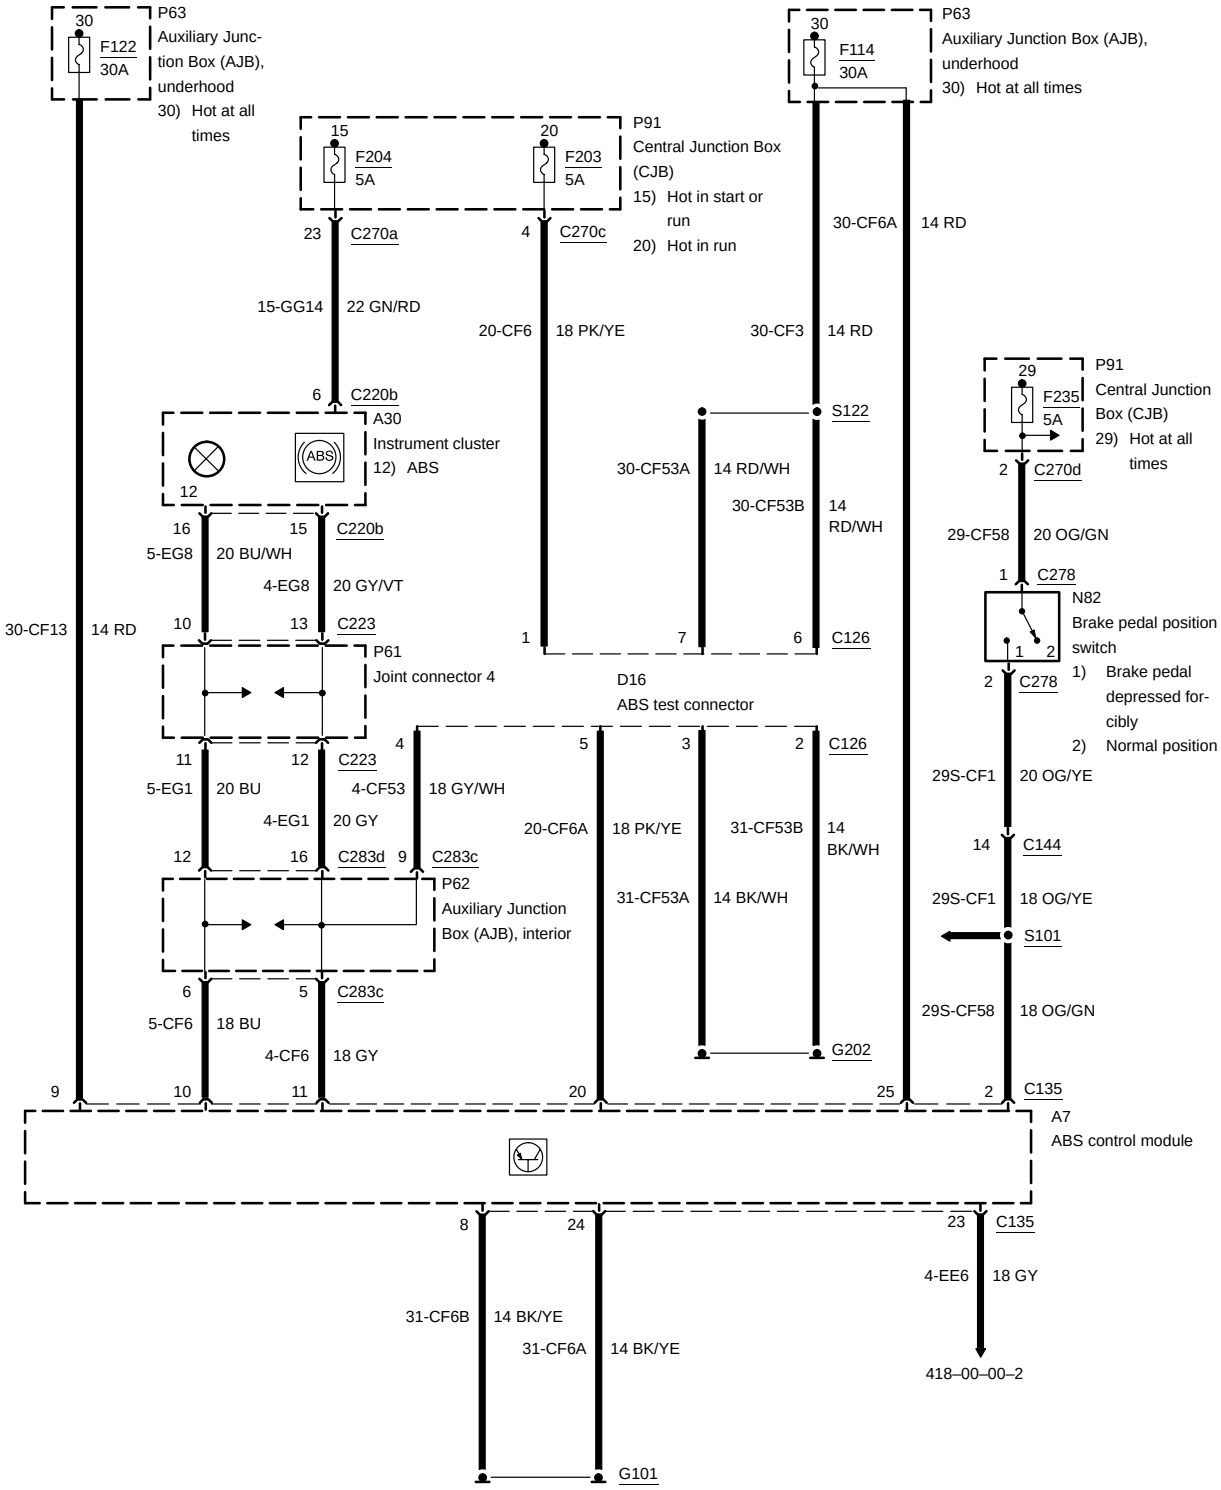
P63
Auxiliary Junction Box (AJB), underhood
30) Hot at all times
F122
30A
P63
Auxiliary Junction Box (AJB), underhood
30) Hot at all times
F114
30A
P91
Central Junction Box (CJB)
15) Hot in start or run
20) Hot in run
F204
5A
F203
5A
C270a
C270c
30-CF6A 14 RD
15-GG14 22 GN/RD
20-CF6 18 PK/YE
30-CF3 14 RD
C220b
A30
Instrument cluster
12) ABS
S122
30-CF53A 14 RD/WH
30-CF53B 14 RD/WH
P91
Central Junction Box (CJB)
29) Hot at all times
F235
5A
C270d
29-CF58 20 OG/GN
C278
N82
Brake pedal position switch
1) Brake pedal depressed forcibly
2) Normal position
5-EG8 20 BU/WH
4-EG8 20 GY/VT
30-CF13 14 RD
C223
P61
Joint connector 4
D16
ABS test connector
C126
5-EG1 20 BU
4-EG1 20 GY
4-CF53 18 GY/WH
20-CF6A 18 PK/YE
31-CF53B 14 BK/WH
31-CF53A 14 BK/WH
29S-CF1 20 OG/YE
C144
29S-CF1 18 OG/YE
S101
C283d
C283c
P62
Auxiliary Junction Box (AJB), interior
5-CF6 18 BU
4-CF6 18 GY
29S-CF58 18 OG/GN
G202
C135
A7
ABS control module
31-CF6B 14 BK/YE
31-CF6A 14 BK/YE
4-EE6 18 GY
G101
418–00–00–2