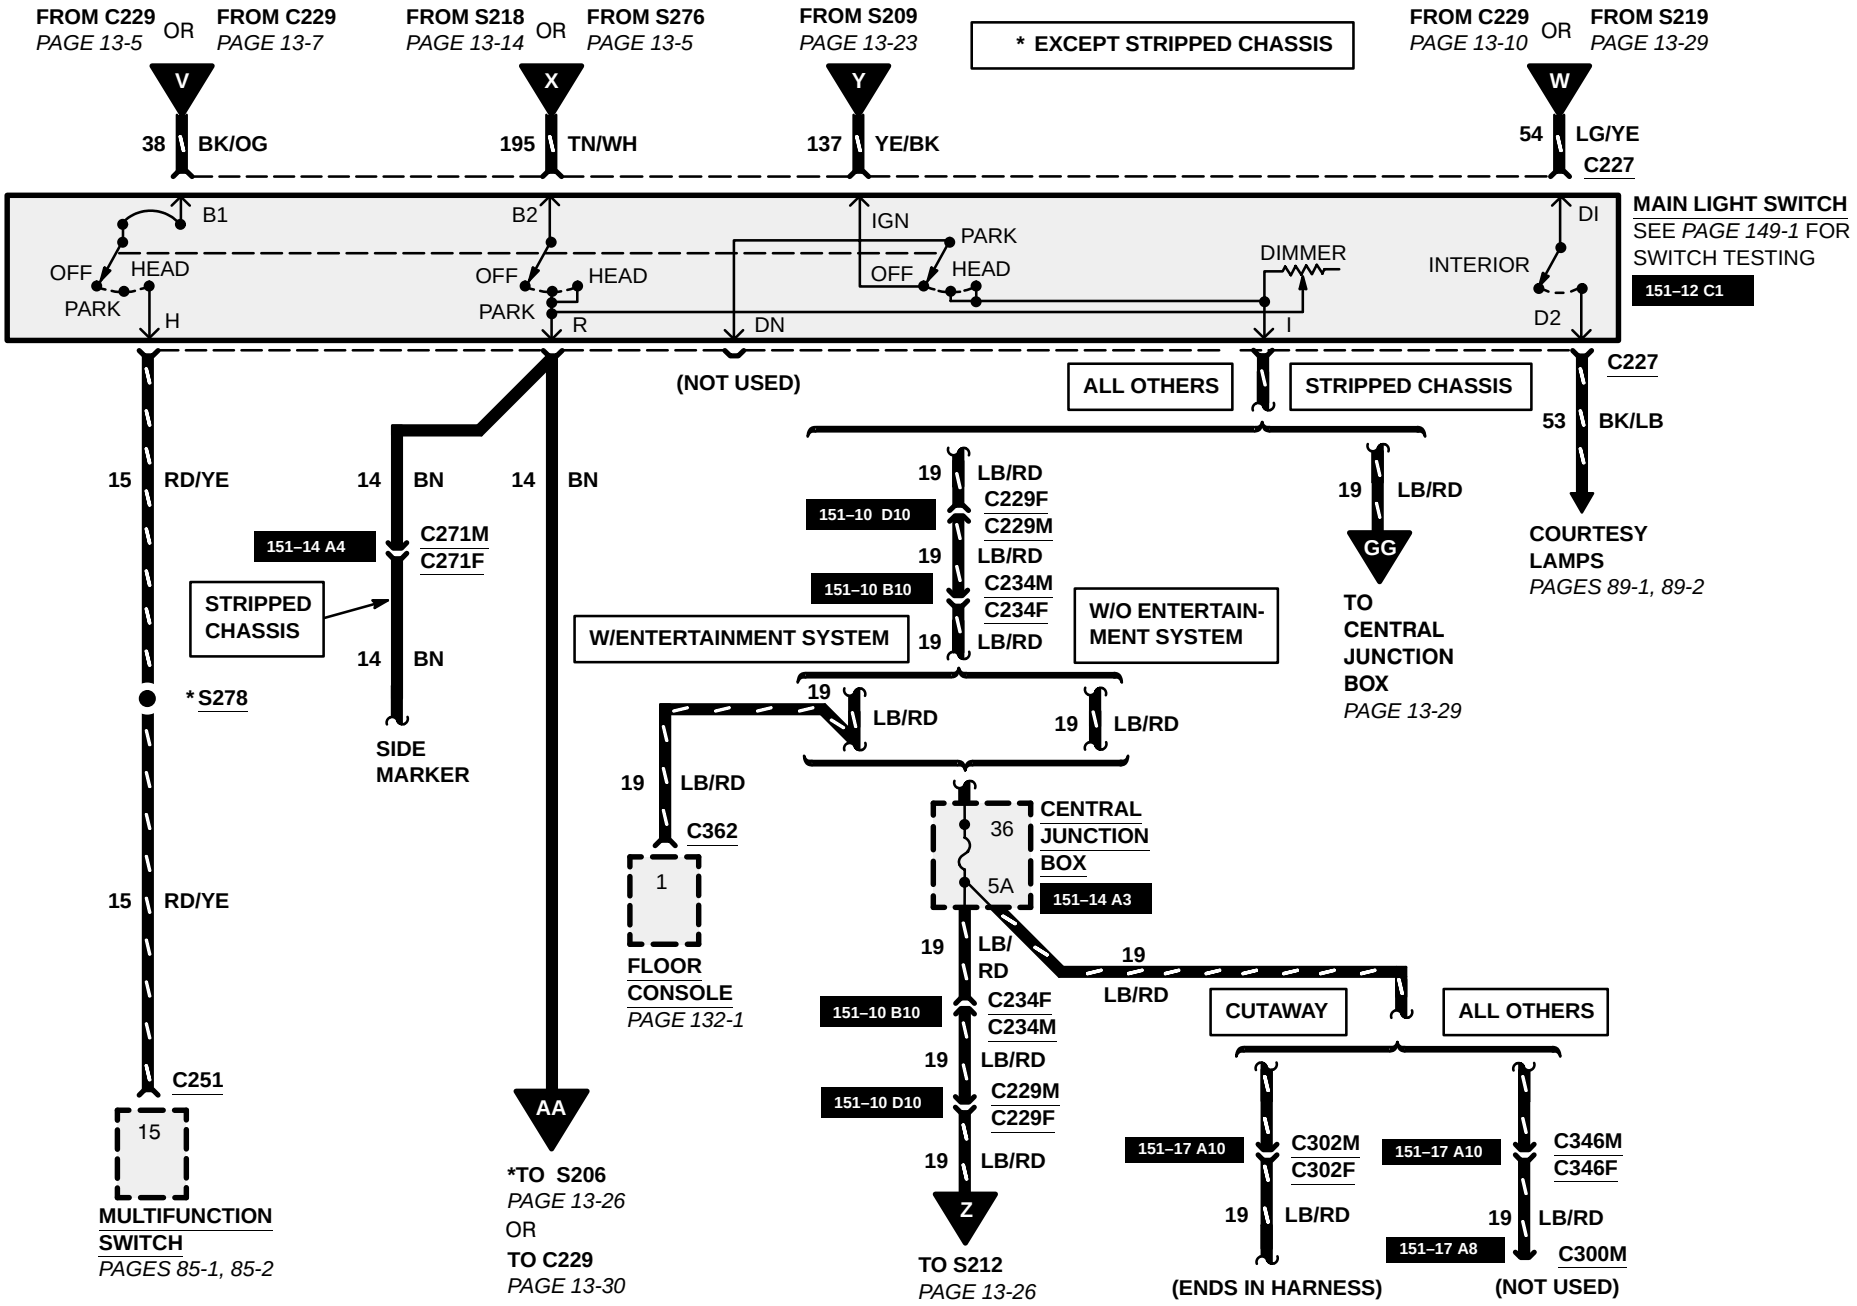
FROM C229
PAGE 13-5
OR
FROM C229
PAGE 13-7
FROM S218
PAGE 13-14
OR
FROM S276
PAGE 13-5
FROM S209
PAGE 13-23
* EXCEPT STRIPPED CHASSIS
FROM C229
PAGE 13-10
OR
FROM S219
PAGE 13-29
V
X
Y
W
38 BK/OG
195 TN/WH
137 YE/BK
54 LG/YE
C227
MAIN LIGHT SWITCH
SEE PAGE 149-1 FOR SWITCH TESTING
151–12 C1
B1
B2
IGN
PARK
DIMMER
DI
INTERIOR
OFF
HEAD
PARK
H
R
DN
I
D2
(NOT USED)
ALL OTHERS
STRIPPED CHASSIS
C227
53 BK/LB
COURTESY LAMPS
PAGES 89-1, 89-2
15 RD/YE
14 BN
14 BN
151–14 A4
C271M
C271F
STRIPPED CHASSIS
14 BN
*S278
SIDE MARKER
19 LB/RD
151–10 D10
C229F
C229M
19 LB/RD
151–10 B10
C234M
C234F
19 LB/RD
W/ENTERTAINMENT SYSTEM
W/O ENTERTAIN-MENT SYSTEM
19 LB/RD
GG
TO CENTRAL JUNCTION BOX
PAGE 13-29
19 LB/RD
19 LB/RD
19 LB/RD
C362
1
FLOOR CONSOLE
PAGE 132-1
CENTRAL JUNCTION BOX
36
5A
151–14 A3
15 RD/YE
C251
15
MULTIFUNCTION SWITCH
PAGES 85-1, 85-2
AA
*TO S206
PAGE 13-26
OR
TO C229
PAGE 13-30
19 LB/RD
151–10 B10
C234F
C234M
19 LB/RD
151–10 D10
C229M
C229F
19 LB/RD
Z
TO S212
PAGE 13-26
19 LB/RD
CUTAWAY
ALL OTHERS
151–17 A10
C302M
C302F
19 LB/RD
(ENDS IN HARNESS)
151–17 A10
C346M
C346F
19 LB/RD
151–17 A8
C300M
(NOT USED)