PICKUP

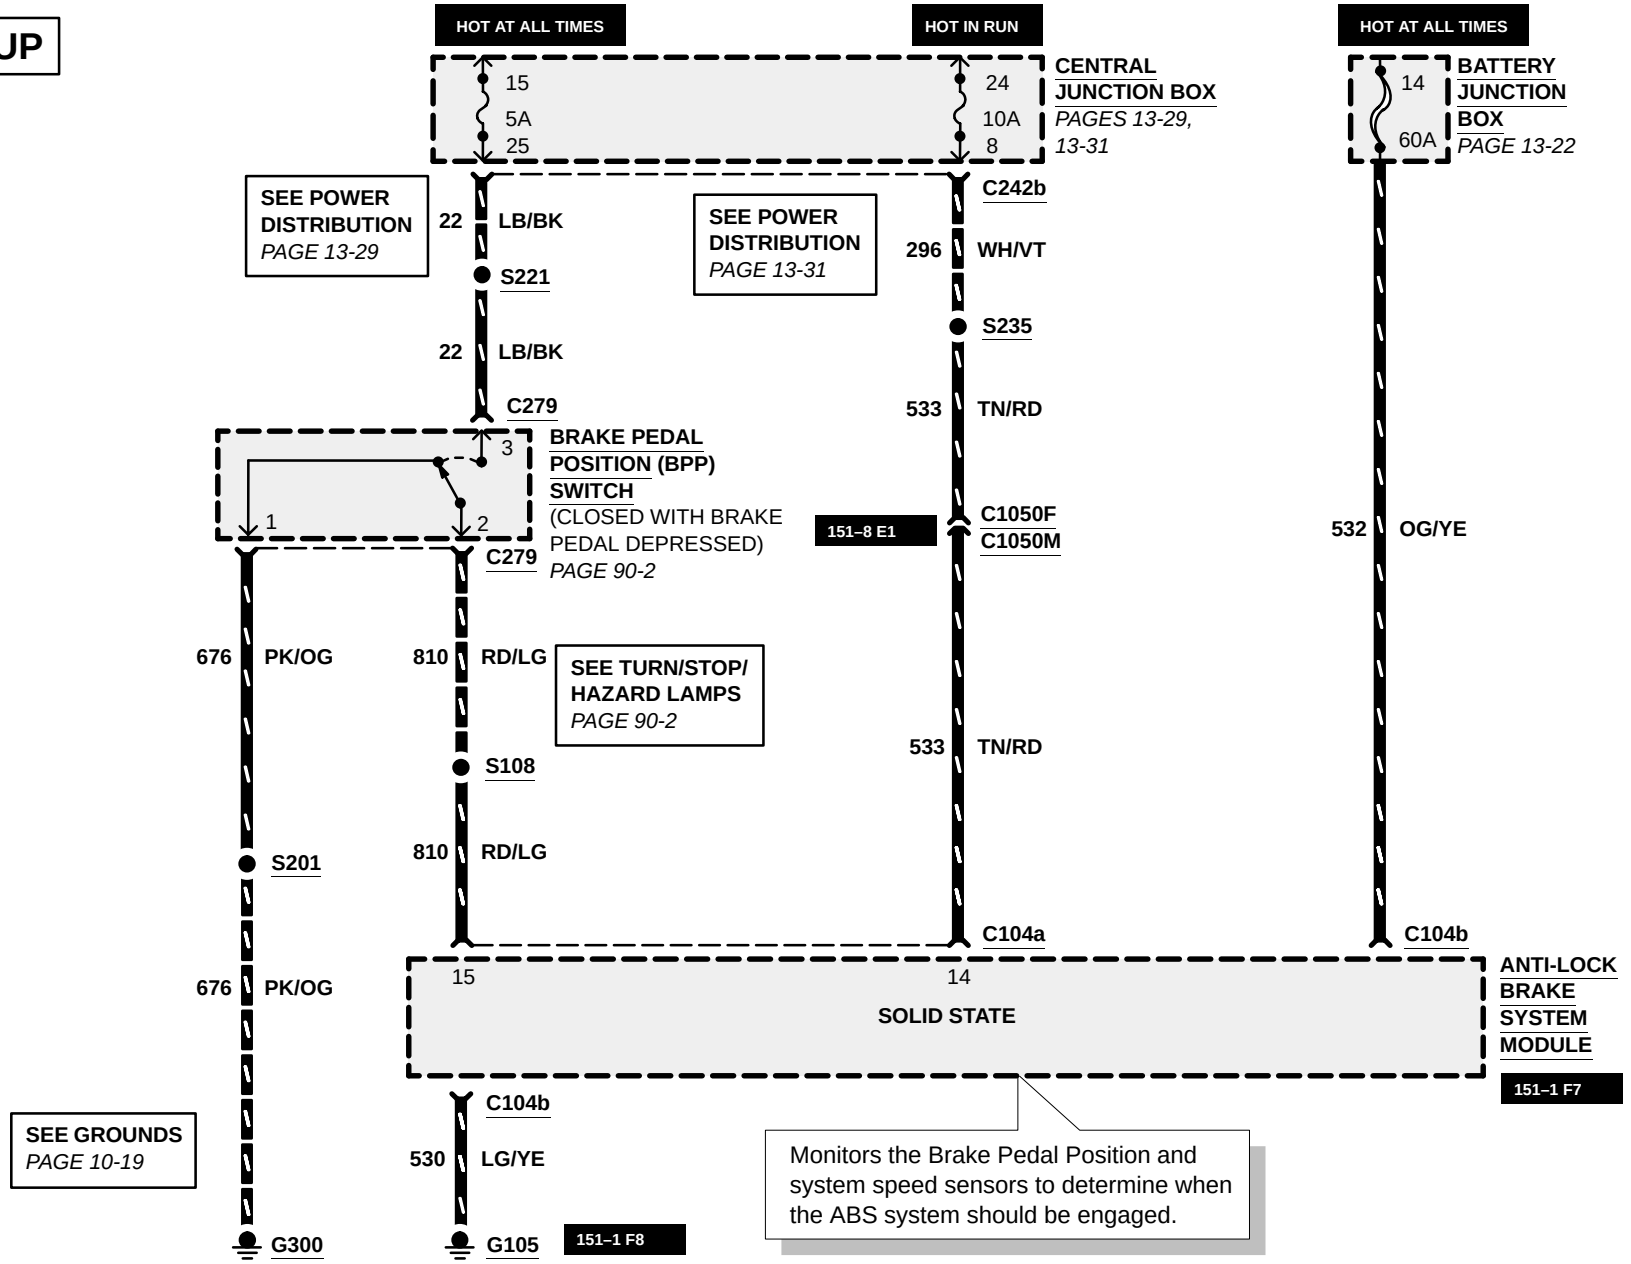
HOT AT ALL TIMES
HOT IN RUN
HOT AT ALL TIMES
15
5A
25
24
10A
8
14
60A
CENTRAL JUNCTION BOX
PAGES 13-29, 13-31
BATTERY JUNCTION BOX
PAGE 13-22
SEE POWER DISTRIBUTION
PAGE 13-29
SEE POWER DISTRIBUTION
PAGE 13-31
22 LB/BK
S221
22 LB/BK
C279
C242b
296 WH/VT
S235
533 TN/RD
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
PAGE 90-2
1
2
3
C279
151–8 E1
C1050F
C1050M
532 OG/YE
676 PK/OG
810 RD/LG
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-2
533 TN/RD
S108
810 RD/LG
S201
676 PK/OG
C104a
C104b
15
14
SOLID STATE
ANTI-LOCK BRAKE SYSTEM MODULE
151–1 F7
C104b
530 LG/YE
SEE GROUNDS
PAGE 10-19
G300
G105
151–1 F8
Monitors the Brake Pedal Position and system speed sensors to determine when the ABS system should be engaged.