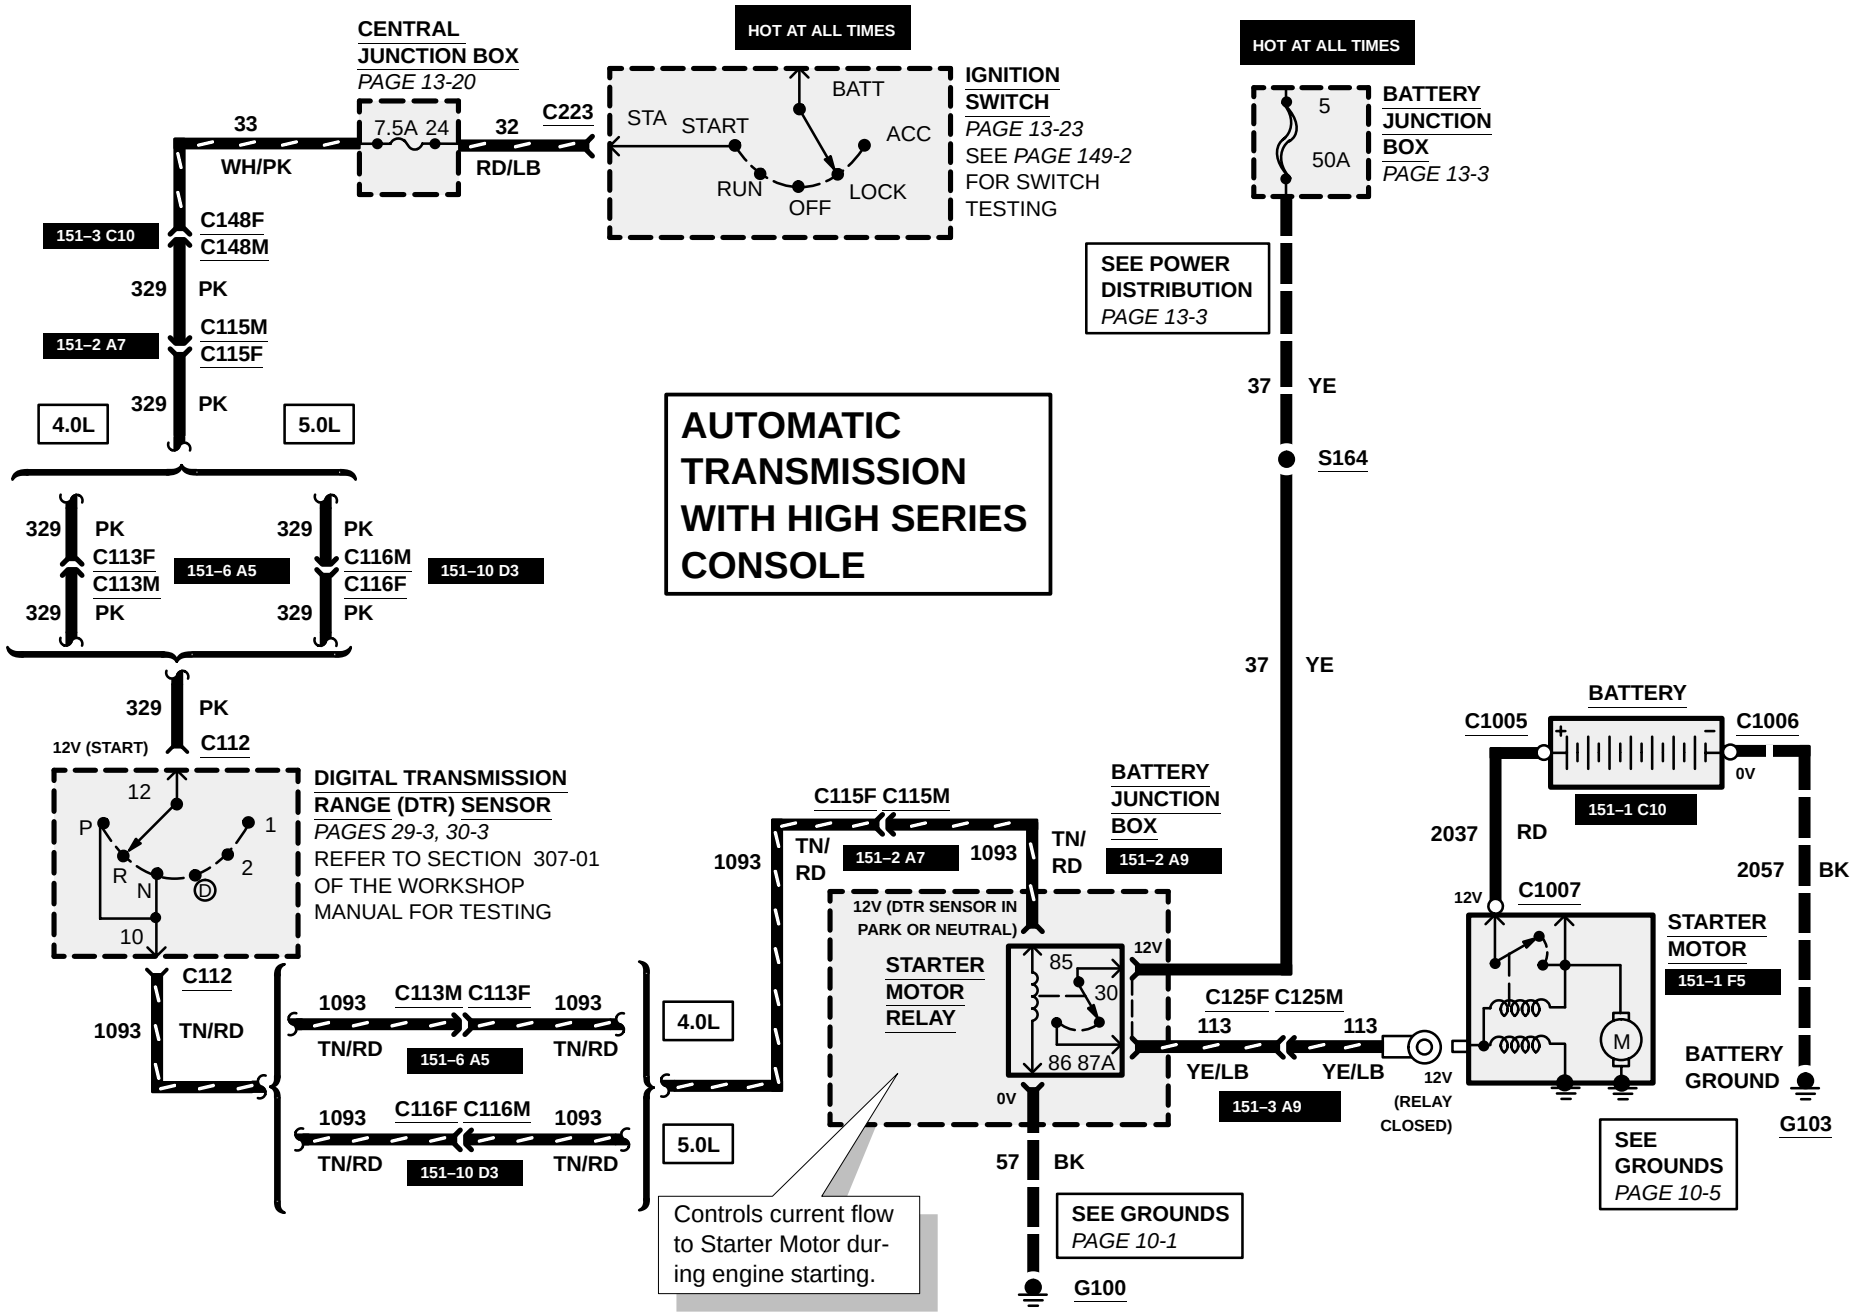
CENTRAL JUNCTION BOX
PAGE 13-20
HOT AT ALL TIMES
IGNITION SWITCH
PAGE 13-23
SEE PAGE 149-2 FOR SWITCH TESTING
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-3
SEE POWER DISTRIBUTION
PAGE 13-3
AUTOMATIC TRANSMISSION WITH HIGH SERIES CONSOLE
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGES 29-3, 30-3
REFER TO SECTION 307-01 OF THE WORKSHOP MANUAL FOR TESTING
STARTER MOTOR RELAY
12V (DTR SENSOR IN PARK OR NEUTRAL)
BATTERY JUNCTION BOX
BATTERY
STARTER MOTOR
BATTERY GROUND
SEE GROUNDS
PAGE 10-5
SEE GROUNDS
PAGE 10-1
Controls current flow to Starter Motor during engine starting.
4.0L
5.0L
151–3 C10
151–2 A7
151–6 A5
151–10 D3
151–2 A9
151–1 C10
151–1 F5
151–3 A9
C148F
C148M
C115M
C115F
C113F
C113M
C116M
C116F
C112
C223
C125F
C125M
S164
G103
G100
33
WH/PK
7.5A 24
32
RD/LB
329 PK
37 YE
1093 TN/RD
2037 RD
2057 BK
57 BK
113 YE/LB
12V (START)
12V (RELAY CLOSED)
0V
STA
START
BATT
ACC
RUN
OFF
LOCK
5
50A
P
R
N
D
1
2
10
12
85
30
86 87A