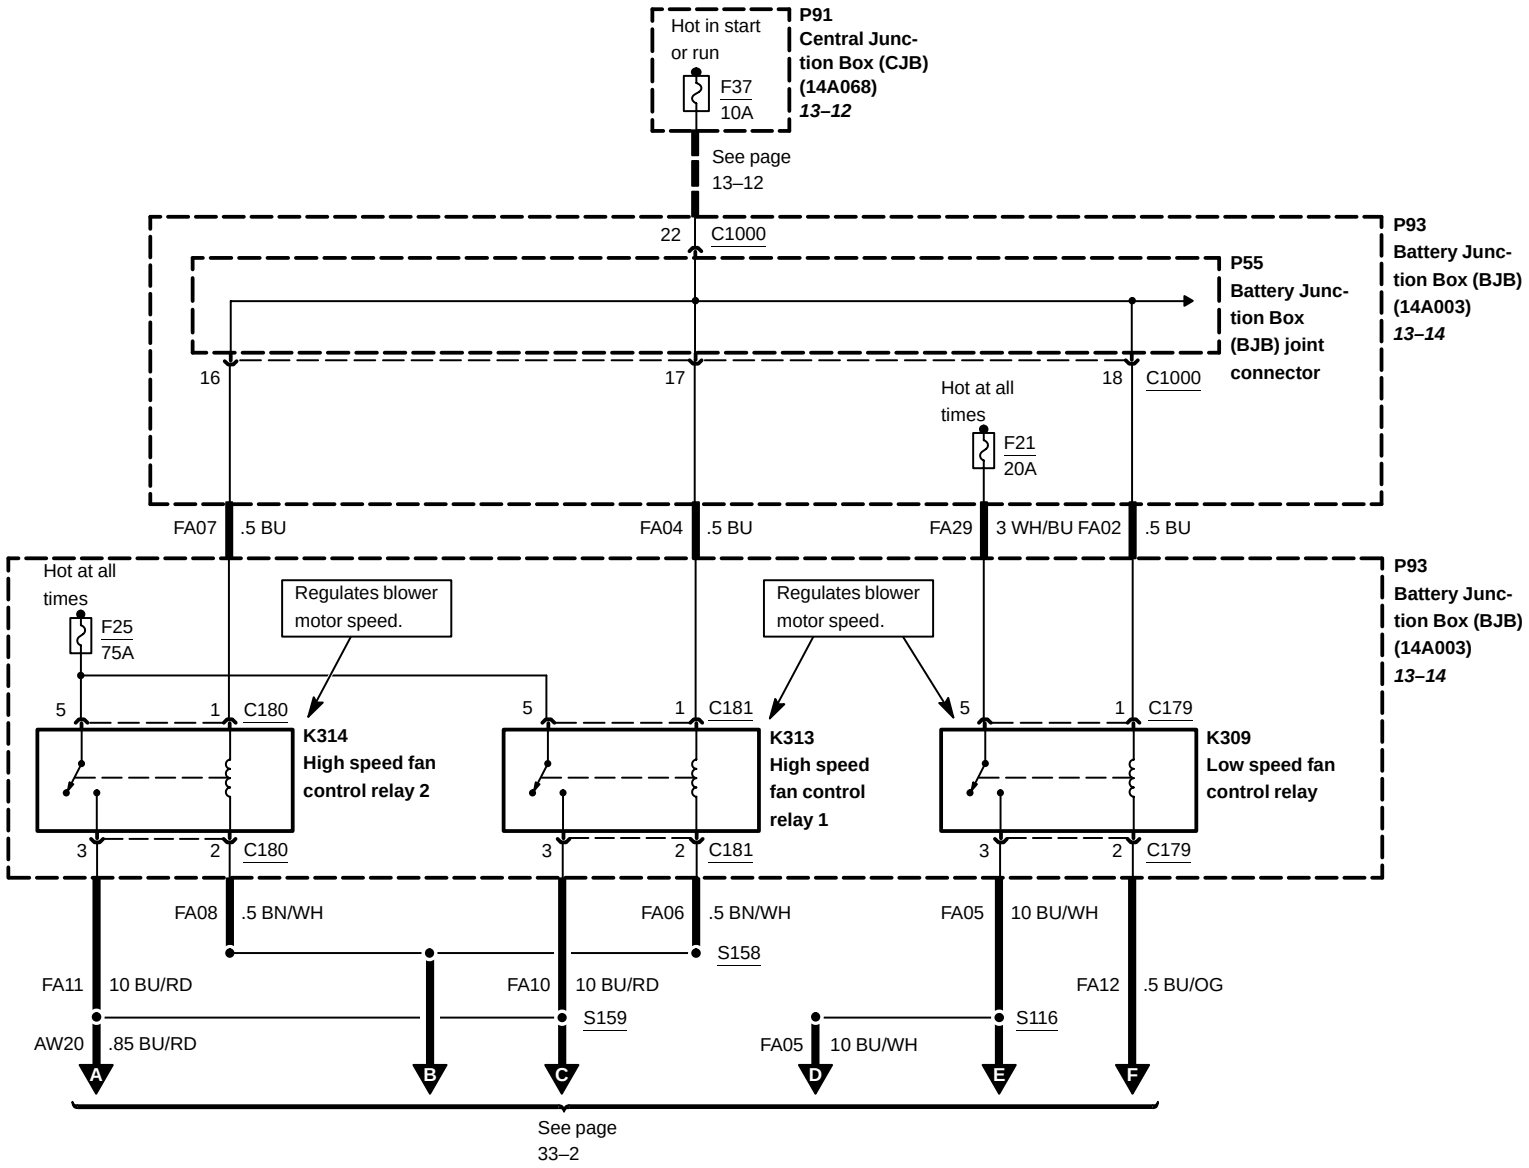
Hot in start or run
F37
10A
P91
Central Junction Box (CJB)
(14A068)
13–12
See page 13–12
22 C1000
P93
Battery Junction Box (BJB)
(14A003)
13–14
P55
Battery Junction Box (BJB) joint connector
16
17
18 C1000
Hot at all times
F21
20A
FA07 .5 BU
FA04 .5 BU
FA29 3 WH/BU FA02 .5 BU
Hot at all times
F25
75A
Regulates blower motor speed.
Regulates blower motor speed.
5 1 C180
5 1 C181
5 1 C179
K314
High speed fan control relay 2
K313
High speed fan control relay 1
K309
Low speed fan control relay
3 2 C180
3 2 C181
3 2 C179
FA08 .5 BN/WH
FA06 .5 BN/WH
FA05 10 BU/WH
S158
FA11 10 BU/RD
FA10 10 BU/RD
FA12 .5 BU/OG
S159
S116
AW20 .85 BU/RD
FA05 10 BU/WH
A
B
C
D
E
F
See page 33–2