PIN	CIRCUIT	CIRCUIT FUNCTION
66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor
67	–	NOT USED
68	1100 (GY/BK)	Fuel Injector #9
69	331 (PK/YE)	A/C Clutch Relay
70	–	NOT USED
71	361 (RD)	Power Input
72	561 (TN/RD)	Fuel Injector #7
73	559 (TN/BK)	Fuel Injector #5
74	557 (BN/YE)	Fuel Injector #3
75	555 (TN)	Fuel Injector #1
76	570 (BK/WH)	Ground
77	570 (BK/WH)	Ground
78	1027 (PK/LB)	Coil On Plug #2
79	1029 (WH/RD)	Coil On Plug #8
80	926 (LB/OG)	Fuel Pump Relay Control
81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
82	1142 (WH/RD)	Coil On Plug #9
83	264 (WH/LB)	Idle Air Control (IAC) Valve
84	–	NOT USED
85	795 (DG)	Cam Sensor Signal
86	136 (DB/YE)	Output Shaft Speed Sensor
87	94 (RD/BK)	HEGO #21
88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Reference Output Voltage
91	359 (GY/RD)	Sensor Signal Return
92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
93	387 (RD/WH)	HEGO Sensor Heater #11 Voltage Monitor
94	388 (YE/LB)	HEGO Sensor Heater #21 Voltage Monitor
95	–	NOT USED
96	–	NOT USED
97	361 (RD)	Power Input
98	562 (LB)	Fuel Injector #8
99	560 (LG/OG)	Fuel Injector #6
100	558 (BN/LG)	Fuel Injector #4
101	556 (WH)	Fuel Injector #2
102	1141 (YE/BK)	Coil On Plug #4
103	570 (BK/WH)	Ground
104	1026 (PK/WH)	Coil On Plug #3

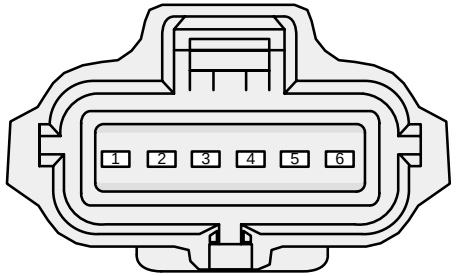

C1041

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	359 (GY/RD)	Sensor Signal Return
2	361 (RD)	Power (Hot in Start And Run)
3	570 (BK/WH)	Power Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Output
6	743 (GN)	Intake Air Temperature (IAT) Sensor