C862

N321
Park/neutral position
(PNP) switch

12A522



F02058

14N000

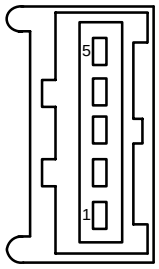

F05024

Pin	Circuit	Circuit function
1	15-LG28 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	15S-LG9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
3	–	not used
4	–	not used
5	–	not used

C882

14K733

N76
Dual pressure
switch

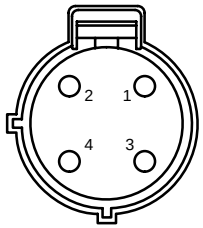

F04030

Pin	Circuit	Circuit function
1	91S-PA13 (BK/BU)	Ground, Switched
2	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
3	91-PA13 (BK/BU)	Ground
4	15S-RE9 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched