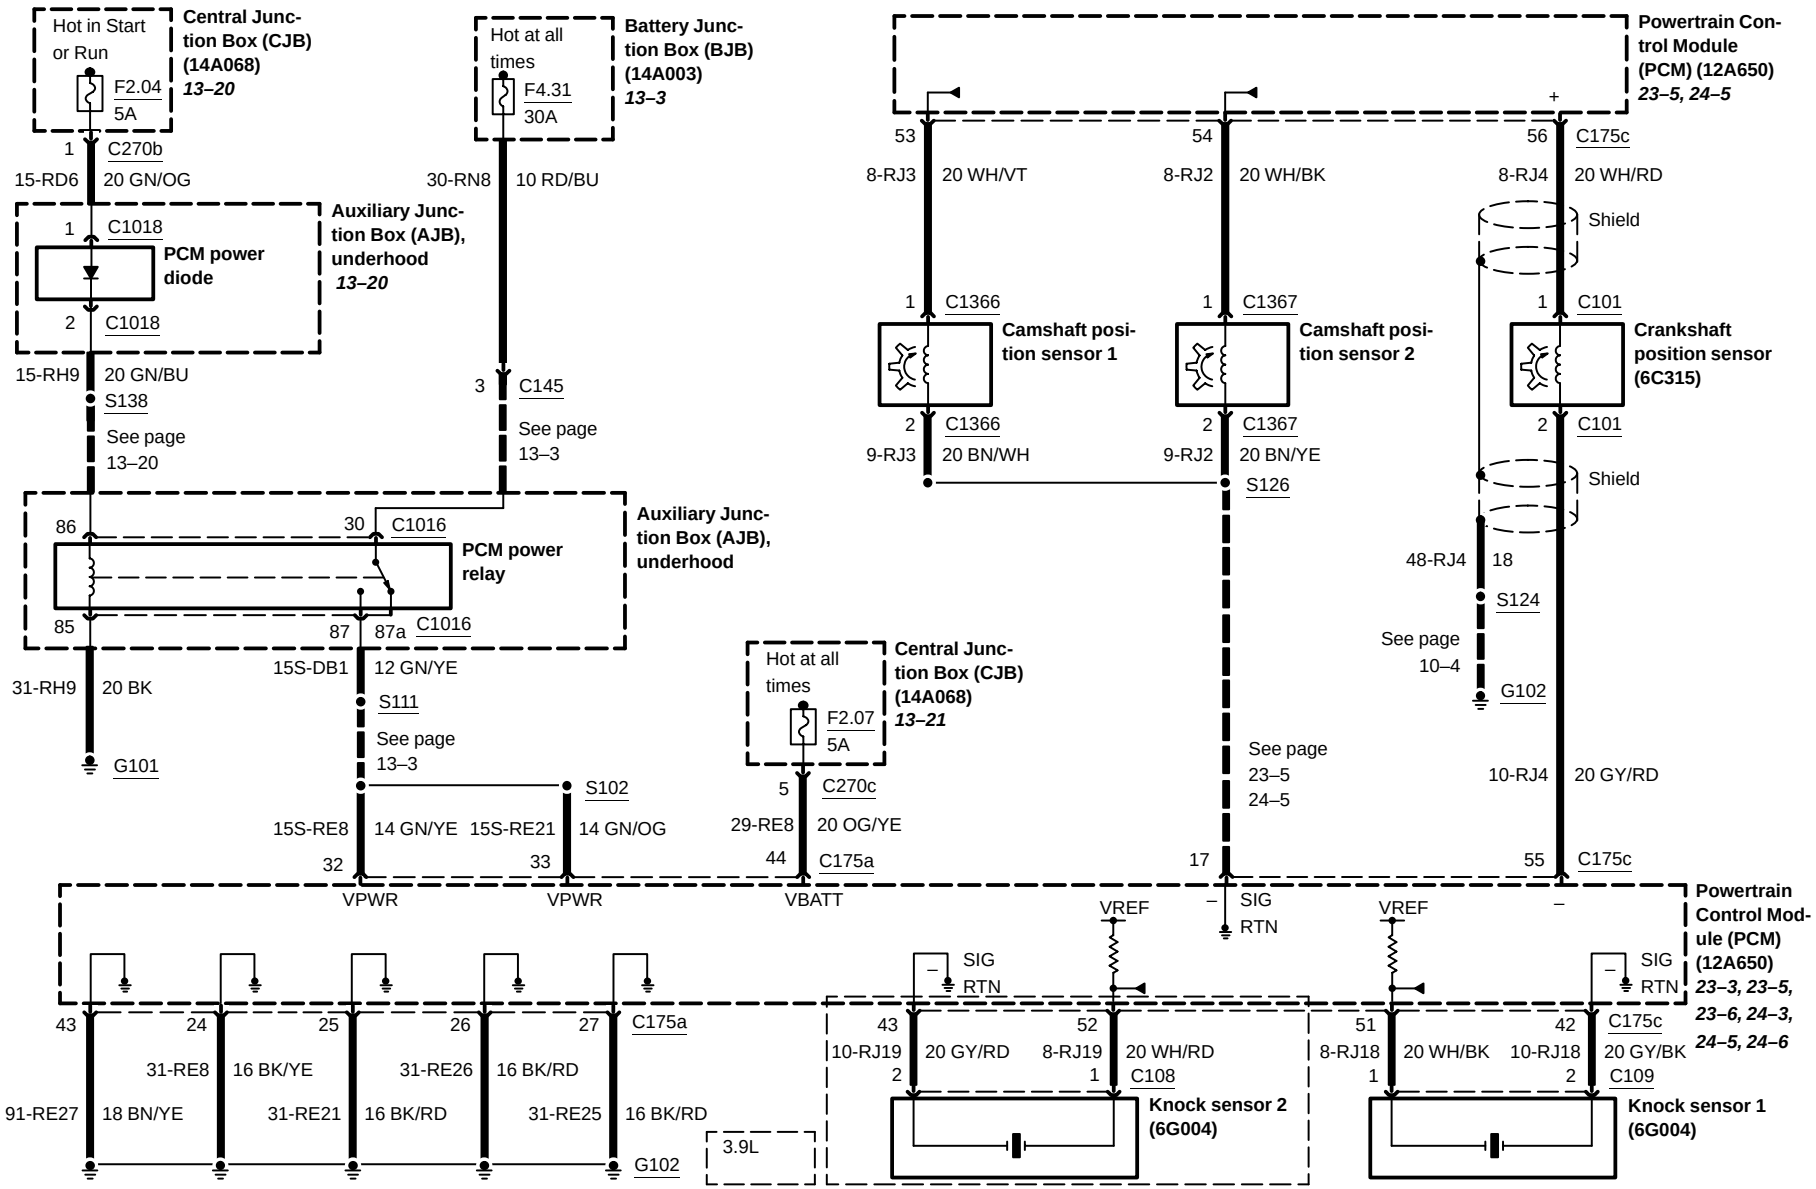
Hot in Start or Run
F2.04
5A
Central Junction Box (CJB) (14A068) 13–20
1
C270b
15-RD6
20 GN/OG
Hot at all times
F4.31
30A
Battery Junction Box (BJB) (14A003) 13–3
30-RN8
10 RD/BU
Powertrain Control Module (PCM) (12A650) 23–5, 24–5
53
54
56
C175c
8-RJ3
20 WH/VT
8-RJ2
20 WH/BK
8-RJ4
20 WH/RD
Shield
1
C1018
PCM power diode
2
C1018
Auxiliary Junction Box (AJB), underhood 13–20
1
C1366
Camshaft position sensor 1
1
C1367
Camshaft position sensor 2
1
C101
Crankshaft position sensor (6C315)
15-RH9
20 GN/BU
S138
See page 13–20
3
C145
See page 13–3
2
C1366
9-RJ3
20 BN/WH
2
C1367
9-RJ2
20 BN/YE
S126
2
C101
Shield
48-RJ4
18
S124
See page 10–4
G102
86
30
C1016
PCM power relay
85
87
87a
C1016
Auxiliary Junction Box (AJB), underhood
15S-DB1
12 GN/YE
S111
See page 13–3
31-RH9
20 BK
G101
Hot at all times
F2.07
5A
Central Junction Box (CJB) (14A068) 13–21
See page 23–5 24–5
10-RJ4
20 GY/RD
S102
5
C270c
15S-RE8
14 GN/YE
15S-RE21
14 GN/OG
29-RE8
20 OG/YE
32
33
44
C175a
17
55
C175c
VPWR
VPWR
VBATT
SIG RTN
VREF
SIG RTN
VREF
SIG RTN
Powertrain Control Module (PCM) (12A650) 23–3, 23–5, 23–6, 24–3, 24–5, 24–6
43
24
25
26
27
C175a
31-RE8
16 BK/YE
31-RE26
16 BK/RD
91-RE27
18 BN/YE
31-RE21
16 BK/RD
31-RE25
16 BK/RD
G102
3.9L
43
10-RJ19
2
20 GY/RD
52
8-RJ19
1
20 WH/RD
C108
Knock sensor 2 (6G004)
51
8-RJ18
1
20 WH/BK
42
10-RJ18
2
C175c
20 GY/BK
C109
Knock sensor 1 (6G004)