C818

14401

B36
Steering position sensor

F06065

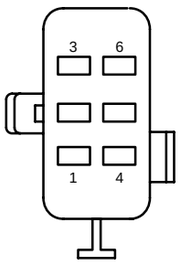

Pin	Circuit	Circuit Function
1	91-CE8 (BK/OG)	Ground
2	4-EG15 (GY/OG)	Data link, bus positive
3	5-EG15 (BU/BK)	Data link, bus negative
4	29-CE8 (OG)	Voltage supplied at all times (overload protected)
5	15-CE8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
6	–	not used

C825 (RD)

14401

N81
Clutch pedal position switch

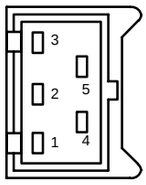

F05012

Pin	Circuit	Circuit Function
1	15S-PG17 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	15S-PG7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	8-BB6 (WH)	Sensor signal
5	9-BB6 (BN)	Sensor signal return (reference/ground)

C820 (GY)

14405

E57
Luggage compartment lamp

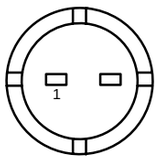

F02019

Pin	Circuit	Circuit Function
1	31S-LB25 (BK/BU)	Ground, switched
2	29-LB25 (OG/BU)	Voltage supplied at all times (overload protected)

C828 (BK)

14K733

M74
Two–way washer pump motor

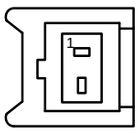

F02014

Pin	Circuit	Circuit Function
1	32-KA34 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	33-KA34 (YE/BK)	Switched between: Battery voltage, Ground or Open

C824 (GN)

14401

N82
Brake pedal position switch

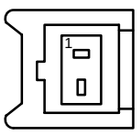

F02014

Pin	Circuit	Circuit Function
1	15S-PG16 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15-PG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched