C504a (BK)

14631

Master window adjust switch (14529)

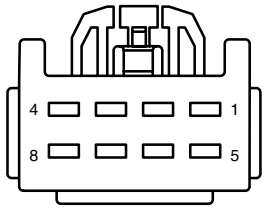

F08167

Pin	Circuit	Circuit function
1	317 (GY/OG)	Window switch, feed, left rear, Down
2	316 (YE/LB)	Window switch, feed, left rear, Up
3	320 (RD/BK)	Window switch, feed, right rear, Up
4	319 (YE/BK)	Window switch, feed, right rear, Down
5	992 (WH/BK)	Master window adjust switch (14529), feed, Up
6	991 (TN/LB)	Master window adjust switch (14529), feed, Down
7	314 (TN/LB)	Window switch, feed, right front, Up
8	313 (WH/YE)	Window switch, feed, right front, Down

C504b (GY)

14631

Master window adjust switch (14529)

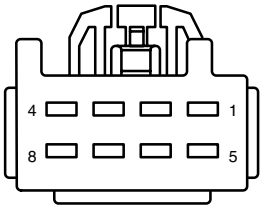

F08219

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	57 (BK)	Ground
6	–	not used
7	193 (YE/LG)	Window lockout, control
8	400 (LB/BK)	Accessory delay relay, output