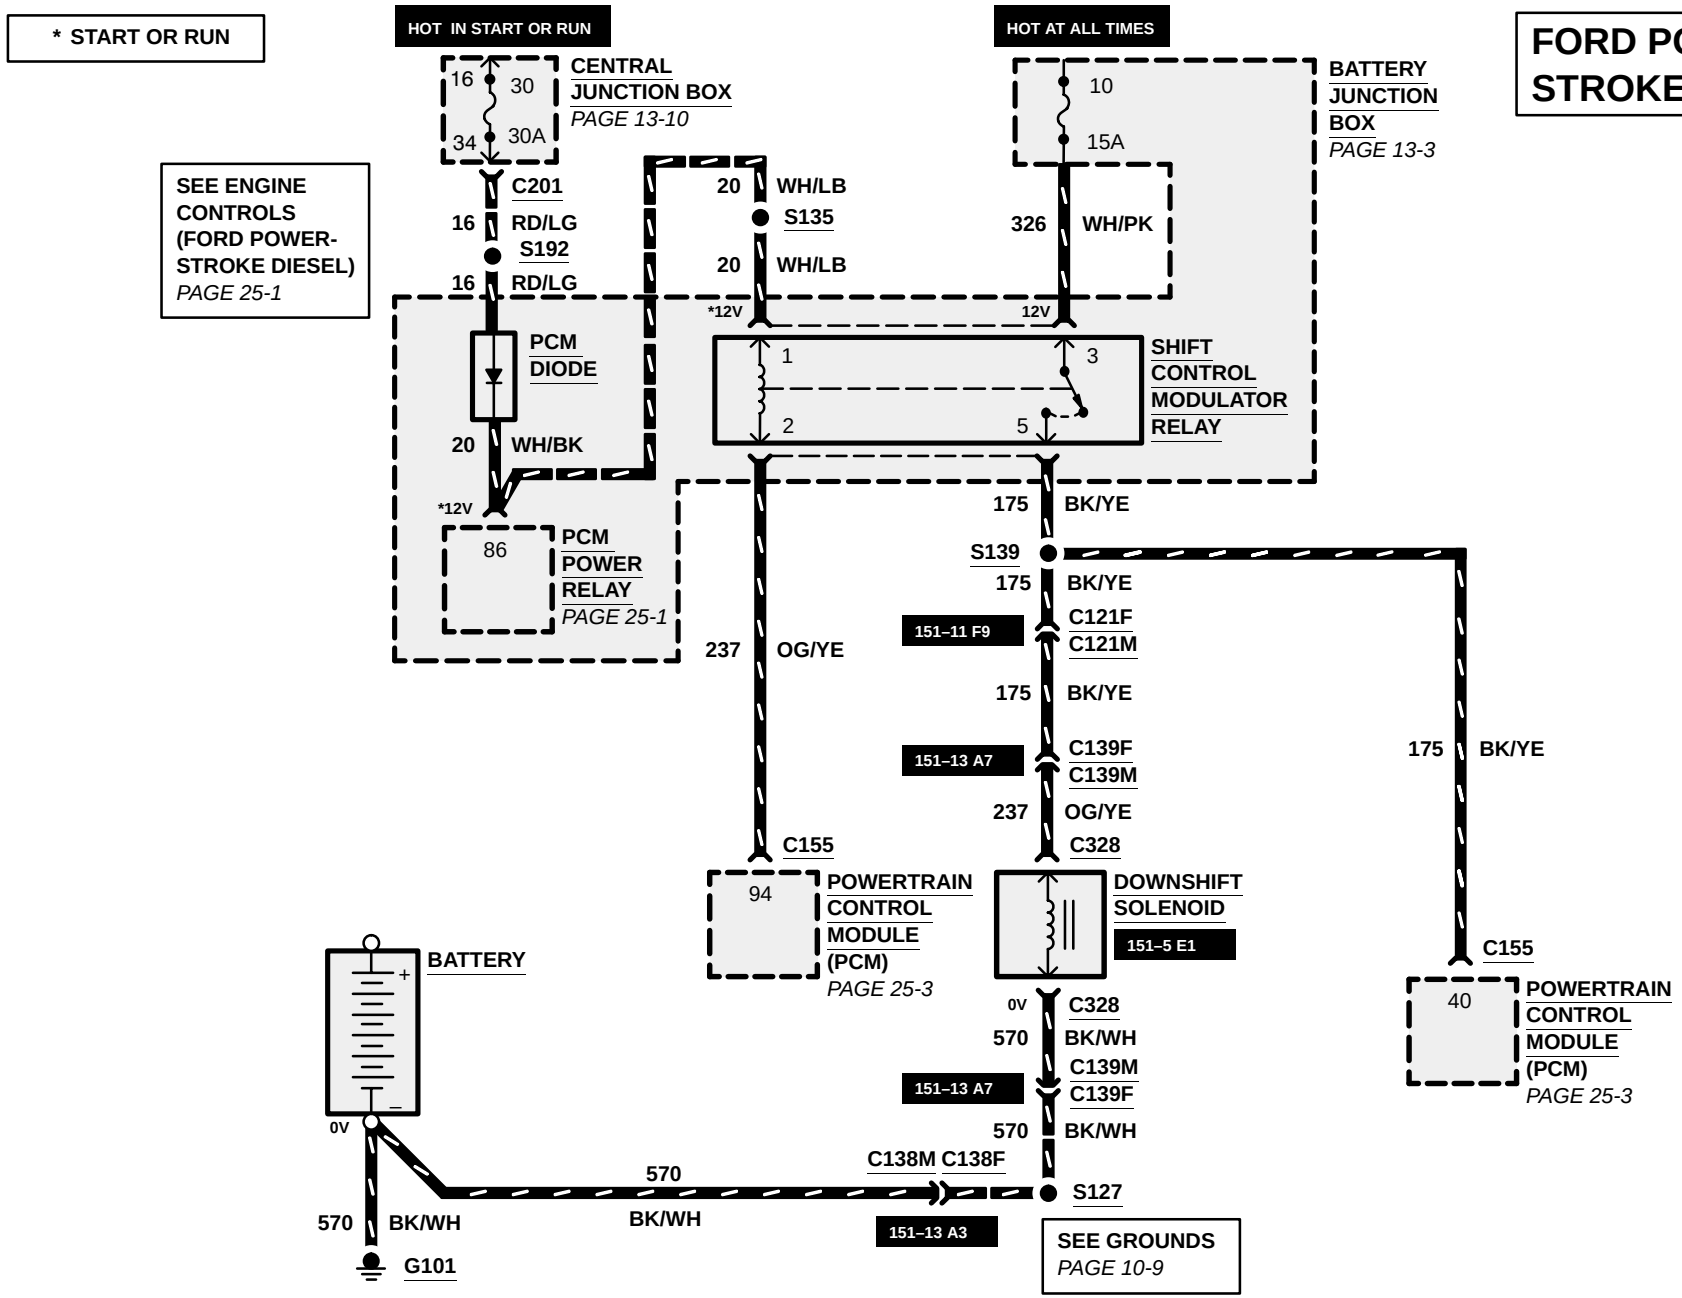
* START OR RUN
HOT IN START OR RUN
HOT AT ALL TIMES
FORD POWER-STROKE DIESEL
SEE ENGINE CONTROLS (FORD POWER-STROKE DIESEL) PAGE 25-1
CENTRAL JUNCTION BOX PAGE 13-10
BATTERY JUNCTION BOX PAGE 13-3
16
30
34
30A
10
15A
C201
16 RD/LG
S192
16 RD/LG
20 WH/LB
S135
20 WH/LB
326 WH/PK
*12V
12V
PCM DIODE
20 WH/BK
*12V
86
PCM POWER RELAY PAGE 25-1
1
2
3
5
SHIFT CONTROL MODULATOR RELAY
175 BK/YE
S139
175 BK/YE
151–11 F9
C121F
C121M
237 OG/YE
175 BK/YE
151–13 A7
C139F
C139M
237 OG/YE
C328
175 BK/YE
C155
94
POWERTRAIN CONTROL MODULE (PCM) PAGE 25-3
DOWNSHIFT SOLENOID
151–5 E1
C155
40
POWERTRAIN CONTROL MODULE (PCM) PAGE 25-3
BATTERY
+
–
0V
0V
C328
570 BK/WH
C139M
C139F
151–13 A7
570 BK/WH
C138M C138F
570 BK/WH
570 BK/WH
S127
151–13 A3
G101
SEE GROUNDS PAGE 10-9