W/POWER SLIDING DOOR

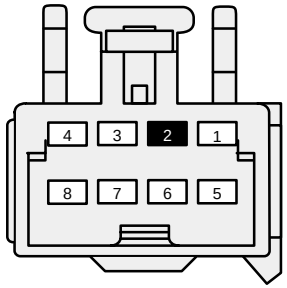

C337

RIGHT SLIDING DOOR CONTACT

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1251 (YE/RD)	Return
2	–	NOT USED
3	1227 (WH)	Right Detent Switch
4	1252 (GY/RD)	Right Unlatch
5	802 (OG/RD)	Right Rear Speaker (+)
6	1385 (LG)	Right Power Sliding Door Lock
7	1386 (VT)	Right Power Sliding Door Unlock
8	803 (OG/LG)	Right Rear Speaker (–)

W/POWER SLIDING DOOR

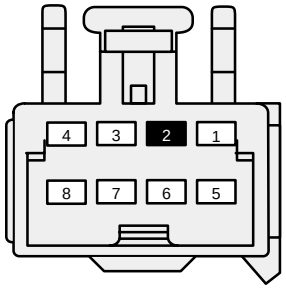

C338

LEFT SLIDING DOOR CONTACT

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1251 (YE/RD)	Return
2	–	NOT USED
3	1227 (WH)	Left Detent Switch
4	1252 (GY/RD)	Left Unlatch
5	800 (GY/LB)	Left Rear Speaker (+)
6	1387 (VT)	Left Power Sliding Door Lock
7	1388 (GY)	Left Power Sliding Door Unlock
8	801 (TN/YE)	Left Rear Speaker (–)

REVISED