REVISED

PICKUP

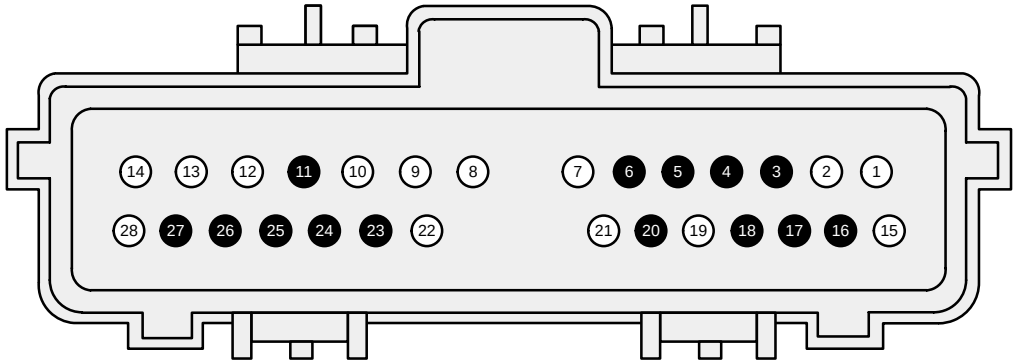


**C223**

**AIR BAG DIAGNOSTIC MODULE**

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|---|---|---|
| 1 | 614 (GY/OG) | Air Bag Driver Feed Monitor | 15 | 615 (GY/WH) | Air Bag Driver Return |
| 2 | 937 (RD/WH) | Ignition (Hot in Run) | 16 | – | NOT USED |
| 3 | – | NOT USED | 17 | – | NOT USED |
| 4 | – | NOT USED | 18 | – | NOT USED |
| 5 | – | NOT USED | 19 | 70 (LB/WH) | ISO 9141 Link |
| 6 | – | NOT USED | 20 | – | NOT USED |
| 7 | 608 (BK/YE) | Air Bag Diagnostic Lamp Driver | 21 | 1203 (BK/LB) | Air Bag Dedicated Ground |
| 8 | 1113 (YE/LG) | Air Bag Deactivation Switch Lamp Driver | 22 | 1203 (BK/LB) | Air Bag Dedicated Ground |
| 9 | 1112 (WH/LB) | Air Bag Deactivation Switch Sense | 23 | – | NOT USED |
| 10 | 937 (RD/WH) | Vehicle Identification | 24 | – | NOT USED |
| 11 | – | NOT USED | 25 | – | NOT USED |
| 12 | 1203 (BK/LB) | Vehicle Identification | 26 | – | NOT USED |
| 13 | 1083 (LB/BK) | Air Bag Tone Driver Output | 27 | – | NOT USED |
| 14 | 607 (LB/OG) | Air Bag Passenger Feed Driver | 28 | 616 (PK/BK) | Air Bag Passenger Return |

**CONNECTOR REFERENCE LIST**

| CONNECTOR | SECTION-PAGE |
|---|---|
| C240a | 59-9 |
| C242a | 13-39, 13-41 |
| C242b | 13-40, 13-42 |
| C250a | 60-7 |