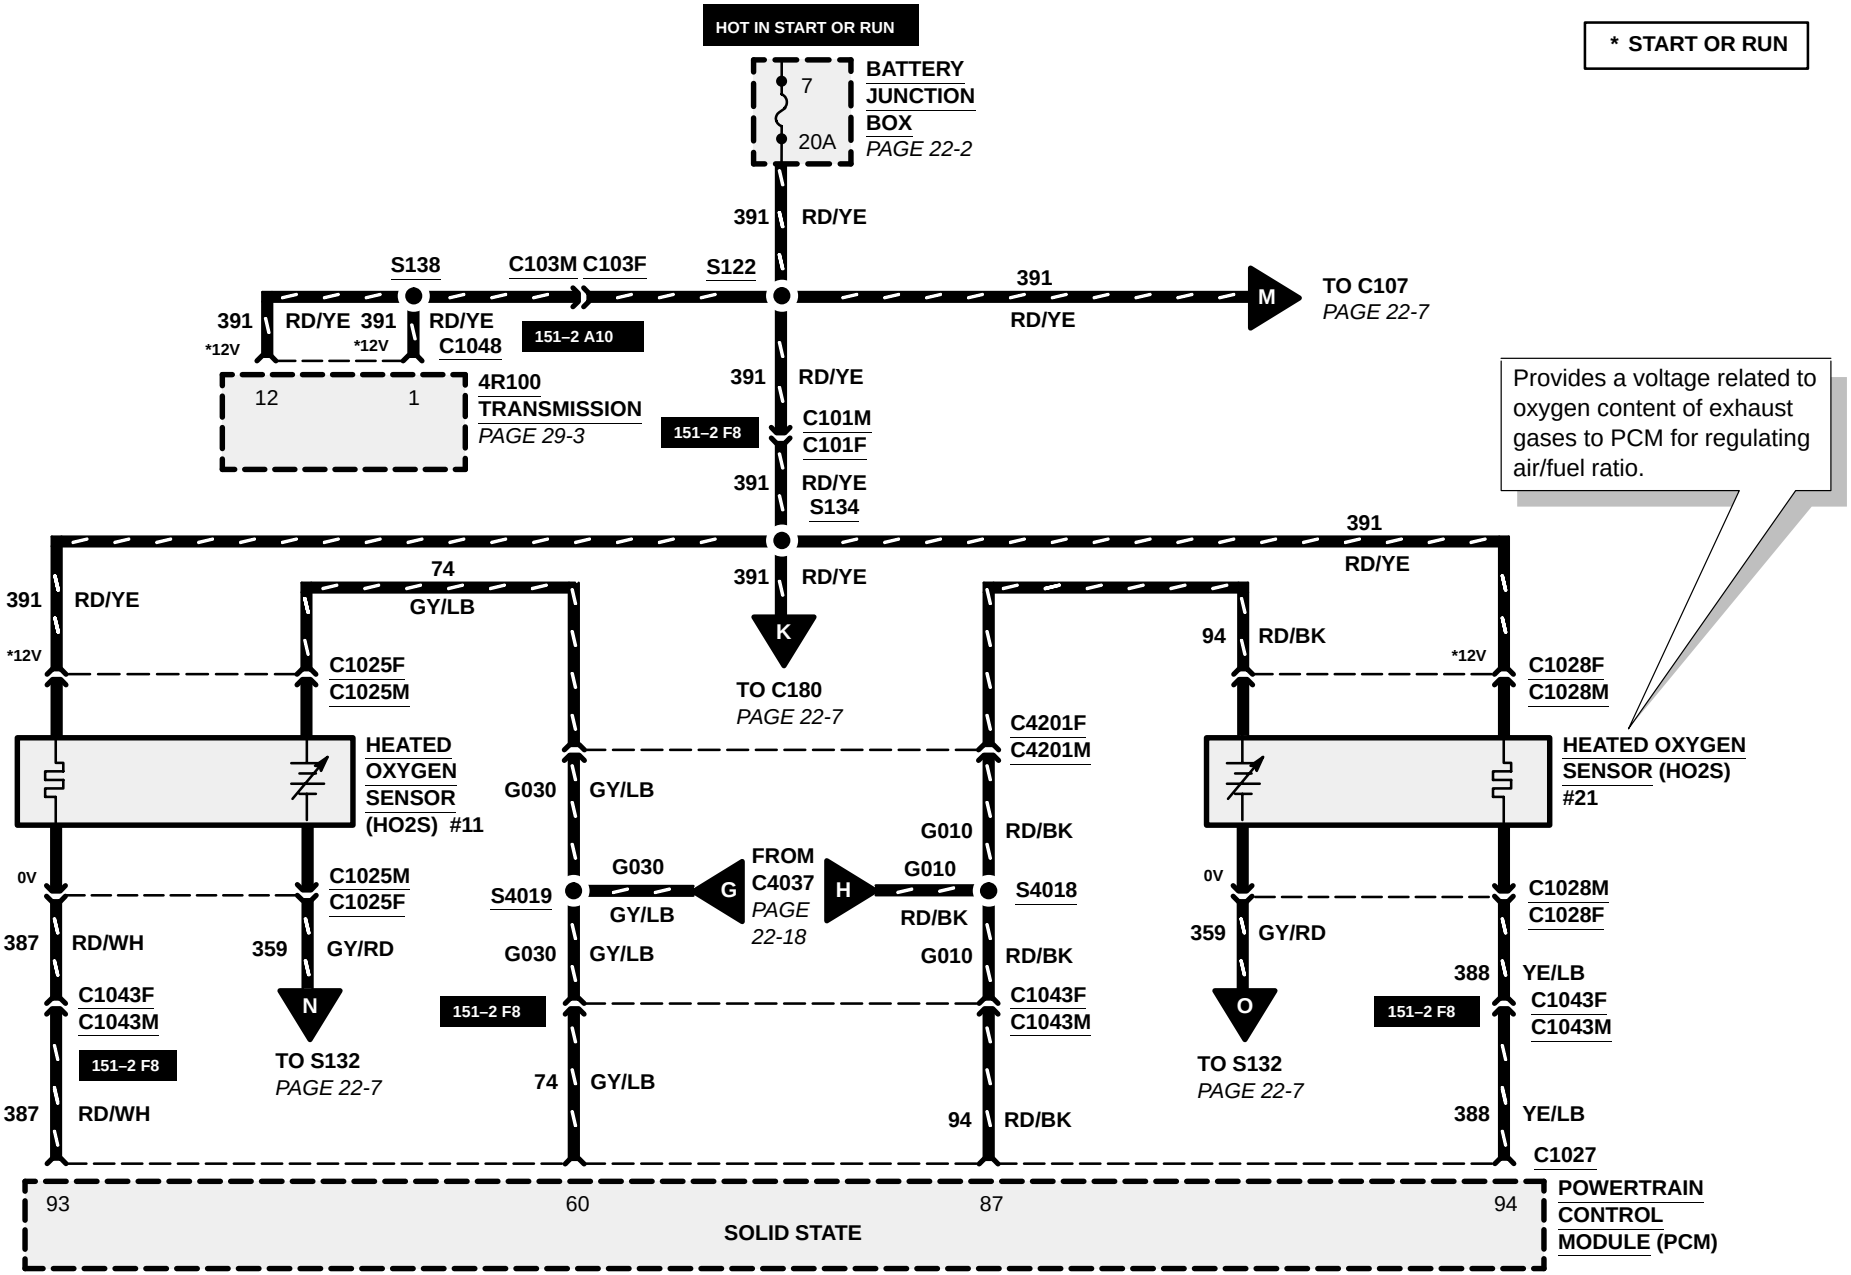
HOT IN START OR RUN
* START OR RUN
BATTERY JUNCTION BOX
PAGE 22-2
7
20A
391 RD/YE
S138
C103M C103F
S122
391 RD/YE
TO C107
PAGE 22-7
391 RD/YE 391 RD/YE
*12V *12V
C1048
151–2 A10
4R100 TRANSMISSION
PAGE 29-3
12 1
391 RD/YE
C101M C101F
151–2 F8
391 RD/YE
S134
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
391 RD/YE
74 GY/LB
391 RD/YE
391 RD/YE
TO C180
PAGE 22-7
94 RD/BK
*12V
C1028F C1028M
C4201F C4201M
HEATED OXYGEN SENSOR (HO2S) #21
HEATED OXYGEN SENSOR (HO2S) #11
G030 GY/LB
G010 RD/BK
0V
C1025M C1025F
S4019
G030 GY/LB
FROM C4037 PAGE 22-18
G
H
G010 RD/BK
S4018
0V
C1028M C1028F
387 RD/WH
359 GY/RD
G030 GY/LB
G010 RD/BK
359 GY/RD
388 YE/LB
C1043F C1043M
151–2 F8
C1043F C1043M
151–2 F8
151–2 F8
N
O
TO S132
PAGE 22-7
TO S132
PAGE 22-7
74 GY/LB
94 RD/BK
388 YE/LB
387 RD/WH
C1027
93 60 87 94
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)