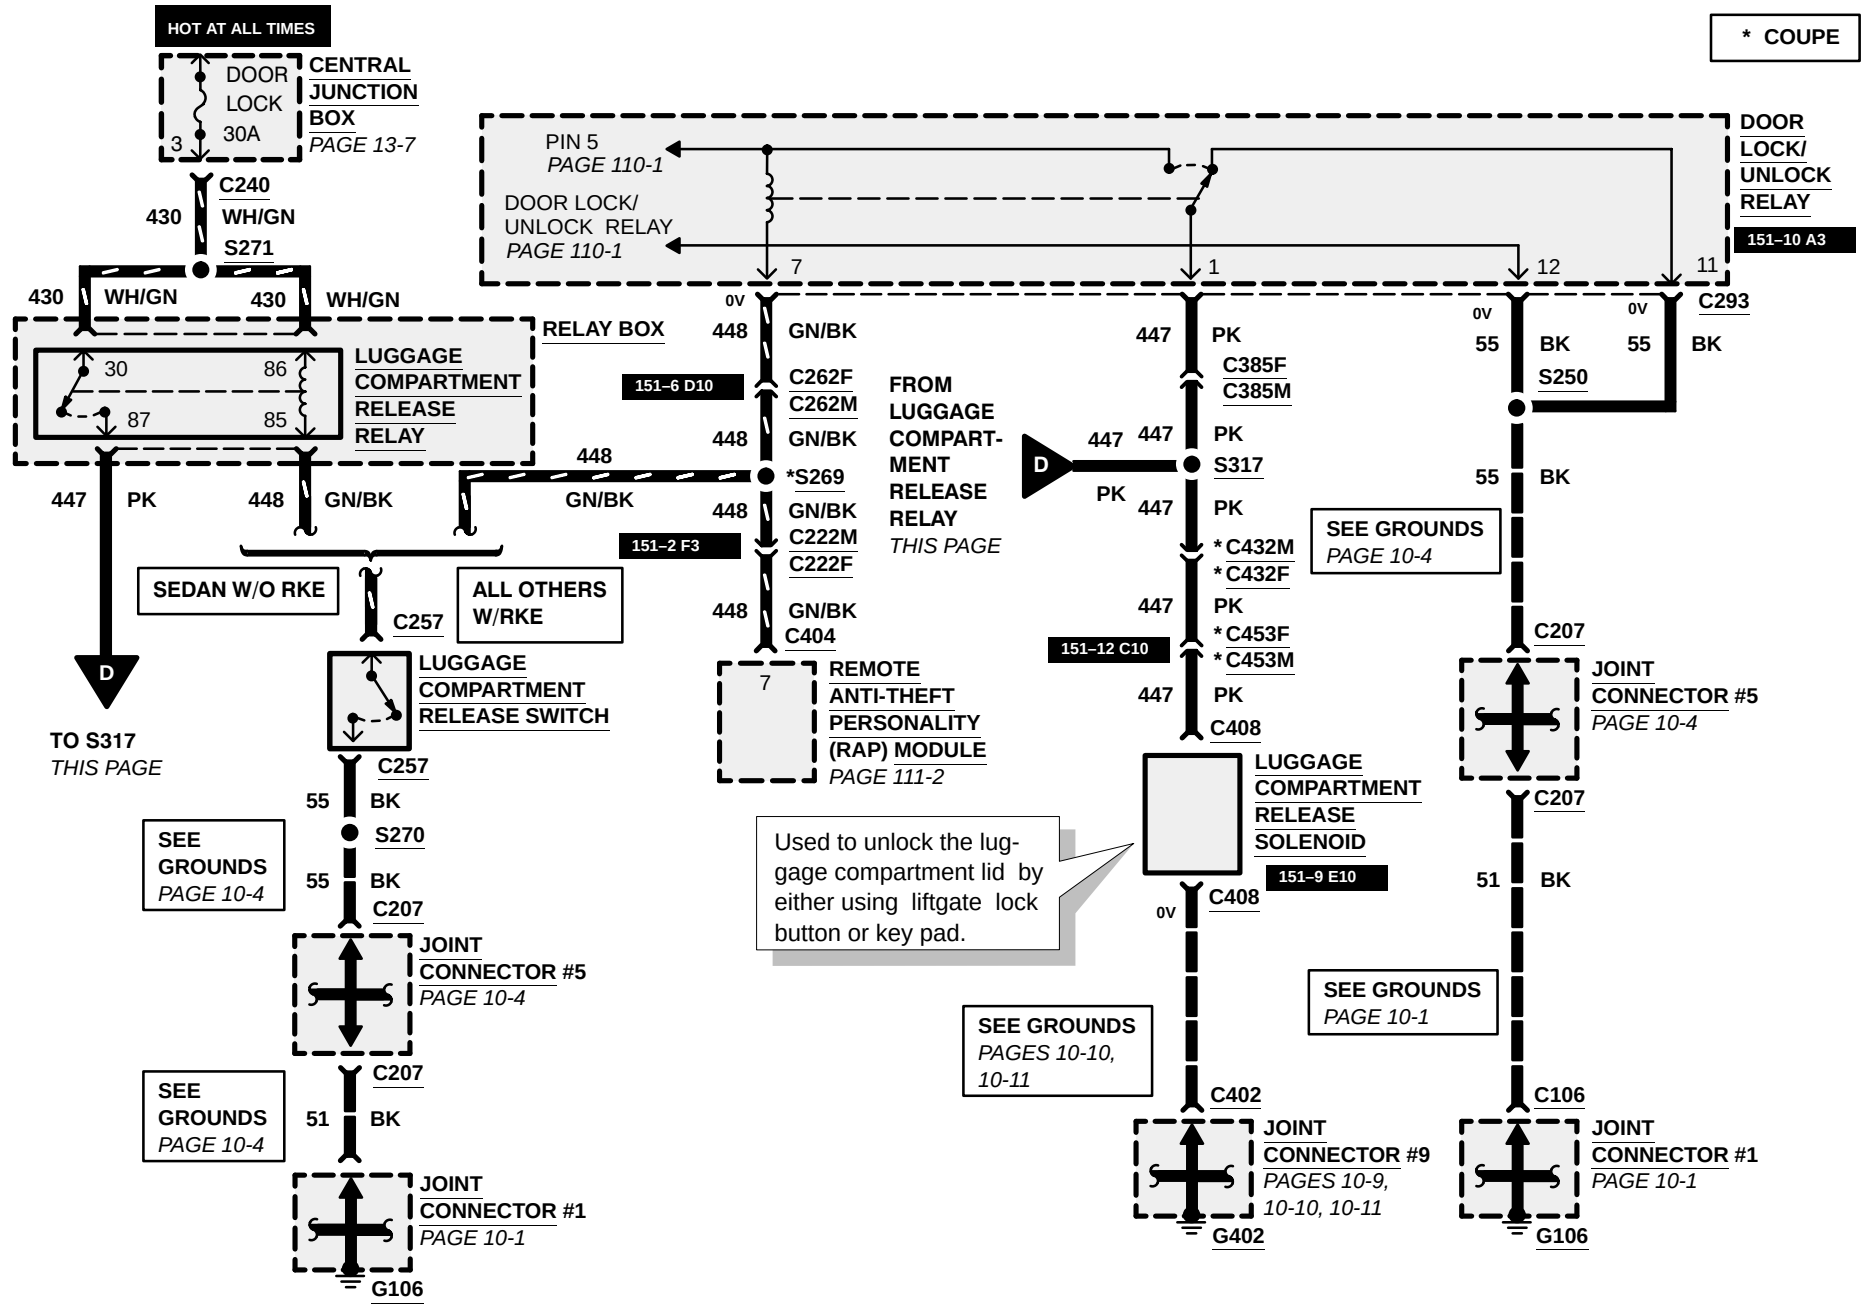
HOT AT ALL TIMES
DOOR LOCK 30A
3
CENTRAL JUNCTION BOX
PAGE 13-7
C240
430
WH/GN
S271
430 WH/GN
430 WH/GN
RELAY BOX
30
86
87
85
LUGGAGE COMPARTMENT RELEASE RELAY
447 PK
448 GN/BK
448 GN/BK
SEDAN W/O RKE
ALL OTHERS W/RKE
C257
LUGGAGE COMPARTMENT RELEASE SWITCH
TO S317
THIS PAGE
C257
55 BK
S270
SEE GROUNDS
PAGE 10-4
55 BK
C207
JOINT CONNECTOR #5
PAGE 10-4
C207
SEE GROUNDS
PAGE 10-4
51 BK
JOINT CONNECTOR #1
PAGE 10-1
G106
PIN 5
PAGE 110-1
DOOR LOCK/ UNLOCK RELAY
PAGE 110-1
7
1
12
11
DOOR LOCK/ UNLOCK RELAY
151–10 A3
* COUPE
0V
448 GN/BK
C262F
C262M
151–6 D10
448 GN/BK
*S269
448 GN/BK
C222M
C222F
151–2 F3
448 GN/BK
C404
7
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 111-2
FROM LUGGAGE COMPART-MENT RELEASE RELAY
THIS PAGE
447 PK
C385F
C385M
447 PK
S317
447 PK
*C432M
*C432F
447 PK
*C453F
*C453M
151–12 C10
447 PK
C408
LUGGAGE COMPARTMENT RELEASE SOLENOID
151–9 E10
0V
C408
Used to unlock the luggage compartment lid by either using liftgate lock button or key pad.
SEE GROUNDS
PAGES 10-10, 10-11
C402
JOINT CONNECTOR #9
PAGES 10-9, 10-10, 10-11
G402
0V
55 BK
S250
0V
55 BK
C293
55 BK
SEE GROUNDS
PAGE 10-4
C207
JOINT CONNECTOR #5
PAGE 10-4
C207
51 BK
SEE GROUNDS
PAGE 10-1
C106
JOINT CONNECTOR #1
PAGE 10-1
G106