C501

14N000

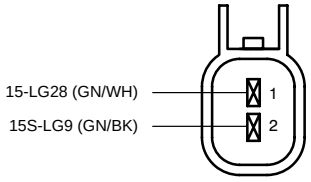

F02062

12A522

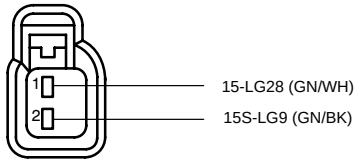

F02058

C502a (GY)

13A412 E9
Lamp assembly, left rear (13405)
2) Stoplamp

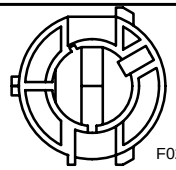

F02124

Pin	Circuit	Circuit function
	15S-LG14A (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
	31-LG14 (BK) + 31-LG14A (BK)	Ground

C502b (BN)

13A412 E9
Lamp assembly, left rear (13405)
2) Stoplamp

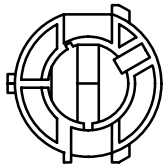

F02124

Pin	Circuit	Circuit function
	15S-LG14B (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
	31-LG14A (BK)	Ground

C502c (GY)

13A412 E9
Lamp assembly, left rear (13405)
6) Reversing lamp

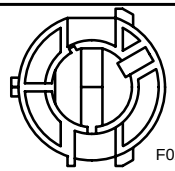

F02124

Pin	Circuit	Circuit function
	15S-LG16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
	31-LF13 (BK) + 31-LG16 (BK)	Ground

C502d (BK)

13A412 E9
Lamp assembly, left rear (13405)
1) Turn signal lamp
4) Tail lamp

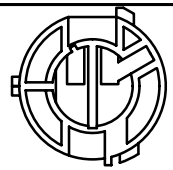

F03140

Pin	Circuit	Circuit function
	29S-LF11A (OG/WH)	Voltage supplied at all times (overload protected), Switched
	49-LG12 (BU)	Pulsed power feed (overload protected)
	31-LF11 (BK)	Ground