C4132

14405

Fuel tank selector valve

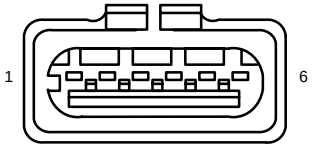

F06117

Pin	Circuit	Circuit function
1	–	not used
2	786 (RD)	Fuel tank selector switch
3	789 (BN/WH)	Fuel tank selector switch
4	673 (DB/YE)	Fuel sender, secondary
5	29 (YE/WH)	Reference voltage, from, Instrument cluster
6	675 (YE/LB)	Fuel sender, primary

C4145

12614

Air suspension module (3C142)

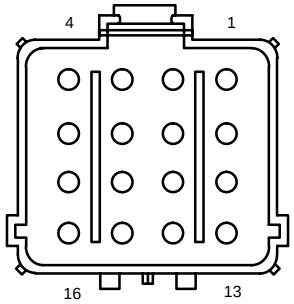

F16020

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	418 (DG/YE)	Battery voltage, hot in Run only
3	–	not used
4	424 (TN)	Air tank valve, control
5	417 (VT/OG)	Air suspension kneeling switch, to Radio control, rear
6	423 (VT/LG)	Air tank moisture removal valve, control
7	416 (LB/BK)	Air suspension compressor relay, control
8	414 (OG/RD)	Shock absorber solenoid valve, right rear (5A891), control
9	427 (PK/BK)	Air tank pressure sensor, monitor
10	419 (DG/LG)	Air Suspension, indicator
11	415 (LG/OG)	Shock absorber solenoid valve, left rear (5A891), Autolamp relay
12	–	not used
13	428 (OG/BK)	Battery voltage, to, Air tank pressure sensor
14	429 (VT/LG)	Sensor signal return (reference/ground)
15	–	not used
16	635 (YE)	Air Suspension, switch