C942

14A504

E245
Rail lamp, RH side
(13776)



F03239

Pin	Circuit	Circuit function
1	57 (BK/LB)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output
3	705 (LG/OG)	Battery saver relay, switched power

C943

14334

N483
Tonneau cover
open/close switch,
RH side (15B691)

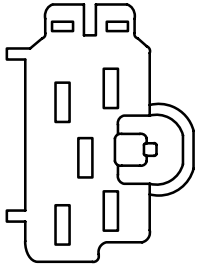

F07044

Pin	Circuit	Circuit function
1	57 (BK)	Illumination, Ground
2	–	not used
3	1631 (VT)	Power Tonneau Cover, Open
4	57 (BK)	Ground
5	19 (LB/YE)	Illumination
6	1629 (PK/LG)	Power Tonneau Cover, Close
7	–	not used

C944

14334

N482
Tonneau cover
open/close switch,
LH side (14529)

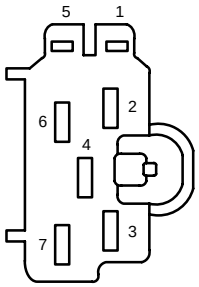

F07044

Pin	Circuit	Circuit function
1	57 (BK)	Illumination, Ground
2	–	not used
3	1631 (VT)	Power Tonneau Cover, Open
4	57 (BK)	Ground
5	19 (LB/YE)	Illumination
6	1629 (PK/LG)	Power Tonneau Cover, Close
7	–	not used