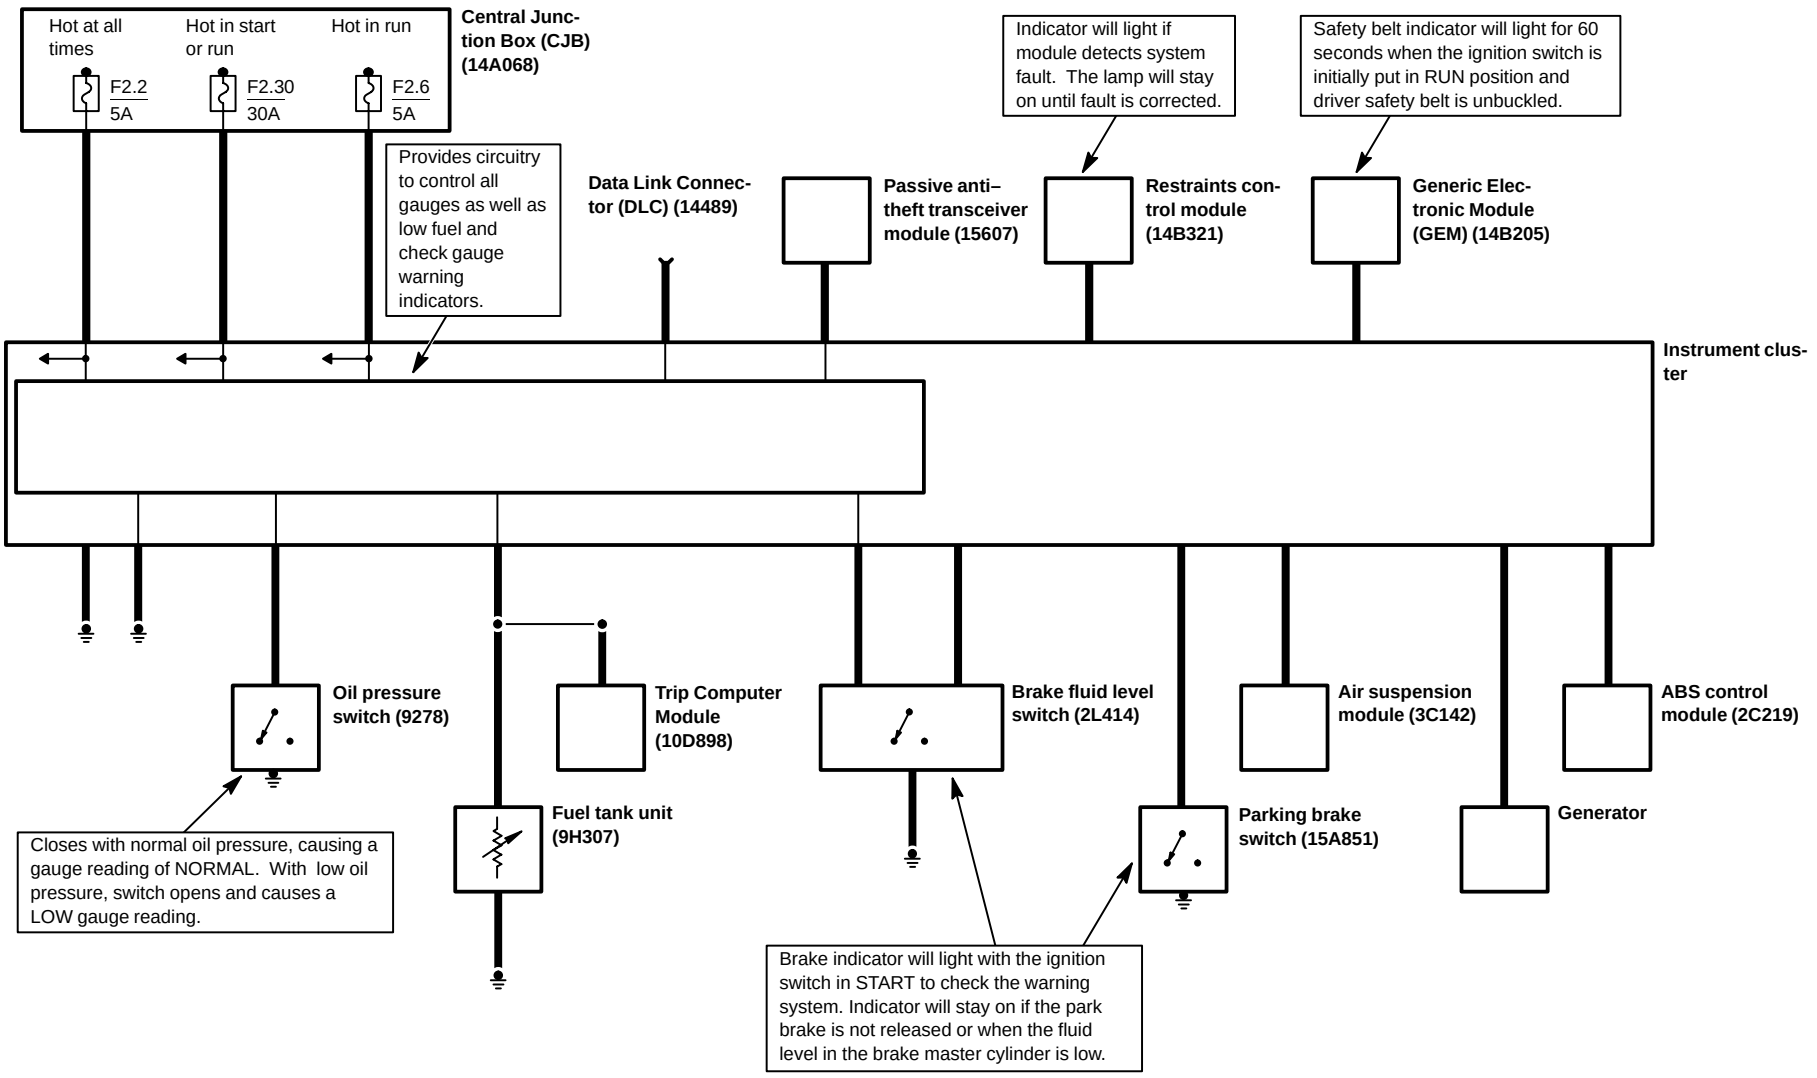
Hot at all times
Hot in start or run
Hot in run
F2.2
5A
F2.30
30A
F2.6
5A
Central Junction Box (CJB) (14A068)
Provides circuitry to control all gauges as well as low fuel and check gauge warning indicators.
Data Link Connector (DLC) (14489)
Passive anti–theft transceiver module (15607)
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
Restraints control module (14B321)
Safety belt indicator will light for 60 seconds when the ignition switch is initially put in RUN position and driver safety belt is unbuckled.
Generic Electronic Module (GEM) (14B205)
Instrument cluster
Oil pressure switch (9278)
Closes with normal oil pressure, causing a gauge reading of NORMAL. With low oil pressure, switch opens and causes a LOW gauge reading.
Trip Computer Module (10D898)
Fuel tank unit (9H307)
Brake fluid level switch (2L414)
Brake indicator will light with the ignition switch in START to check the warning system. Indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
Air suspension module (3C142)
Parking brake switch (15A851)
ABS control module (2C219)
Generator