C2980

14401

N476
Valet lockout switch

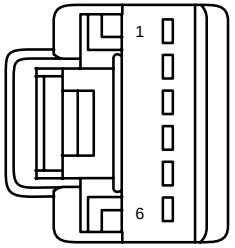

F06179

Pin	Circuit	Circuit function
1	31S-AA84 (BK/GN)	Ground, Switched
2	–	not used
3	–	not used
4	8-AA30 (WH)	Sensor signal
5	–	not used
6	–	not used

C4069

19B113

Y217
Subwoofer, right

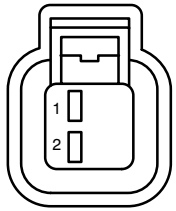

F02069

Pin	Circuit	Circuit function
1	8-MD21 (WH/BU)	Subwoofer, right, Audio signal positive
2	10-MD21 (GY/VT)	Subwoofer, right, Audio signal negative

C4142

14A005

N639
Lock cylinder switch, luggage compartment

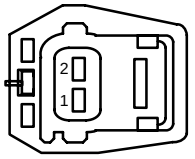

F02055

Pin	Circuit	Circuit function
1	31-GL27 (BK/OG)	Ground
2	8-GL27 (WH/BU)	Sensor signal

C4068

19B113

Y216
Subwoofer, left

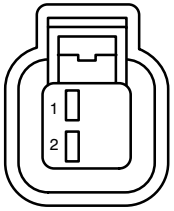

F02069

Pin	Circuit	Circuit function
1	8-MD22 (WH/GN)	Subwoofer, left, Audio signal positive
2	10-MD22 (GY/OG)	Subwoofer, left, Audio signal negative