## C366

### 14B122

M231
Driver seat lumbar compressor motor (65500)

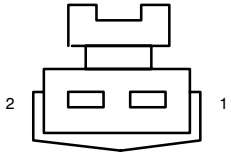


F02439

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1094 (PK) | Power lumbar switch, left, to, Front seat lumbar compressor motor |
| 2 | 1097 (BN) | Power lumbar switch, left, to, Front seat lumbar compressor motor |

## C367

### 14K155

A154
Side air bag module, right

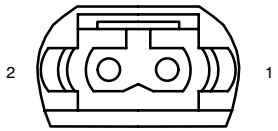


F02100

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1257 (WH/LB) | Air bag – driver side impact – to module – feed |
| 2 | 1258 (RD) | Air bag – driver side impact – to module – return |

## C372

### 14A699

B222
Driver memory seat horizontal sensor

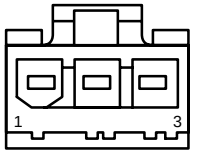


F03111

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 447 (OG/RD) | Sensor, return, from, Driver seat module (14C718) |
| 2 | 442 (LG/OG) | Seat position sensor – horizontal sense |
| 3 | 446 (OG/WH) | Sensor, feed, from, Driver seat module (14C718) |

## C373

### 14A699

B224
Driver memory seat rear height sensor

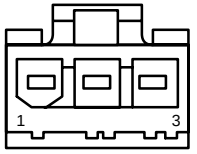


F03111

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 447 (OG/RD) | Sensor, return, from, Driver seat module (14C718) |
| 2 | 444 (LG/BK) | Driver seat module (14C718), to, Power seat motor assembly, left |
| 3 | 446 (OG/WH) | Sensor, feed, from, Driver seat module (14C718) |

## C380

### 14B079

O40
Power point, console (19N236)

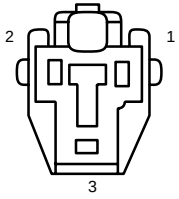


F03163

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 131 (VT/OG) | Cigar lighter, feed |
| 2 | – | not used |
| 3 | 57 (BK) | Ground |