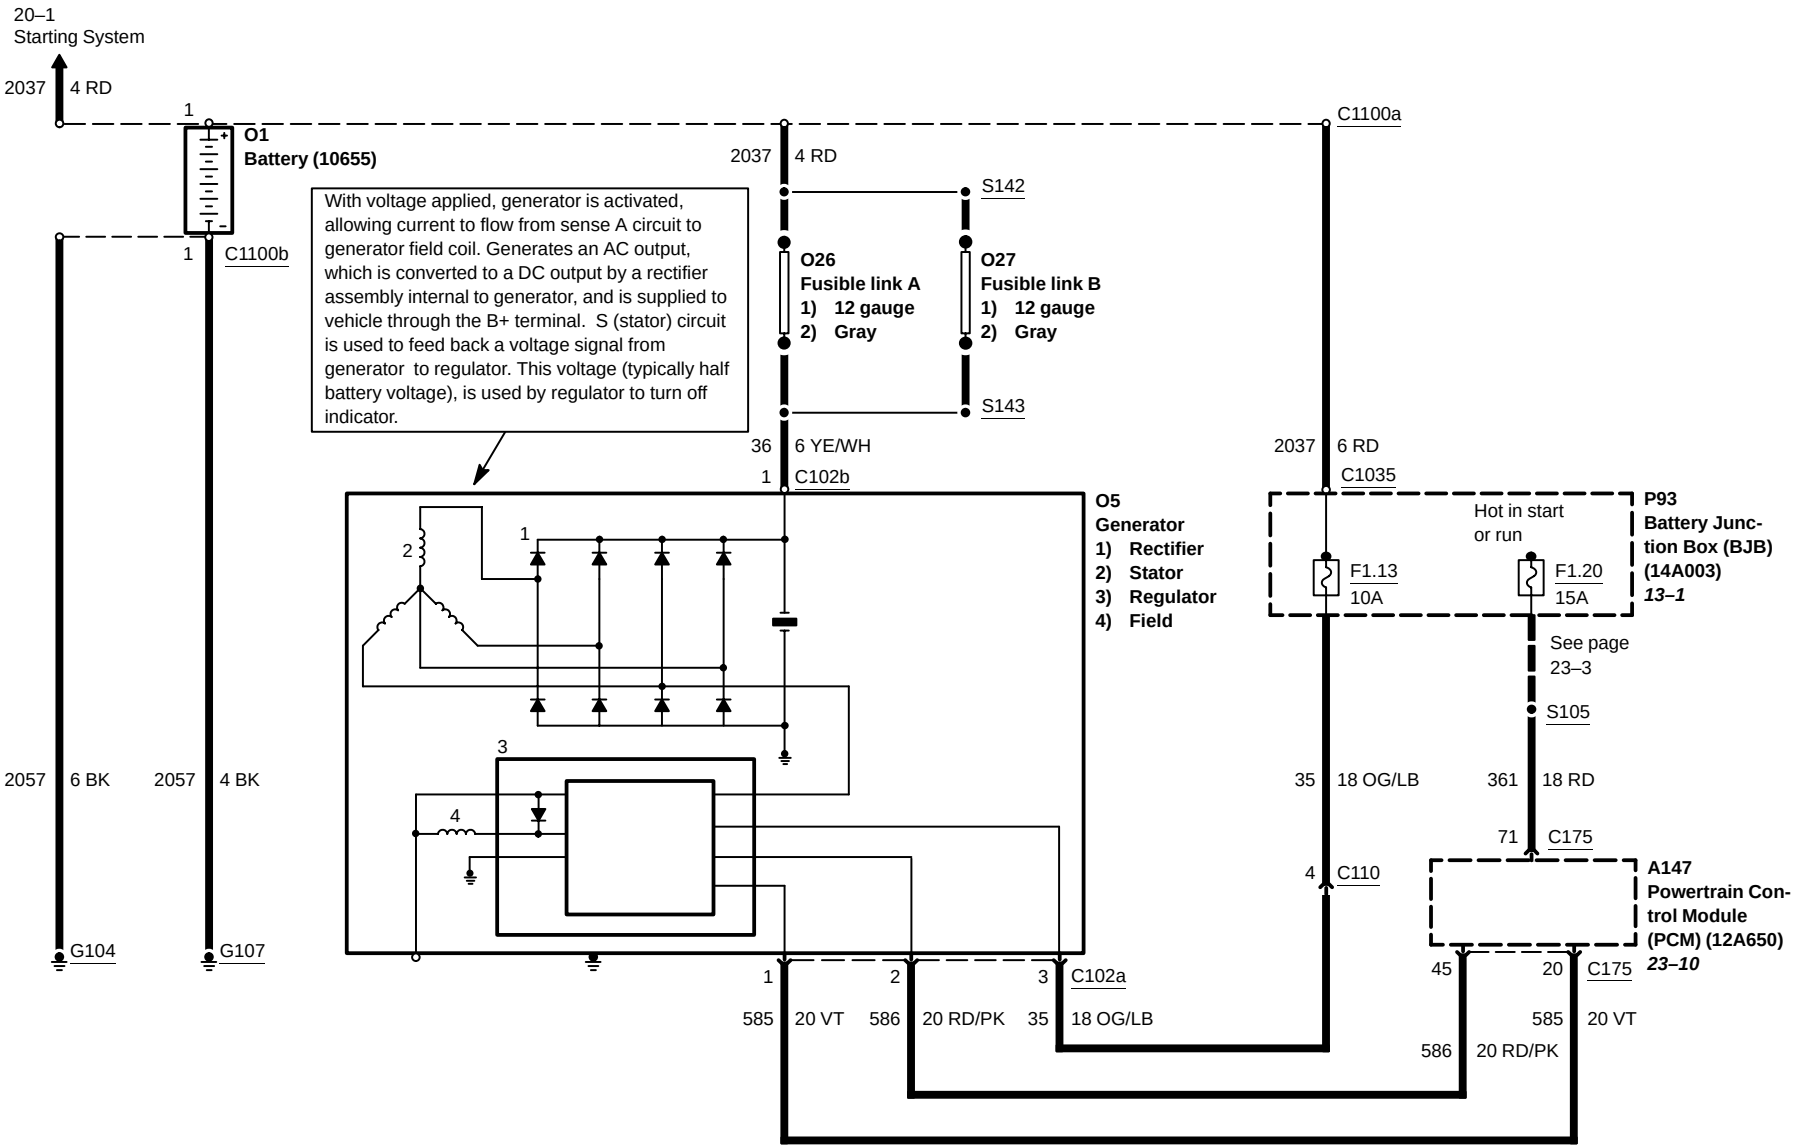
20–1
Starting System
2037 4 RD
1
O1
Battery (10655)
1 C1100b
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
2037 4 RD
C1100a
S142
O26
Fusible link A
1) 12 gauge
2) Gray
O27
Fusible link B
1) 12 gauge
2) Gray
S143
36 6 YE/WH
1 C102b
2037 6 RD
C1035
O5
Generator
1) Rectifier
2) Stator
3) Regulator
4) Field
Hot in start or run
F1.13
10A
F1.20
15A
P93
Battery Junction Box (BJB)
(14A003)
13–1
See page 23–3
S105
2057 6 BK
2057 4 BK
35 18 OG/LB
361 18 RD
71 C175
4 C110
A147
Powertrain Control Module
(PCM) (12A650)
23–10
G104
G107
1 2 3 C102a
585 20 VT
586 20 RD/PK
35 18 OG/LB
45 20 C175
585 20 VT
586 20 RD/PK