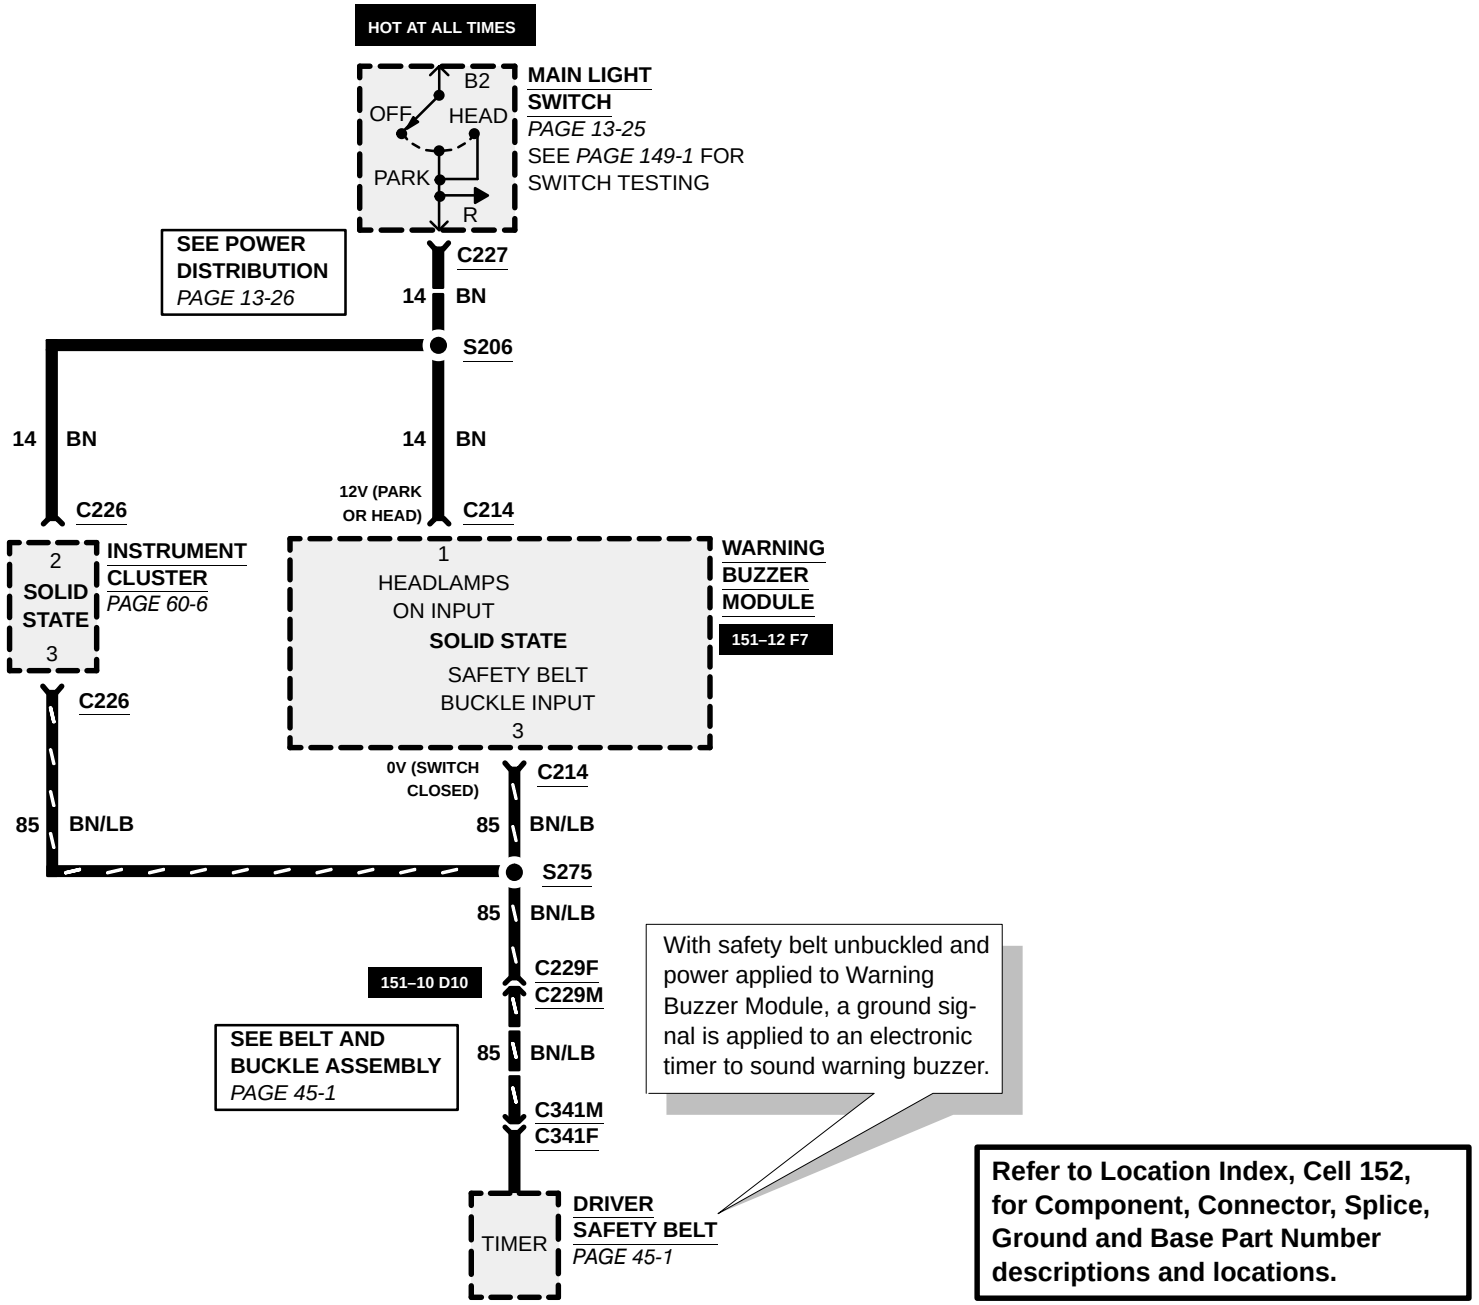
HOT AT ALL TIMES
B2
OFF
HEAD
PARK
R
MAIN LIGHT SWITCH
PAGE 13-25
SEE PAGE 149-1 FOR SWITCH TESTING
SEE POWER DISTRIBUTION
PAGE 13-26
C227
14 BN
S206
14 BN
14 BN
12V (PARK OR HEAD)
C226
C214
2
SOLID STATE
3
INSTRUMENT CLUSTER
PAGE 60-6
1
HEADLAMPS ON INPUT
SOLID STATE
SAFETY BELT BUCKLE INPUT
3
WARNING BUZZER MODULE
151–12 F7
C226
0V (SWITCH CLOSED)
C214
85 BN/LB
85 BN/LB
S275
85 BN/LB
151–10 D10
C229F
C229M
SEE BELT AND BUCKLE ASSEMBLY
PAGE 45-1
85 BN/LB
C341M
C341F
TIMER
DRIVER SAFETY BELT
PAGE 45-1
With safety belt unbuckled and power applied to Warning Buzzer Module, a ground signal is applied to an electronic timer to sound warning buzzer.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.