C505 (GY)

14631

Door lock switch, driver side (14028)

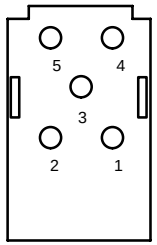

F05063

Pin	Circuit	Circuit function
1	120 (PK/LG)	Door unlock, control
2	–	not used
3	57 (BK)	Ground
4	–	not used
5	119 (PK/YE)	Door lock, control

C522 (GY)

14631

Exterior rear view mirror, left

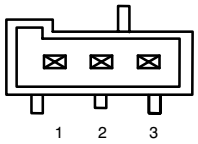

F03157

Pin	Circuit	Circuit function
1	540 (RD)	Right/Left mirror movement
2	541 (DB)	Up/Down mirror movement
3	945 (YE/BK)	Mirror motor, feed

C523 (BK)

19A044/14631

Speaker, left front (18808)

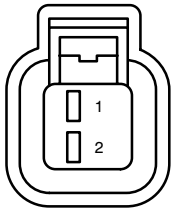

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524 (GY)

14631

Power window motor, driver side front (23395)



F02073

Pin	Circuit	Circuit function
1	992 (WH/BK)	Master window adjust switch (14529), feed, Up
2	903 (RD)	Window motor, feed, Down

C525 (GY)

14631

Door lock actuator, left front

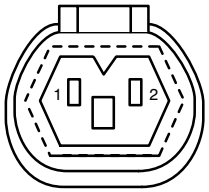

F02227

Pin	Circuit	Circuit function
1	163 (RD/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output