C321

14B084

N275
Seat heater switch, passenger side

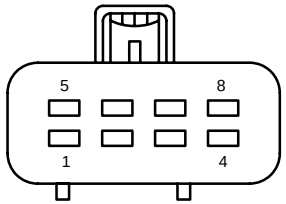

F08060

Pin	Circuit	Circuit function
1	295 (LB/PK)	Voltage in Run (overload protected)
2	581 (RD)	Seat heater switch, driver side, to, Heated seat module, driver side front
3	–	not used
4	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, passenger side front
5	–	not used
6	295 (LB/PK)	Voltage in Run (overload protected)
7	–	not used
8	–	not used

C323

14A005

N317
Safety belt buckle switch (10B924)

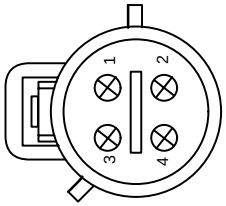

F04269

Pin	Circuit	Circuit function
1	–	not used
2	85 (BN/LB)	Safety belt buckle switch (10B924), input
3	57 (BK)	Ground
4	–	not used

C329

14B084

A223
Heated seat module, passenger side front

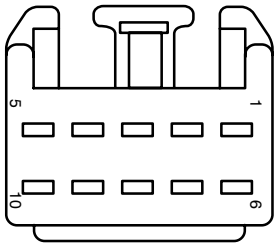

F10063

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
2	581 (RD)	Seat heater switch, driver side, to, Heated seat module, driver side front
3	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat cushion heater, passenger side, heater, return
6	295 (LB/PK)	Voltage in Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, driver side, Sensor,feed
8	57 (BK)	Ground
9	–	not used
10	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, passenger side front

C334

14B084

N30
Seat cushion heater, right front

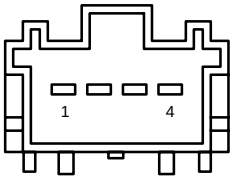

F04139

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1066 (GY/LB)	Seat back heater, driver side, feed