C115

12B637

P70
Coil On Plug (COP)
5 (12029)

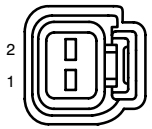

F02183

Pin	Circuit	Circuit function
1	91S-RR9 (BN/YE)	Ground, Switched
2	15-RR9 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)

C116

12B637

P71
Coil On Plug (COP)
6 (12029)

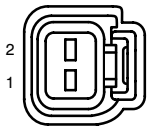

F02183

Pin	Circuit	Circuit function
1	91S-RR10 (BN/WH)	Ground, Switched
2	15-RR10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)

C117

12B637

P72
Coil On Plug (COP)
7 (12029)

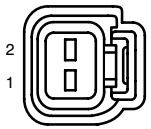

F02183

Pin	Circuit	Circuit function
1	91S-RR11 (BN)	Ground, Switched
2	15-RR11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C118

12B637

P73
Coil On Plug (COP)
8 (12029)

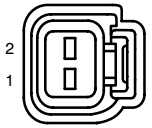

F02183

Pin	Circuit	Circuit function
1	91S-RR12 (BN/RD)	Ground, Switched
2	15-RR12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C119

12B637

Y218
Inlet air control
valve solenoid

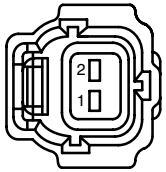

F02091

1	29-RL19 (OG/YE) 15S-RL19 (GN/YE)	Ground, Switched
2	91S-RL19 (BN)	Voltage, ignition switch in Start or Run (not overload protected)