C703 (BK)

14683

Power window motor, left rear (23394)

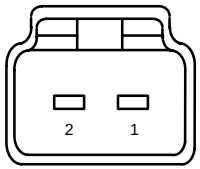

F02381

Pin	Circuit	Circuit function
1	881 (BN)	Window switch to Window motor, right rear
2	882 (BN/YE)	Window switch to Window motor, right rear

C704 (GY)

14A488

Door lock actuator, left rear (218A43)



F02383

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock/unlock relay, switched output, Lock
2	118 (PK/OG)	Door lock/unlock relay, switched output, Unlock

C715 (BK)

14A488

Door ajar switch, driver side rear (14018)



F02221

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	759 (LG/YE)	Door ajar switch, left rear, signal

C800 (GY)

14683



F02385

14A488



F02387

(1) 882 (BN/YE)
(2) 881 (BN)

C801 (GY)

14A488

Window adjust switch, right rear (14A412)

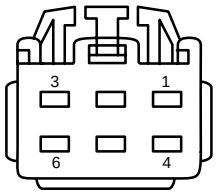

F06213

Pin	Circuit	Circuit function
1	320 (RD/BK)	Window switch, feed, right rear, Down
2	882 (BN/YE)	Window switch to Window motor, right rear
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	881 (BN)	Window switch to Window motor, right rear
6	319 (YE/BK)	Window switch, feed, right rear, Up