C1240c

14B112

Y247
Air intake heater solenoid 1



F01085

Pin	Circuit	Circuit function
1	414 (OG/RD)	Ignition coil assembly, to, Manifold intake air heater relay

C1241a

14B112

Y248
Air intake heater solenoid 2



F01085

Pin	Circuit	Circuit function
1	415 (LG/OG)	driver side impact, to, Manifold intake air heater relay

C1241b

14B112

Y248
Air intake heater solenoid 2



F01085

Pin	Circuit	Circuit function
1	37 (YE)	Voltage supplied at all times (overload protected)

C1243

12A581

N610
Air park brake switch

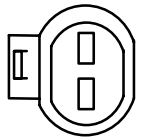

F02483

Pin	Circuit	Circuit function
1	338 (TN/RD)	Parking brake switch (15A851)
2	57 (BK)	Ground

C1248

14305

E271
Wait to start indicator

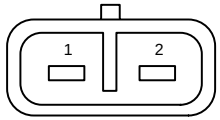

F02305

Pin	Circuit	Circuit function
A	361 (RD)	Voltage supplied in Start and Run (overload protected)
B	48	Shield

C1250

12A581

K132
Stop lamp relay

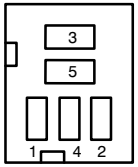

F05109

Pin	Circuit	Circuit function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground
3	907 (YE/WH)	Power, Battery Power
4	–	not used
5	123 (LG/OG)	Turn lamps, feed, left rear