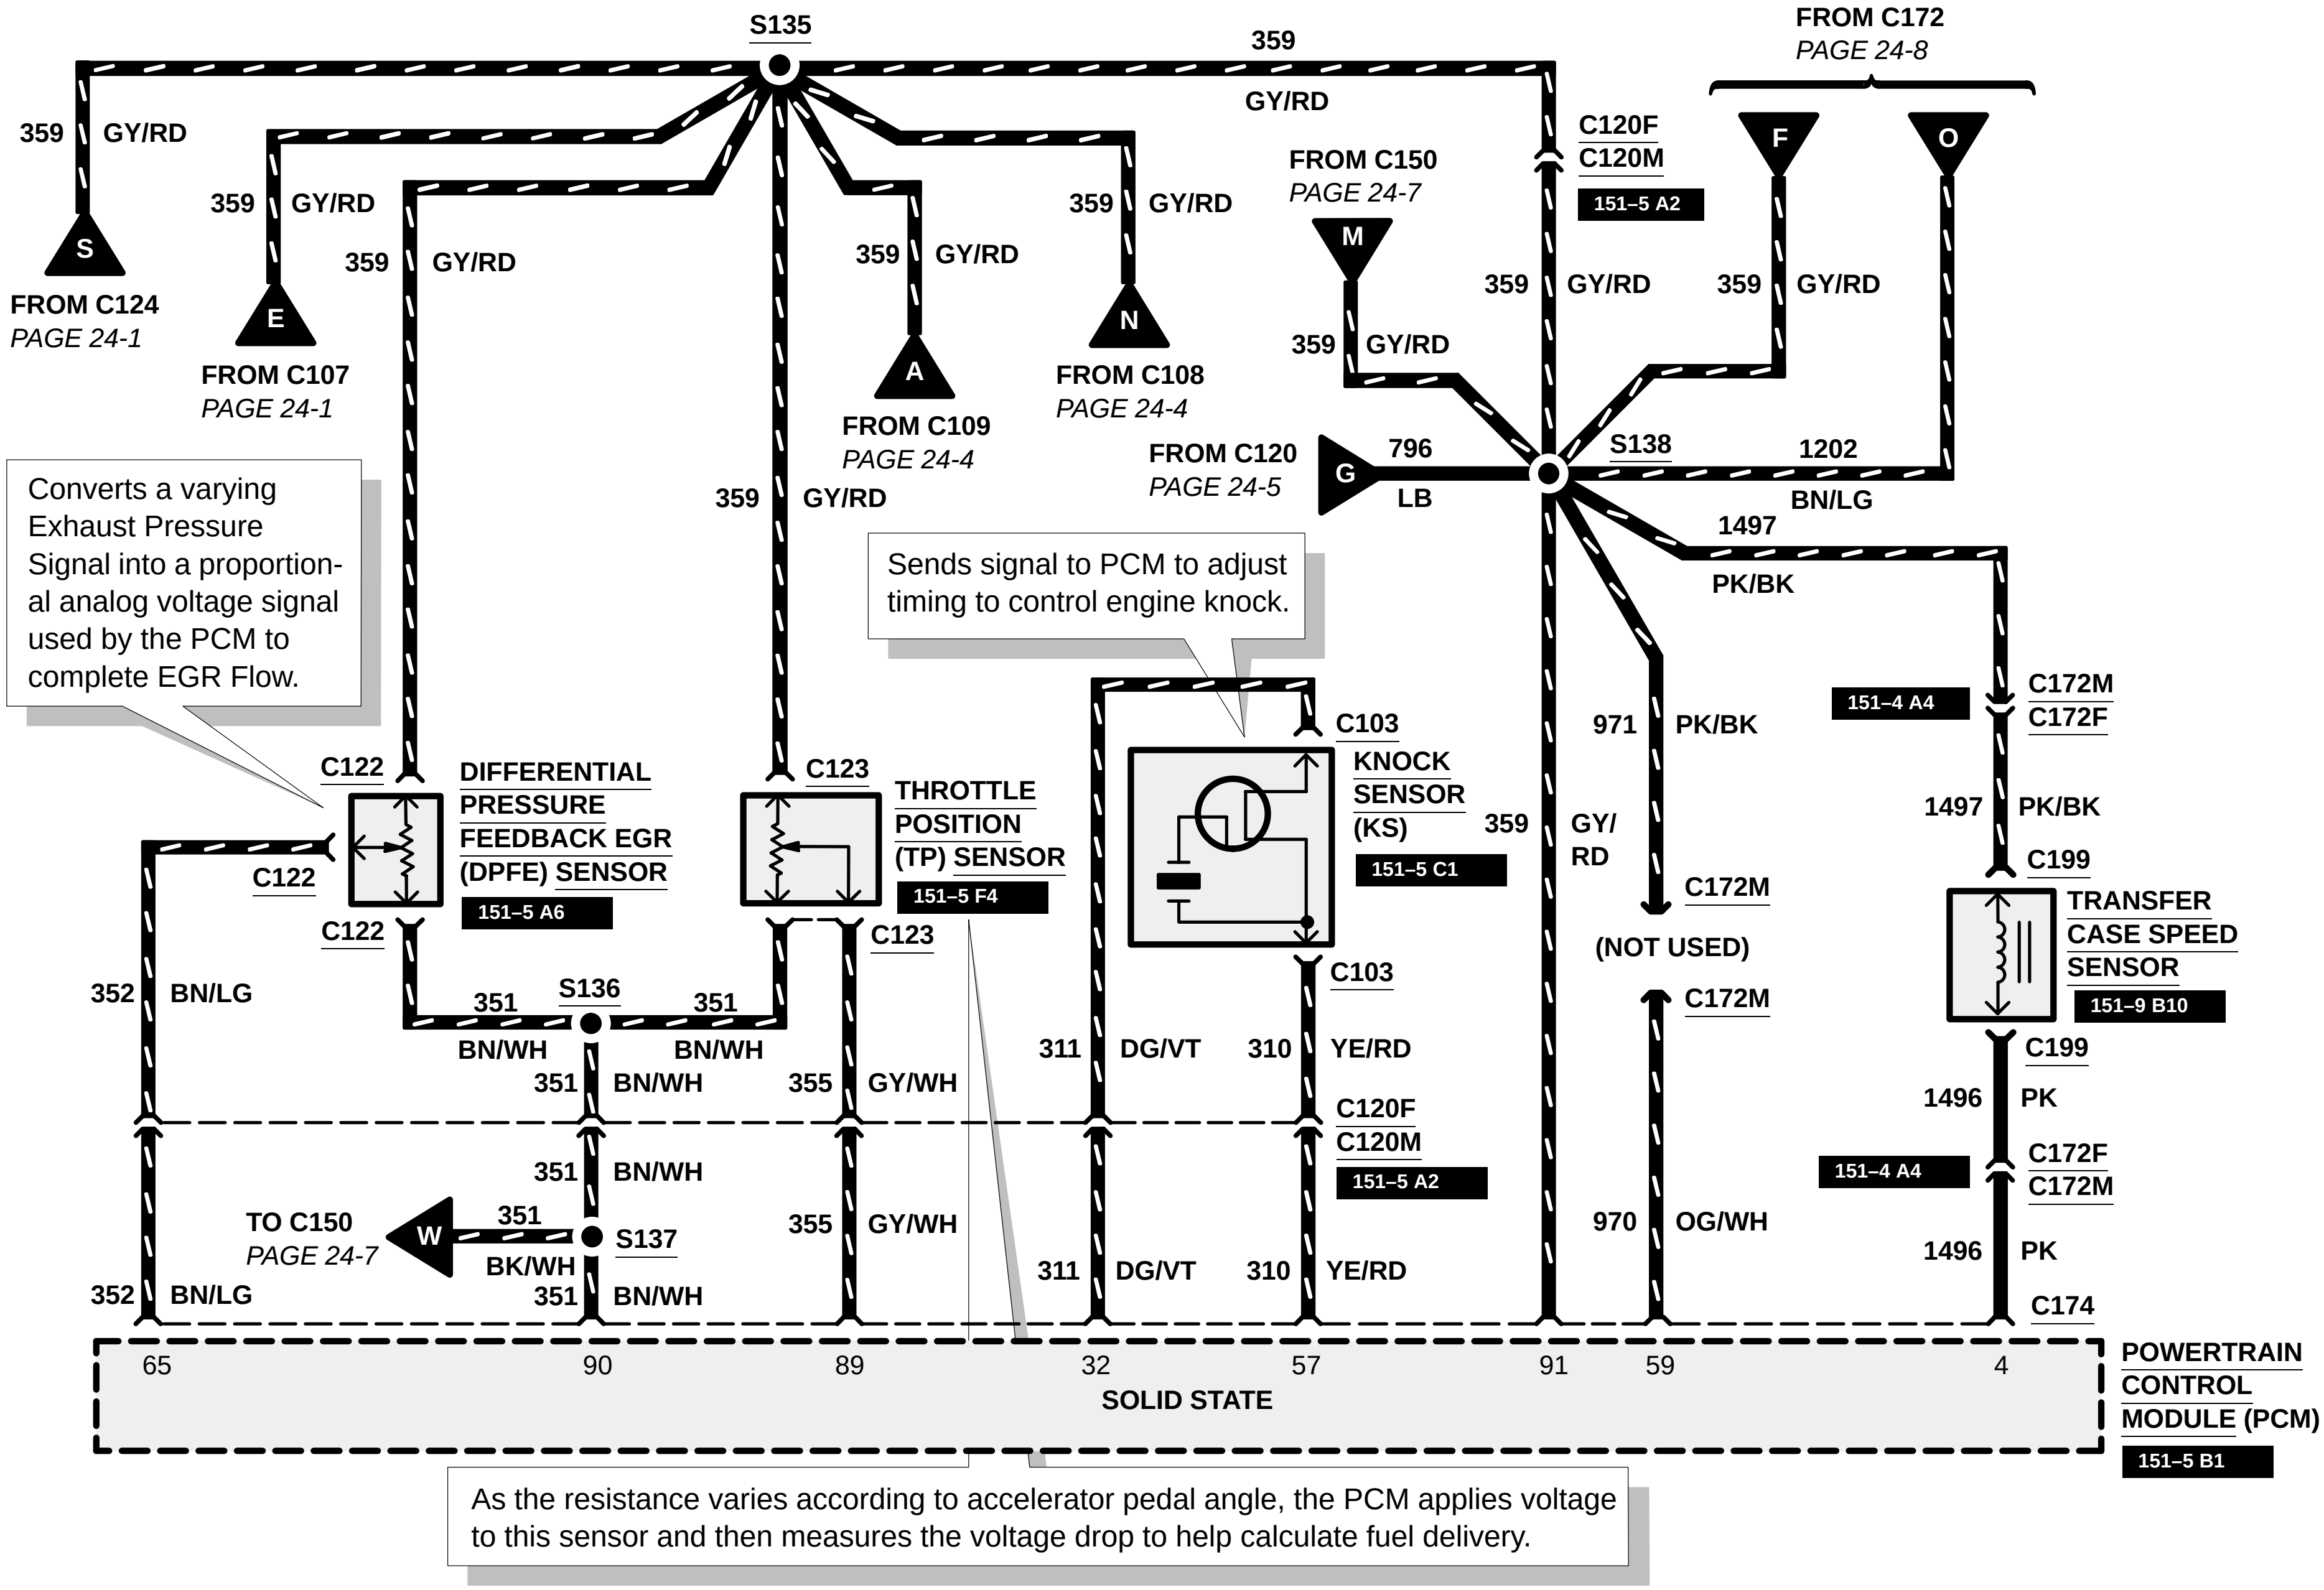

Converts a varying Exhaust Pressure Signal into a proportional analog voltage signal used by the PCM to complete EGR Flow.

Sends signal to PCM to adjust timing to control engine knock.

As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.

S135
359
GY/RD
359 GY/RD
S
FROM C124
PAGE 24-1
359 GY/RD
E
FROM C107
PAGE 24-1
359 GY/RD
359 GY/RD
A
FROM C109
PAGE 24-4
359 GY/RD
N
FROM C108
PAGE 24-4
359 GY/RD
FROM C150
PAGE 24-7
M
359 GY/RD
C120F
C120M
151–5 A2
FROM C172
PAGE 24-8
F
O
359 GY/RD
359 GY/RD
FROM C120
PAGE 24-5
G
796
LB
S138
1202
BN/LG
1497
PK/BK
971 PK/BK
C172M
(NOT USED)
C172M
970 OG/WH
151–4 A4
C172M
C172F
1497 PK/BK
C199
TRANSFER CASE SPEED SENSOR
151–9 B10
C199
1496 PK
151–4 A4
C172F
C172M
1496 PK
C174
C122
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–5 A6
C122
C122
352 BN/LG
351
S136
351
BN/WH
BN/WH
351 BN/WH
351 BN/WH
TO C150
PAGE 24-7
W
351
S137
BK/WH
351 BN/WH
352 BN/LG
C123
THROTTLE POSITION (TP) SENSOR
151–5 F4
C123
355 GY/WH
355 GY/WH
C103
KNOCK SENSOR (KS)
151–5 C1
359 GY/RD
C103
311 DG/VT
310 YE/RD
C120F
C120M
151–5 A2
311 DG/VT
310 YE/RD
65
90
89
32
57
91
59
4
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–5 B1