C376

14B719

B221
Driver memory backrest sensor

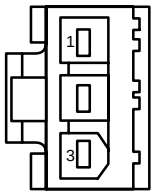

F03111

Pin	Circuit	Circuit Function
1	9-AH30 (BN/BU)	Sensor signal return (reference/ ground)
2	8-AH30 (WH/BU)	Sensor signal
3	7-AH30 (YE/BU)	Voltage D.C. supplied at all times (sensor)

C380

14A005

O40
Power point, console

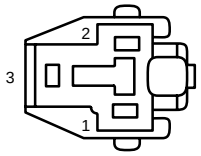

F03163

Pin	Circuit	Circuit Function
1	30-HA7 (RD/BU)	Voltage supplied at at all times (not overload protected)
2	–	not used
3	31-HA7 (BK/BU)	Ground

C381

14B719

N317
Safety belt buckle switch



F02073

Pin	Circuit	Circuit Function
1	8-GE52 (WH/BK)	Sensor signal
2	31-GE52 (BK)	Ground

C382

14B179

M228
Driver seat rear height motor



F02071

Pin	Circuit	Circuit Function
1	32-AH41 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	33-AH41 (YE/VT)	Switched between: Battery voltage, Ground or Open

C383

14B719

B224
Driver memory seat rear height sensor

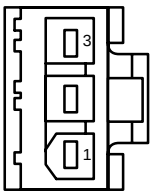

F03111

Pin	Circuit	Circuit Function
1	7-AH25 (YE/GN)	Voltage D.C. supplied at all times (sensor)
2	8-AH25 (WH/GN)	Sensor signal
3	9-AH25 (BN/GN)	Sensor signal return (reference/ ground)