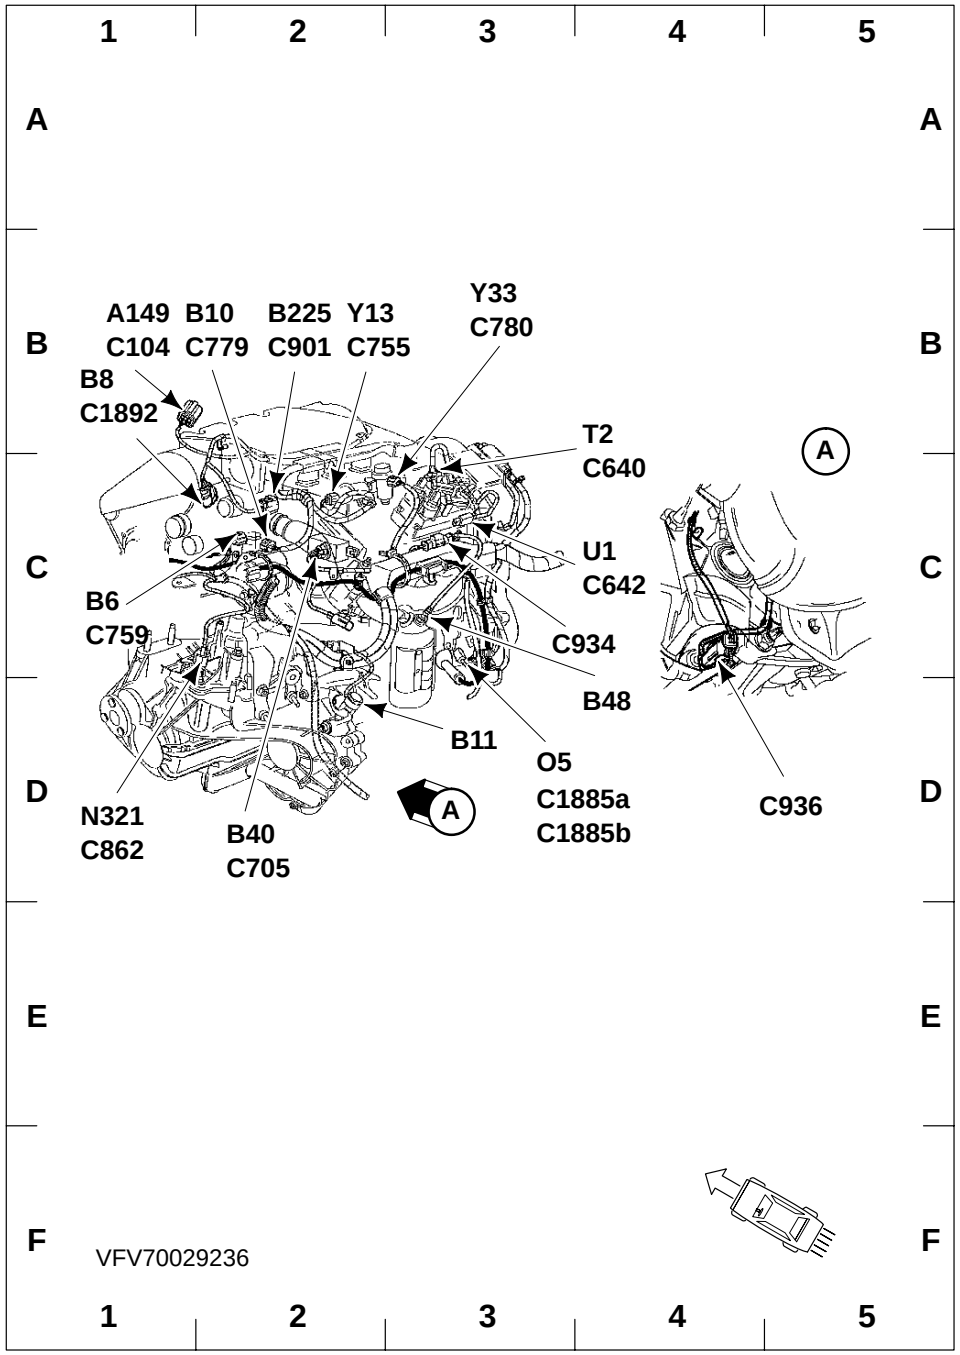

On engine, rear / LH side – Duratec–VE, manual transmission

A149 Inlet Manifold Runner Control (IMRC) module . . . . . B 1
B6 . . . Coolant temperature sensor . . . . . C 1
B8 . . . Throttle Position Sensor (TPS) (9B989) . . . . . B 1
B10 . . Engine Coolant Temperature (ECT) sensor (12A648) . . . . B 2
B11 . . Vehicle Speed Sensor (VSS) . . . . . D 3
B40 . . Exhaust Pressure Transducer (EPT) sensor . . . . . D 2
B48 . . Heated Oxygen Sensor (HO2S) #11 (9G444) . . . . . D 4
B225 . Fuel rail pressure transducer sensor . . . . . B 2
C104 . . . . . B 1
C640 . . . . . C 4
C642 . . . . . C 4
C705 . . . . . D 2
C755 . . . . . B 2
C759 . . . . . C 1
C779 . . . . . B 2
C780 . . . . . B 3
C862 . . . . . D 1
C901 . . . . . B 2
C934 . . . . . C 4
C936 . . . . . D 5
C1885a . . . . . D 4
C1885b . . . . . D 4
C1892 . . . . . B 1
N321 Park/neutral position (PNP) switch . . . . . D 1
O5 . . Generator . . . . . D 3
T2 . . . Ignition transformer . . . . . B 4
U1 . . Ignition transformer capacitor . . . . . C 4
Y13 . Idle speed control valve . . . . . B 2
Y33 . Electr. Vacuum Regulator (EVR) solenoid valve . . . . . B 3