-6

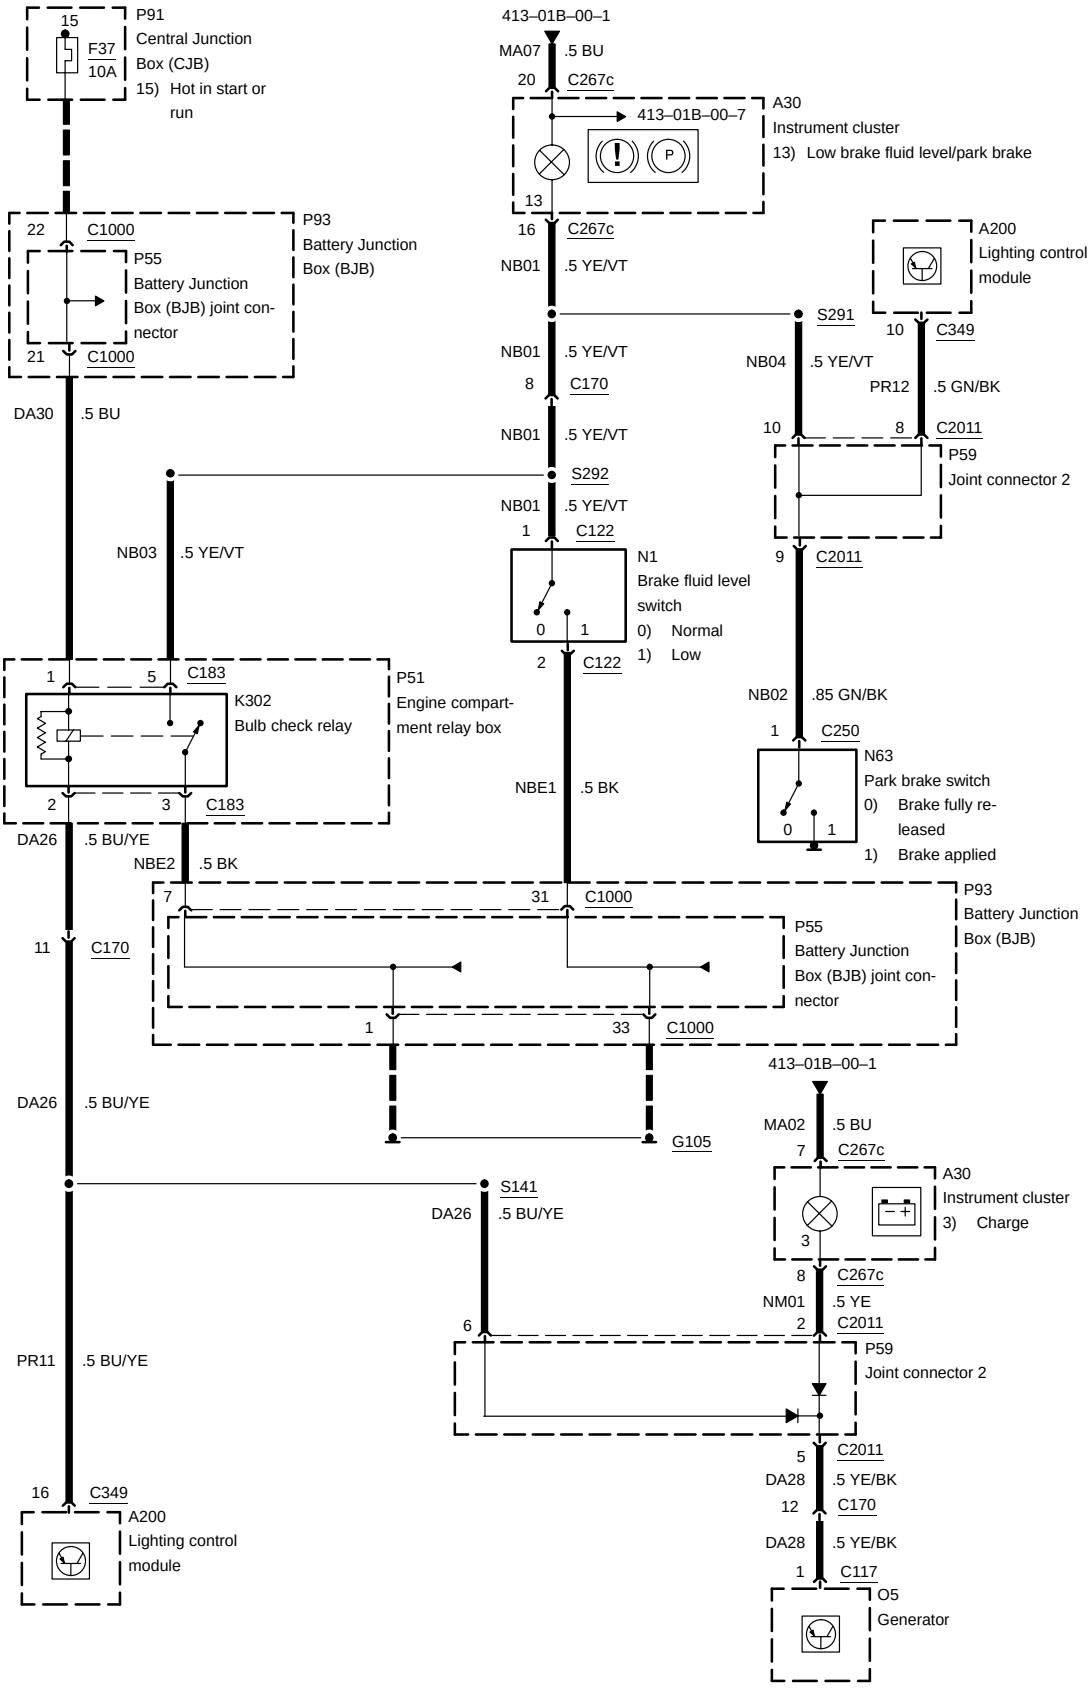
15
F37
10A
P91
Central Junction
Box (CJB)
15) Hot in start or run
22
C1000
P55
Battery Junction
Box (BJB) joint connector
21
C1000
P93
Battery Junction
Box (BJB)
DA30 .5 BU
NB03 .5 YE/VT
1
5
C183
K302
Bulb check relay
2
3
C183
P51
Engine compartment relay box
DA26 .5 BU/YE
NBE2 .5 BK
11
C170
DA26 .5 BU/YE
PR11 .5 BU/YE
16
C349
A200
Lighting control module
413–01B–00–1
MA07 .5 BU
20
C267c
413–01B–00–7
A30
Instrument cluster
13) Low brake fluid level/park brake
13
16
C267c
NB01 .5 YE/VT
NB01 .5 YE/VT
8
C170
NB01 .5 YE/VT
S292
NB01 .5 YE/VT
1
C122
N1
Brake fluid level switch
0) Normal
1) Low
0
1
2
C122
NBE1 .5 BK
7
31
C1000
P55
Battery Junction
Box (BJB) joint connector
1
33
C1000
P93
Battery Junction
Box (BJB)
G105
S141
DA26 .5 BU/YE
6
NB04 .5 YE/VT
S291
10
C349
A200
Lighting control module
PR12 .5 GN/BK
10
8
C2011
P59
Joint connector 2
9
C2011
NB02 .85 GN/BK
1
C250
N63
Park brake switch
0) Brake fully released
1) Brake applied
0
1
413–01B–00–1
MA02 .5 BU
7
C267c
A30
Instrument cluster
3) Charge
3
8
C267c
NM01 .5 YE
2
C2011
P59
Joint connector 2
5
C2011
DA28 .5 YE/BK
12
C170
DA28 .5 YE/BK
1
C117
O5
Generator