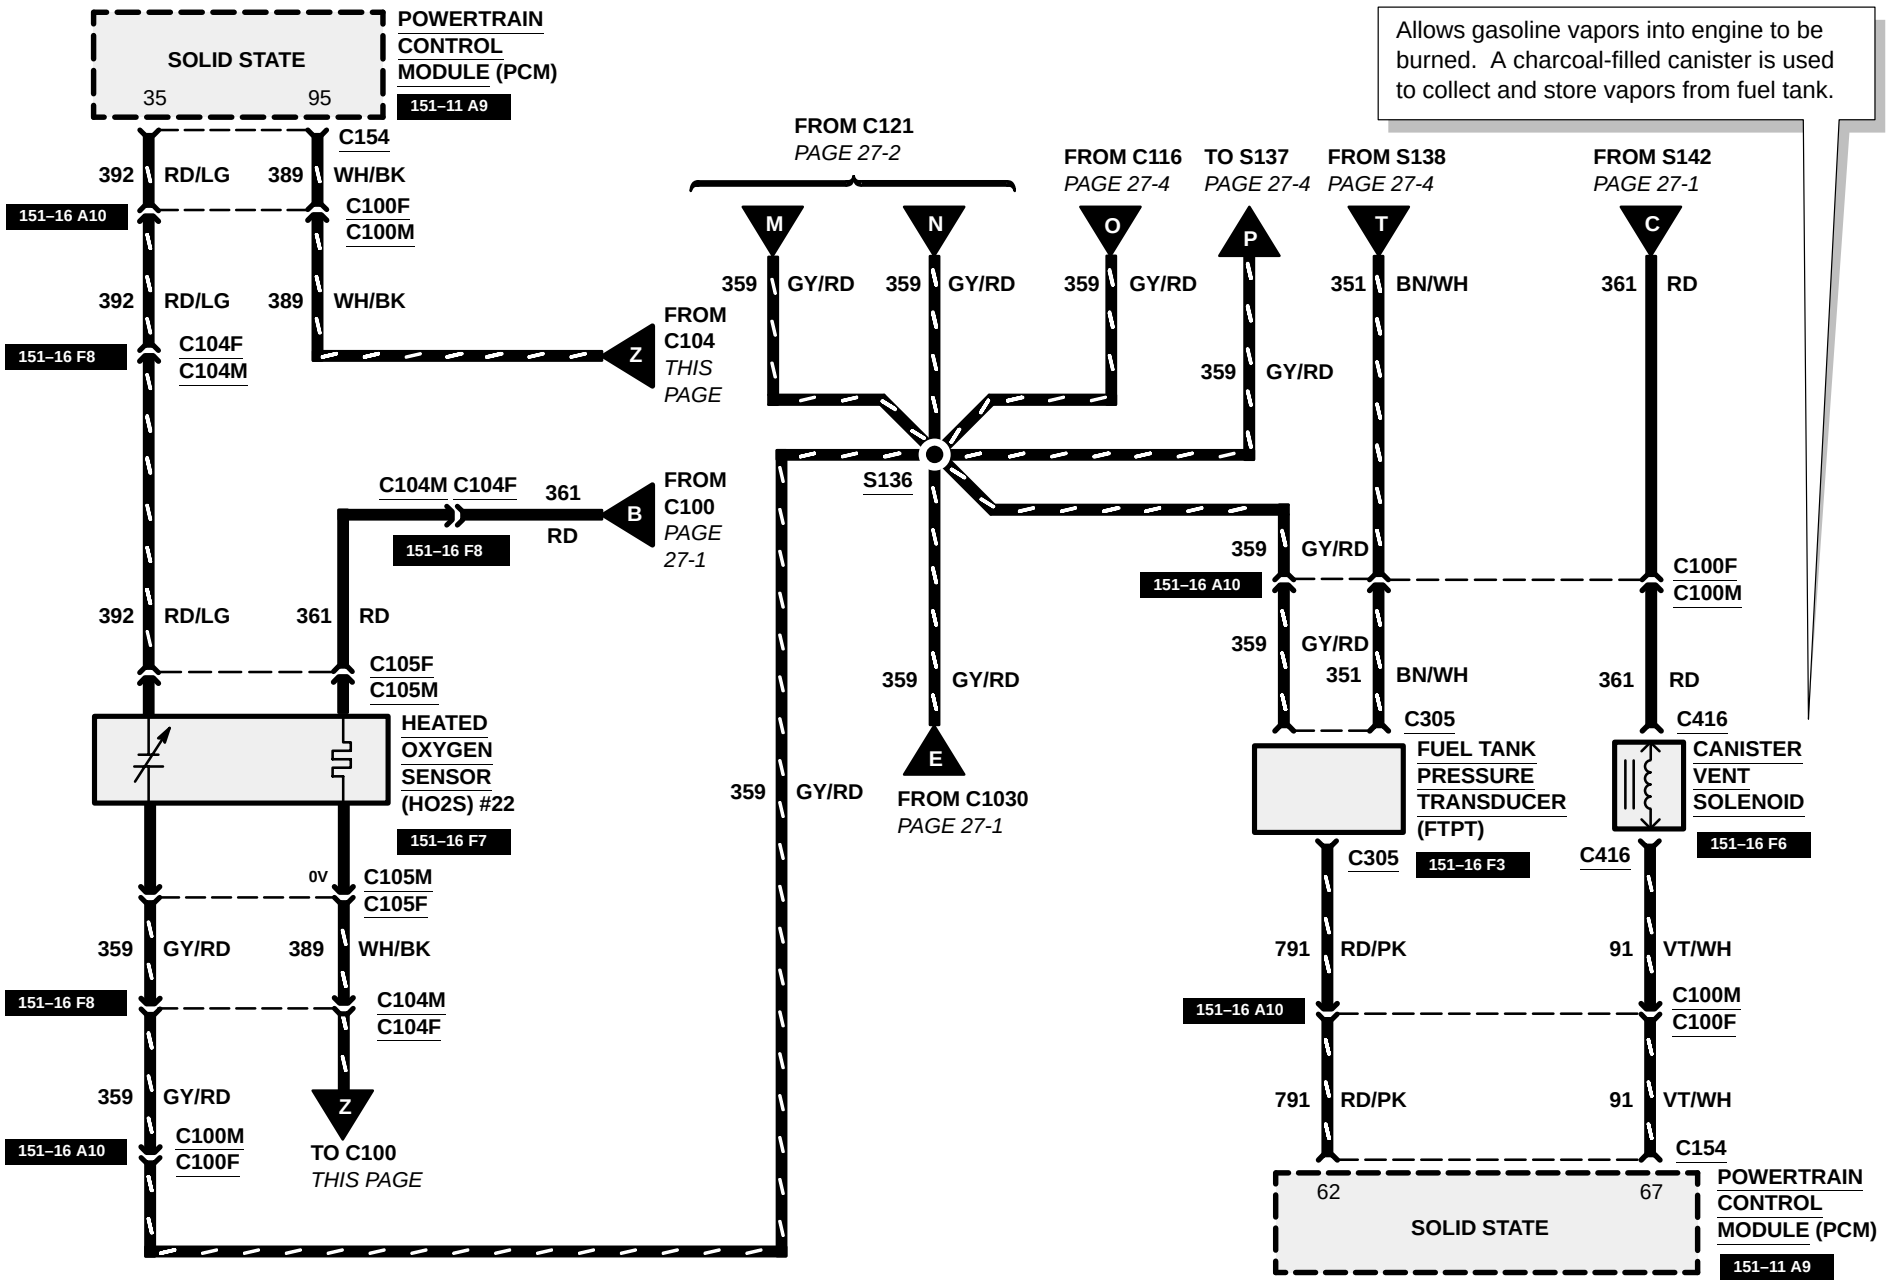
Allows gasoline vapors into engine to be burned. A charcoal-filled canister is used to collect and store vapors from fuel tank.
SOLID STATE
35
95
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
392 RD/LG
389 WH/BK
151–16 A10
C100F
C100M
392 RD/LG
389 WH/BK
151–16 F8
C104F
C104M
FROM C104 THIS PAGE
C104M C104F
361 RD
151–16 F8
FROM C100 PAGE 27-1
392 RD/LG
361 RD
C105F
C105M
HEATED OXYGEN SENSOR (HO2S) #22
151–16 F7
0V
C105M
C105F
359 GY/RD
389 WH/BK
151–16 F8
C104M
C104F
359 GY/RD
151–16 A10
C100M
C100F
TO C100 THIS PAGE
FROM C121 PAGE 27-2
FROM C116 PAGE 27-4
TO S137 PAGE 27-4
FROM S138 PAGE 27-4
FROM S142 PAGE 27-1
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
351 BN/WH
361 RD
S136
359 GY/RD
359 GY/RD
359 GY/RD
151–16 A10
C100F
C100M
359 GY/RD
351 BN/WH
361 RD
C305
FUEL TANK PRESSURE TRANSDUCER (FTPT)
151–16 F3
C416
CANISTER VENT SOLENOID
151–16 F6
FROM C1030 PAGE 27-1
C305
C416
791 RD/PK
91 VT/WH
151–16 A10
C100M
C100F
791 RD/PK
91 VT/WH
C154
62
67
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9